

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

Symptom	Suspected Area	See page
Steering wheel off-center	Steering wheel off-center	DI-863
VGRS stops and does not operate	1. Actuator temperature above -30°C 2. IG power source circuit 3. Skid control ECU 4. IG, PIG power supply system 5. Power steering system 6. Only when 1. to 5. are all normal and the problem is still occurring, replace the VGRS ECU.	– DI-845 – DI-847 SR-9 SR-12 SR-36
Steering angle is different from right to left	Check by following operation	DI-866
Abnormal noise and vibration is produced in the steering wheel	VGRS actuator	DI-867
VGRS warning light abnormal	1. VGRS warning light circuit 2. Tc and CG terminal circuit 3. VGRS ECU	DI-868 DI-870 –