


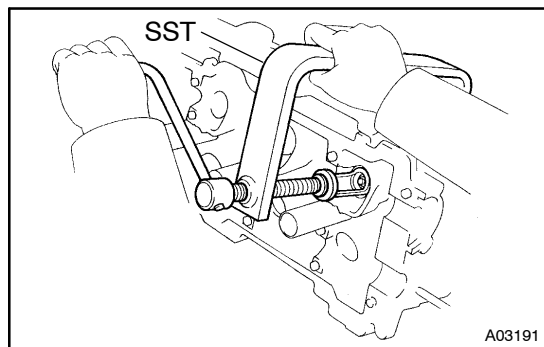

DISASSEMBLY

1. REMOVE VALVE LIFTERS AND SHIMS

HINT:

Arrange the valve lifters and the shims in correct order.

2. REMOVE VALVES

- (a) Using SST, compress the valve spring and remove the 2 keepers.

SST 09202-70020

- (b) Remove these parts:

- Spring retainer
- Valve spring
- Valve
- Spring seat

HINT:

Arrange the valves, the valve springs, the spring seats and the spring retainers in correct order.

- (c) Using needle-nose pliers, remove the oil seal.

