



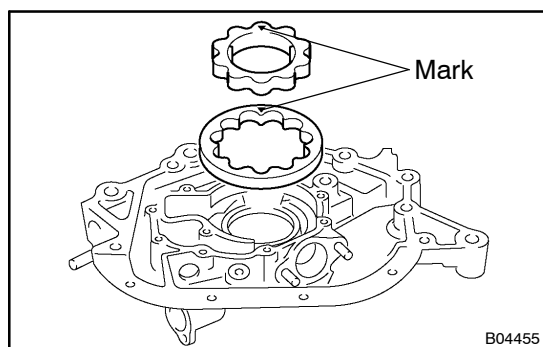


## REASSEMBLY

### 1. INSTALL DRIVE AND DRIVEN ROTORS

- (a) Place the drive and driven rotors into the pump body with the marks facing the oil pump body cover side.

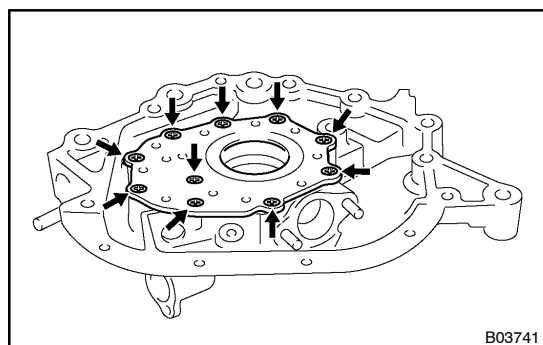

- (b) Install the oil pump body cover with the 10 screws.  
**Torque: 10 N·m (105 kgf·cm, 7 ft·lbf)**

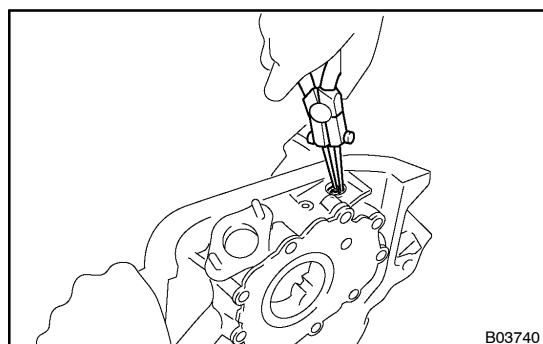

### 2. INSTALL RELIEF VALVE

- (a) Insert the relief valve, the spring and the retainer into the oil pump body hole.
- (b) Using snap ring pliers, install the snap ring.