


INSTALLATION

NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.**
- **Never reuse the side and curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.**
- **Never repair a sensor in order to reuse it.**

HINT:

For step 2 to 9, refer to page [BO-131](#).

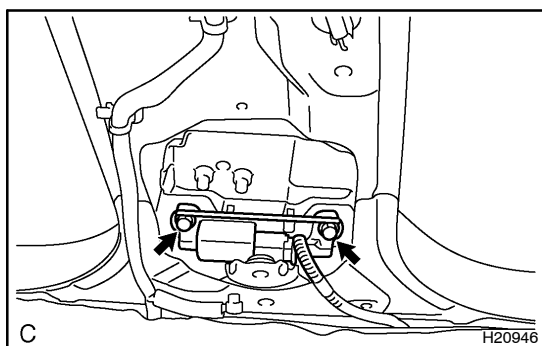

1. INSTALL SIDE AND CURTAIN SHIELD AIRBAG SENSOR

- (a) Install the side and curtain shield airbag sensor assembly with the 2 bolts.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

- (b) Connect the connector of the side and curtain shield airbag sensor assembly.

NOTICE:

- **Connection of the connector is done after the sensor assembly has been installed.**
- **Make sure that the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

2. INSTALL FRONT SEAT OUTER BELT

Torque:

Upper bolt: 8.0 N·m (81 kgf·cm, 71 in·lbf)

3. INSTALL CENTER PILLAR LOWER GARNISH

4. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP

5. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP

6. **INSTALL FRONT SEAT OUTER BELT FLOOR ANCHOR**
Torque: 42 N·m (428 kgf·cm, 31 ft·lbf)
7. **INSTALL LAP BELT OUTER ANCHOR COVER**
8. **INSTALL FRONT DOOR SCUFF PLATE**
9. **INSTALL REAR DOOR SCUFF PLATE**
10. **INSPECT SRS WARNING LIGHT (See page [DI-876](#))**