


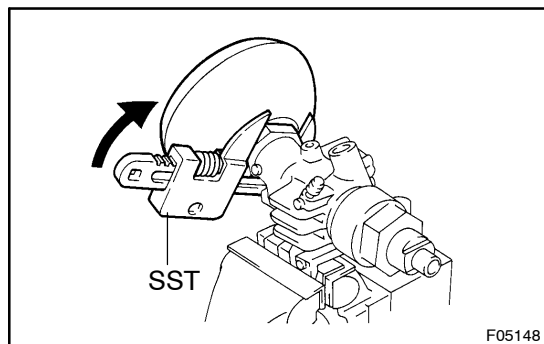

REPLACEMENT

1. REMOVE GAS CHAMBER

- (a) Place damping force control actuator in a vise.
- (b) Using SST, remove the gas chamber.
SST 09922-10010
- (c) Remove the O-ring and back up ring from the gas chamber.


2. INSTALL GAS CHAMBER

- (a) Install a new back up ring and O-ring to the gas chamber.

NOTICE:

Be careful not to damage the O-ring.

- (b) Coat the O-ring with suspension fluid AHC.

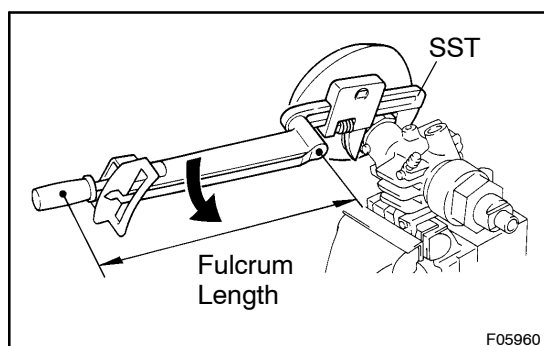

- (c) Using SST, install the gas chamber.

SST 09922-10010

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

HINT:

Use a torque wrench with a fulcrum length of 345 mm (13.58 in.).

NOTICE:

Use SST (09922-10010) in direction shown in the illustration.