


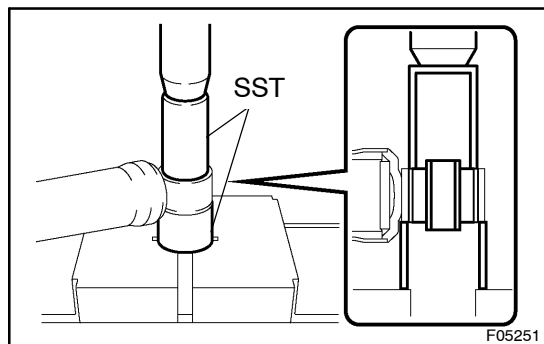


REPLACEMENT

1. REMOVE BUSHING

Using SST and a press, remove the bushing.

SST 09623-36010, 09710-28021 (09710-08031)

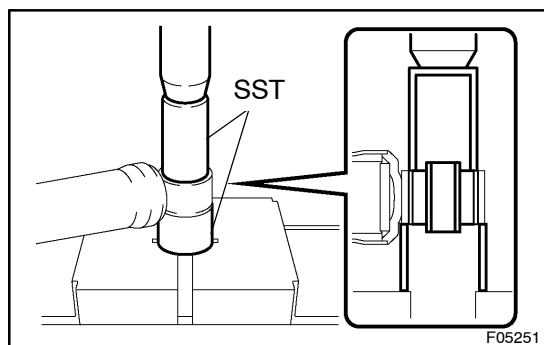

2. INSTALL BUSHING

Using SST and a press, install a new bushing.

SST 09623-36010, 09710-28021 (09710-08031)