


REMOVAL

1. REMOVE ENGINE UNDER COVER

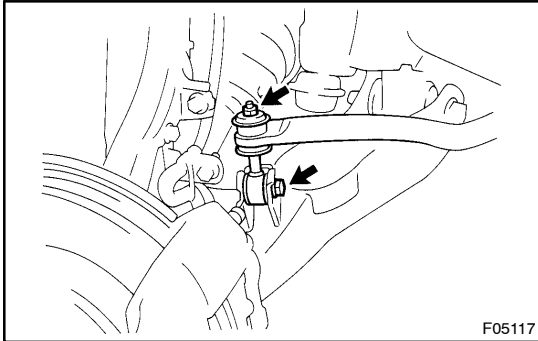


2. REMOVE LH AND RH STABILIZER BAR LINKS

Remove the 2 nuts, 2 bolts, 4 retainers, 4 cushions and 2 stabilizer bar links.

Torque:

Bolt: 52 N·m (530 kgf·cm, 38 ft·lbf)

Nut: 25 N·m (250 kgf·cm, 18 ft·lbf)

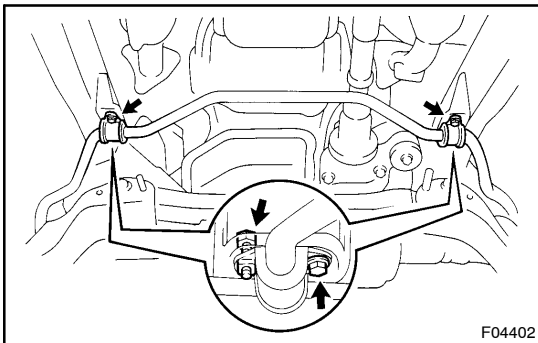

3. REMOVE STABILIZER BAR

(a) Remove the 4 bolts, 2 brackets and 2 cushions.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(b) Remove the stabilizer bar.