



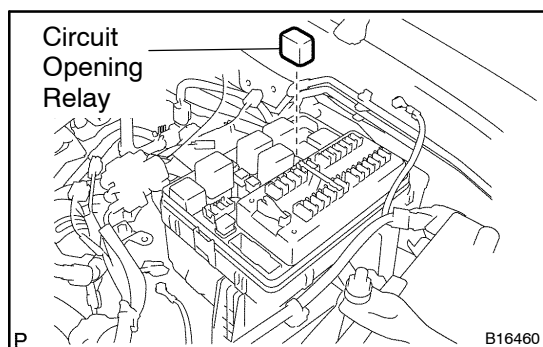

## CIRCUIT OPENING RELAY INSPECTION

SF1V2-01

1. REMOVE RELAY BOX COVER
2. REMOVE CIRCUIT OPENING RELAY  
(Marking: C/OPN)

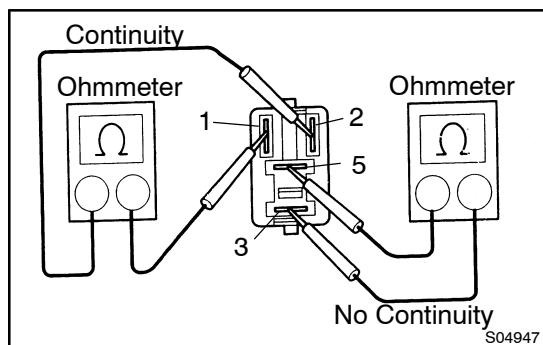


### 3. INSPECT CIRCUIT OPENING RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is a continuity between terminal 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 3 and 5.

If there is a continuity, replace the relay.

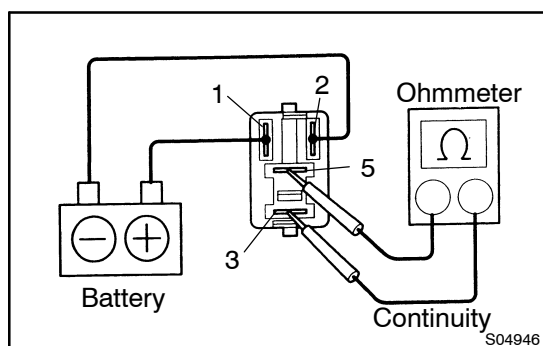

### 4. INSPECT CIRCUIT OPENING RELAY OPERATION

- (a) Apply the battery positive voltage across terminal 1 and 2.

- (b) Using an ohmmeter, check that there is a continuity between terminal 3 and 5.

If there is no continuity, replace the relay.

5. REINSTALL CIRCUIT OPENING RELAY
6. REINSTALL RELAY BOX COVER