

INSPECTION

1. REMOVE ECM
2. INSPECT ECM (See page [DI-46](#))
3. REINSTALL ECM