


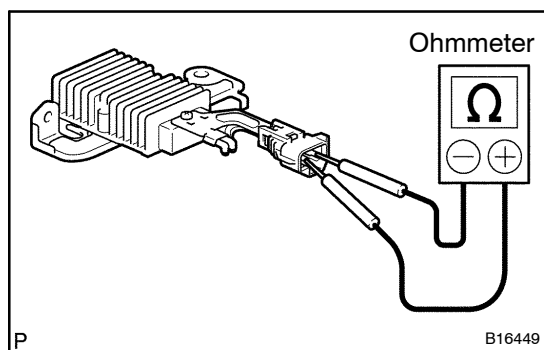

INSPECTION

1. **REMOVE FUEL PUMP RESISTOR**
2. **INSPECT FUEL PUMP RESISTOR**

Using an ohmmeter, measure the resistance between the terminals.

Resistance: 0.70 – 0.76 Ω at 20°C (68°F)

If the resistance is not as specified, replace the resistor.

3. **REINSTALL FUEL PUMP RESISTOR**

Torque: 12 N·m (122 kgf·cm, 8.8 ft·lbf)