


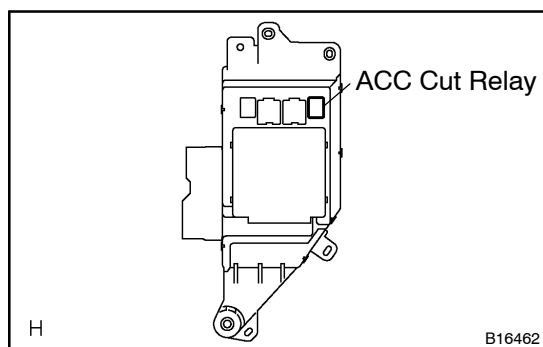


ACC CUT RELAY INSPECTION

ST00V-01

1. REMOVE ACC CUT RELAY

Remove the relay box and ACC cut relay.

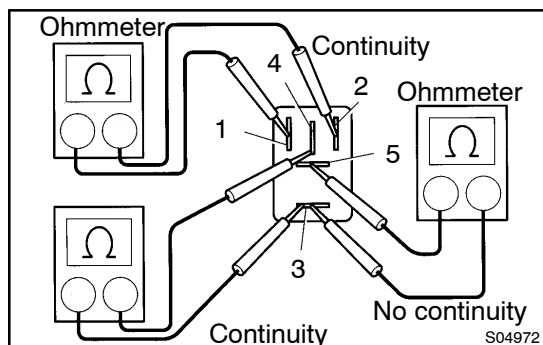

2. INSPECT ACC CUT RELAY CONTINUITY


- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

- (c) Check that there is continuity between terminals 3 and 4. If there is no continuity, replace the relay.

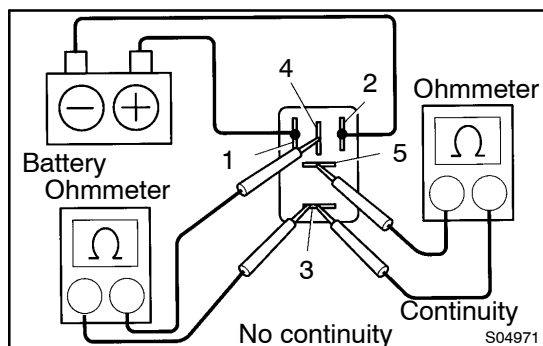

3. INSPECT ACC CUT RELAY OPERATION

- (a) Apply battery positive voltage across terminals 1 and 2.

- (b) Using an ohmmeter, check that there is no continuity between terminals 3 and 4.

If there is continuity, replace the relay.

- (c) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

4. REINSTALL ACC CUT RELAY