


REMOVAL

1. RAISE VEHICLE

NOTICE:


Make sure that the vehicle is securely supported.

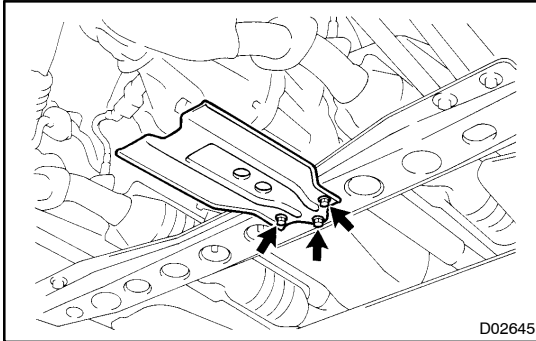

2. REMOVE TRANSFER CASE PROTECTOR

Remove the 3 bolts and transfer case protector.

Torque: 28 N·m (290 kgf·cm, 21 ft·lbf)

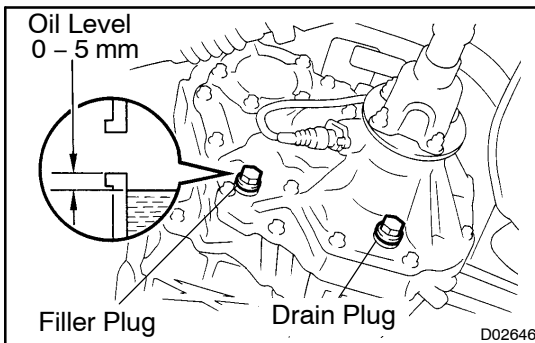

3. DRAIN TRANSFER OIL

Oil grade: API GL-4 or GL-5


Viscosity: SAE 75 W-90

Capacity: 1.3 liters (1.4 US qts, 1.1 Imp. qts)

Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)

4. REMOVE FRONT AND REAR PROPELLER SHAFTS

(See page [PR-4](#))

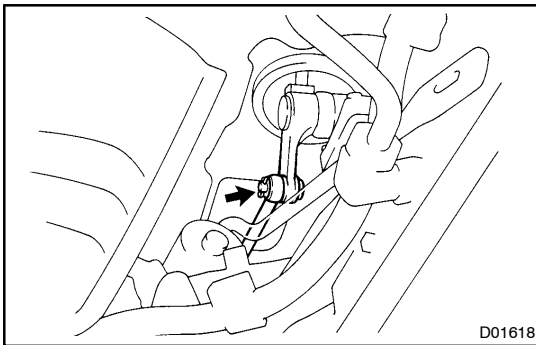


5. DISCONNECT TRANSFER SHIFT LEVER ROD ASSEMBLY

Remove the clip, plate washer, wave washer and bushing, and disconnect the transfer shift lever rod assembly.

6. DISCONNECT GROUND CABLE

Remove the bolt and disconnect the ground cable from the transfer.

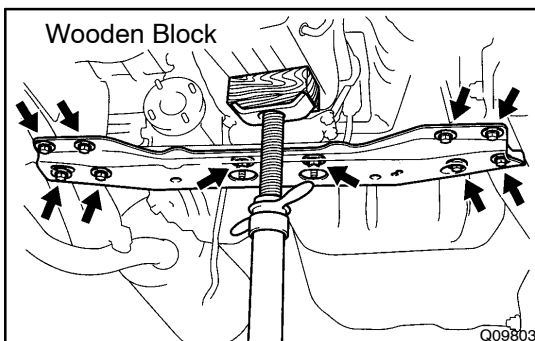

7. REMOVE CROSS MEMBER

(a) Support the transmission, as shown.

NOTICE:


Use a wooden block so not to damage the transmission oil pan.

(b) Remove the 8 bolts, 2 nuts and cross member.

Torque:

Bolt: 50 N·m (510 kgf·cm, 37 ft·lbf)


Nut: 74 N·m (750 kgf·cm, 54 ft·lbf)

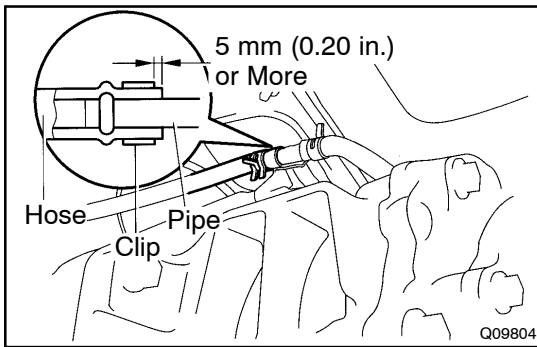**8. DISCONNECT BREATHER HOSE****HINT:**

At the time of installation, assemble the clip to the position shown in the illustration.

9. DISCONNECT NO. 1 VEHICLE SPEED SENSOR, 3 TRANSFER INDICATOR SWITCH AND MOTOR ACTUATOR CONNECTORS**10. JACK UP TRANSFER SLIGHTLY**

Using a transmission jack, support the transfer.

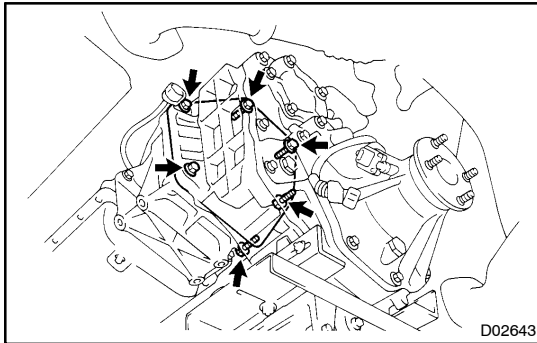**11. REMOVE TRANSFER FROM TRANSMISSION**

- (a) Disconnect the wire harness from the transfer.
- (b) Remove the 6 transfer adaptor rear mounting bolts.
Torque: 69 N·m (700 kgf·cm, 51 ft·lbf)
- (c) Pull out the transfer down and toward the rear.