


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

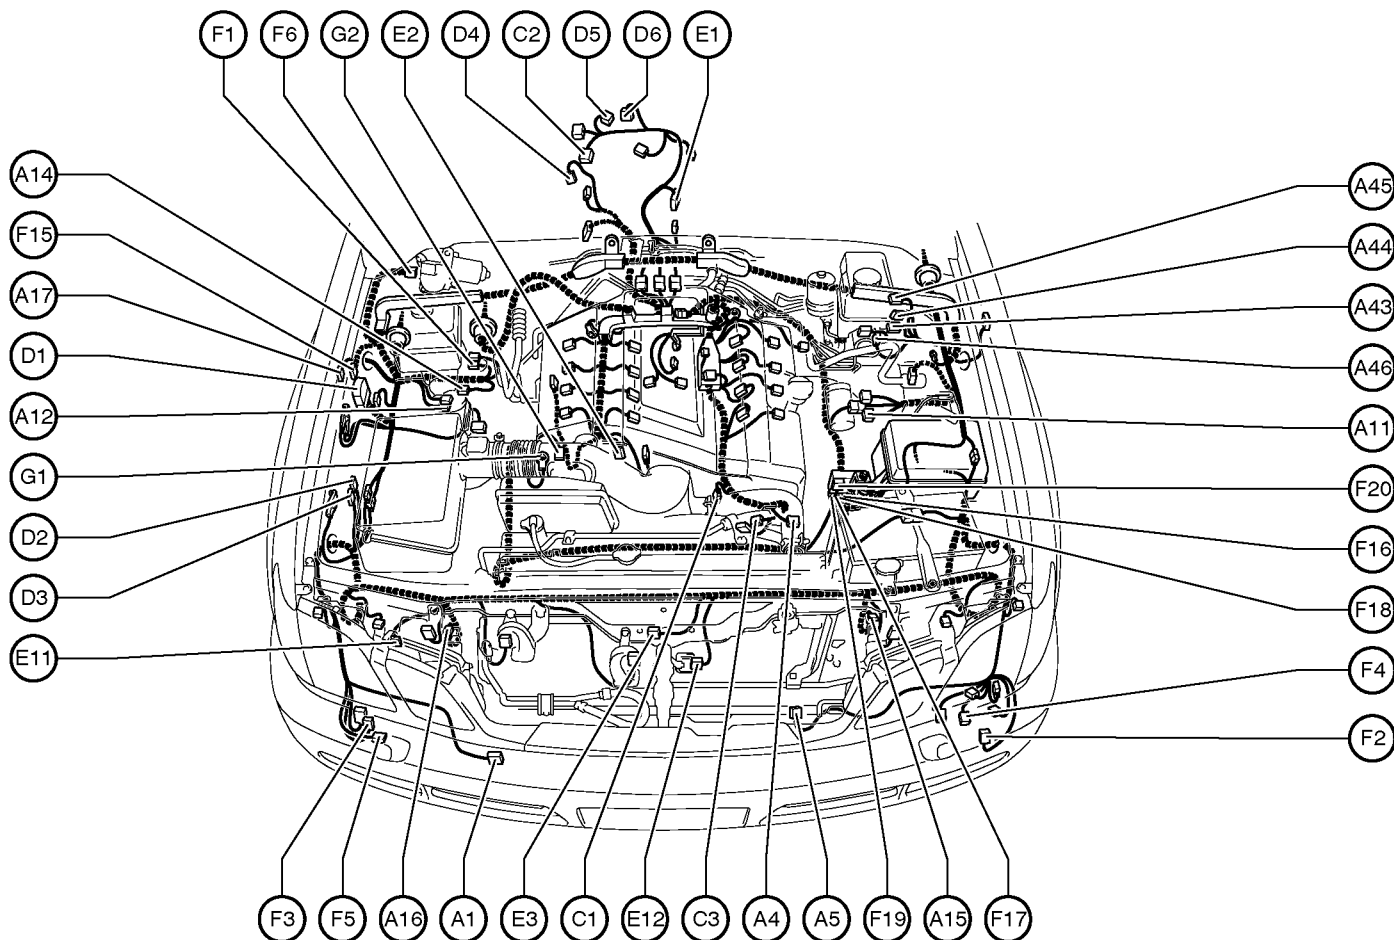

A 1 A/C Ambient Temp. Sensor
 A 4 A/C Lock Sensor
 A/C Magnetic Clutch
 A 5 Pressure SW
 A11 ABS Speed Sensor Front LH
 A12 ABS Speed Sensor Front RH
 A14 AHC Pump Motor
 A15 Airbag Sensor Front LH
 A16 Airbag Sensor Front RH
 A17 Auto Antenna Motor
 A43 ABS & BA & TRAC & VSC Actuator
 A44 ABS & BA & TRAC & VSC Actuator
 A45 ABS & BA & TRAC & VSC Actuator
 A46 ABS & BA & TRAC & VSC Actuator

C 1 Camshaft Position Sensor
 C 2 Center Diff. Lock Control Motor
 C 3 Crankshaft Position Sensor


D 1 Data Link Connector 1
 D 2 Daytime Running Light Relay No.3
 D 3 Daytime Running Light Relay No.3
 D 4 Detection SW (Center Diff. Lock)
 D 5 Detection SW (Transfer L Position)
 D 6 Detection SW (Transfer Neutral Position)

E 1 Electronically Controlled Transmission Solenoid
 E 2 Engine Coolant Temp. Sensor
 E 3 Engine Hood Courtesy SW
 E11 Engine Room Relay Block
 E12 Exhaust Gas Sensor

F 1 Fluid Pressure Sensor
 F 2 Front Fog Light LH
 F 3 Front Fog Light RH
 F 4 Front Turn Signal Light LH
 F 5 Front Turn Signal Light RH
 F 6 Front Wiper Motor
 F15 Fuel Pump Resistor
 F16 Fusible Link Block
 F17 Fusible Link Block
 F18 Fusible Link Block
 F19 Fusible Link Block
 F20 Fusible Link Block

G 1 Generator
 G 2 Generator

Position of Parts in Engine Compartment

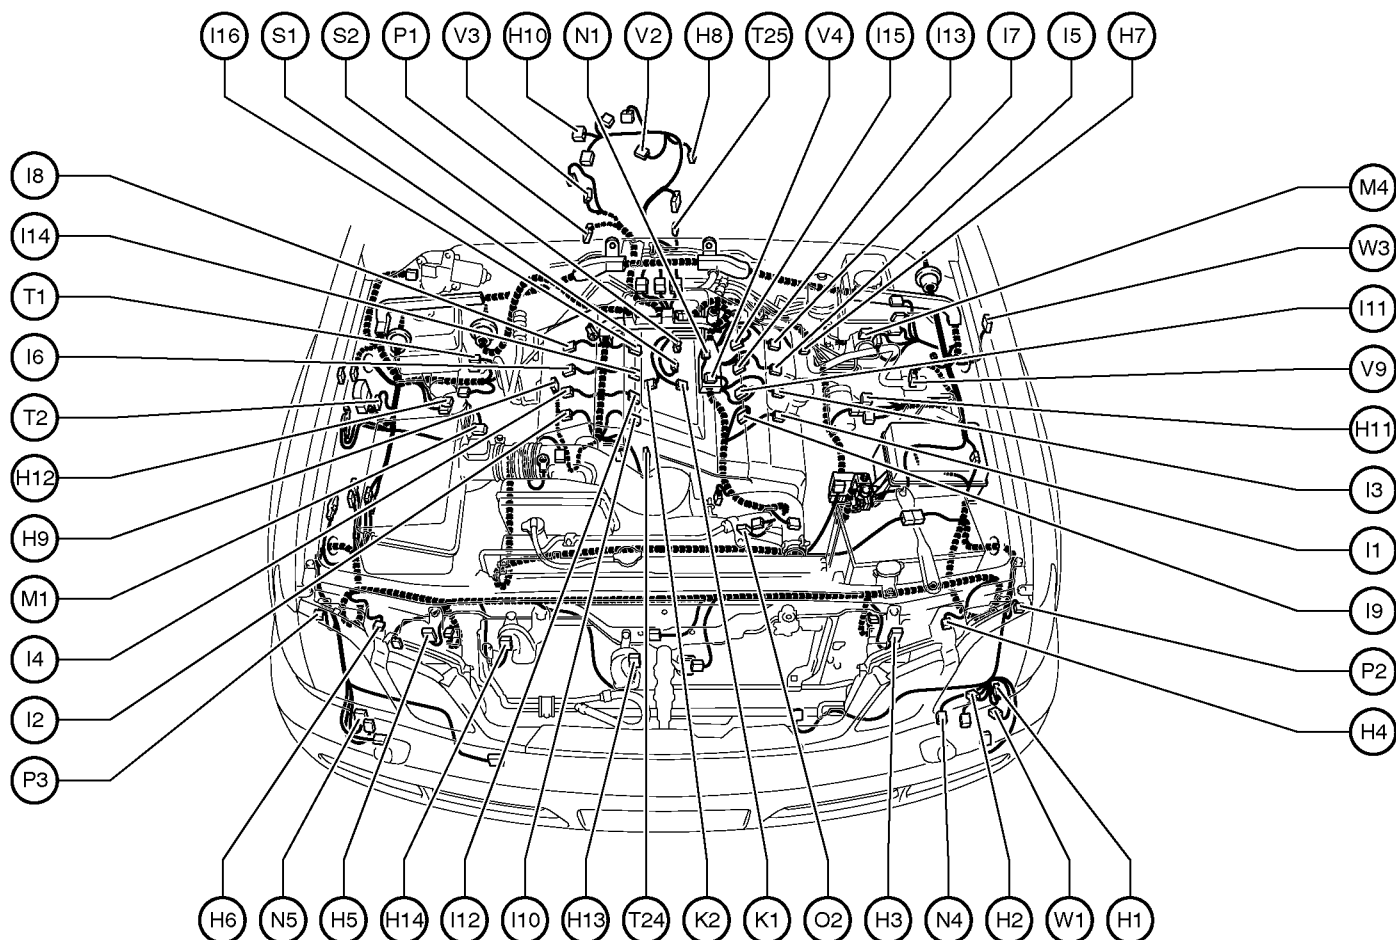

H 1 Headlight Cleaner Control Relay

H 2 Headlight Cleaner Motor

H 3 Headlight LH (High)

H 4 Headlight LH (Low)

H 5 Headlight RH (High)

H 6 Headlight RH (Low)

H 7 Heated Oxygen Sensor (Bank 1 Sensor 1)

H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)

H 9 Heated Oxygen Sensor (Bank 2 Sensor 1)

H10 Heated Oxygen Sensor (Bank 2 Sensor 2)

H11 Height Control Sensor Front LH

H12 Height Control Sensor Front RH

H13 Horn LH

H14 Horn RH

I 1 Ignition Coil and Igniter No.1

I 2 Ignition Coil and Igniter No.2

I 3 Ignition Coil and Igniter No.3

I 4 Ignition Coil and Igniter No.4

I 5 Ignition Coil and Igniter No.5

I 6 Ignition Coil and Igniter No.6

I 7 Ignition Coil and Igniter No.7

I 8 Ignition Coil and Igniter No.8

I 9 Injector No.1

I 10 Injector No.2

I 11 Injector No.3

I 12 Injector No.4

I 13 Injector No.5

I 14 Injector No.6

I 15 Injector No.7

I 16 Injector No.8

K 1 Knock Sensor 1

K 2 Knock Sensor 2

M 1 Mass Air Flow Meter

M 4 Master Cylinder Pressure Sensor

N 1 Noise Filter (Ignition)

N 4 Night View Projector LH

N 5 Night View Projector RH

O 2 Oil Pressure Sender

P 1 Park/Neutral Position SW

P 2 Parking Light LH

P 3 Parking Light RH

S 1 Starter

S 2 Starter

T 1 Temp. Sensor (AHC)

T 2 Theft Deterrent Horn

T 24 Throttle Control Motor and Sensor

T 25 Turbine Speed Sensor

V 2 Vehicle Speed Sensor (Combination Meter)

V 3 Vehicle Speed Sensor
(Electronically Controlled Transmission)

V 4 VSV (EVAP)


V 9 VSV (Canister Closed Valve)

W 1 Washer Level Warning SW
Washer Motor

W 3 Wireless Door Lock Buzzer

G ELECTRICAL WIRING ROUTING


Position of Parts in Instrument Panel

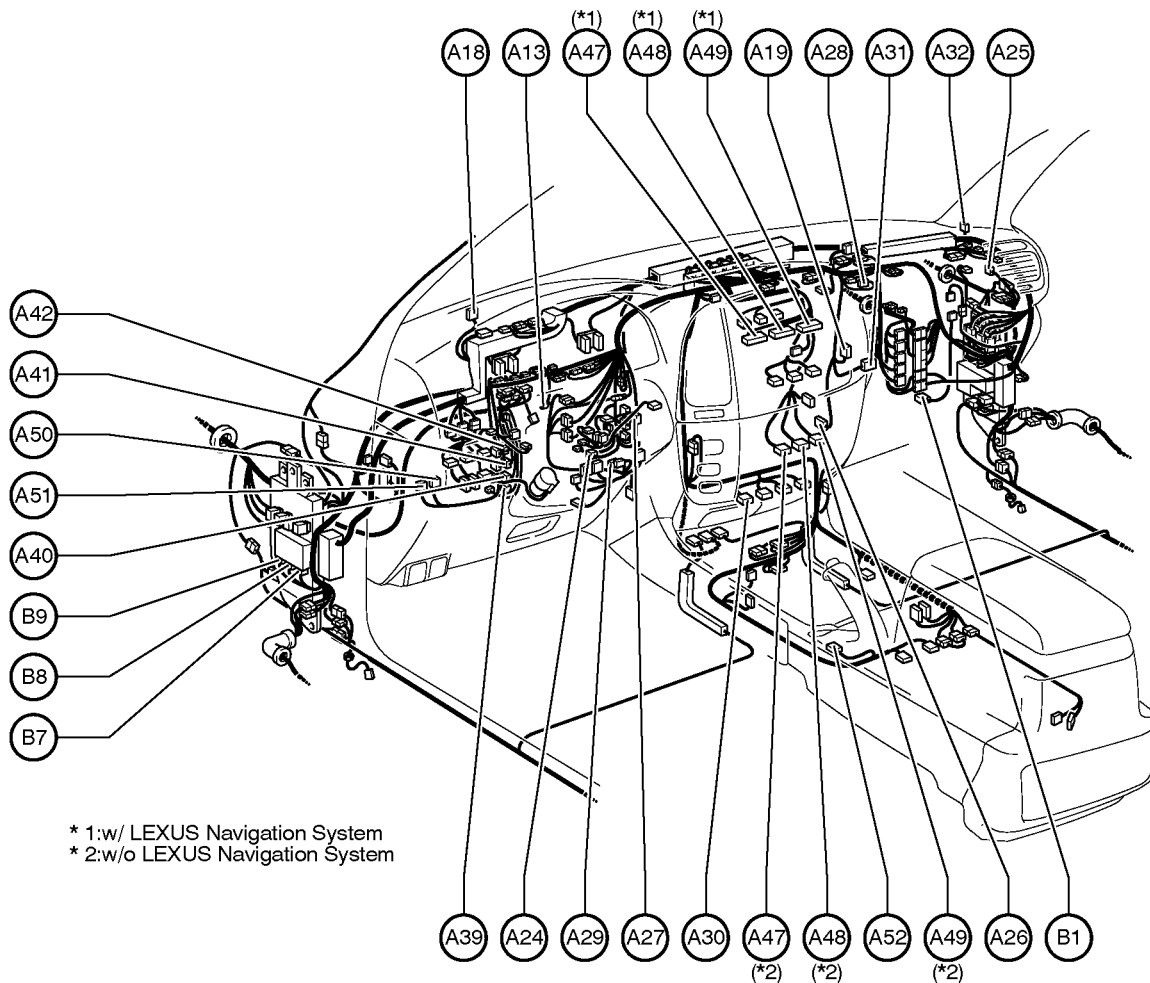

- A13 Accel Position Sensor
- A18 A/C Solar Sensor
- A19 A/C Thermistor
- A24 AHC Main Relay
- A25 Air Inlet Control Servo Motor
- A26 Air Mix Control Servo Motor
- A27 Air Vent Mode Control Servo Motor
- A28 Airbag Squib (Front Passenger Airbag Assembly)
- A29 Airbag Squib (Steering Wheel Pad)
- A30 Ashtray Illumination
- A31 Auto Antenna Control Relay
- A32 Automatic Light Control Sensor
- A39 ABS & BA & TRAC & VSC ECU
- A40 ABS & BA & TRAC & VSC ECU
- A41 ABS & BA & TRAC & VSC ECU
- A42 ABS & BA & TRAC & VSC ECU
- A47 A/C Control Assembly
- A48 A/C Control Assembly
- A49 A/C Control Assembly
- A50 Auto Wiper ECU
- A51 Auto Wiper ECU
- A52 A/T Shift Lever Illumination
- Shift Lock Control ECU

- B 1 Blower Motor Controller
- B 7 Body ECU
- B 8 Body ECU
- B 9 Body ECU

Position of Parts in Instrument Panel

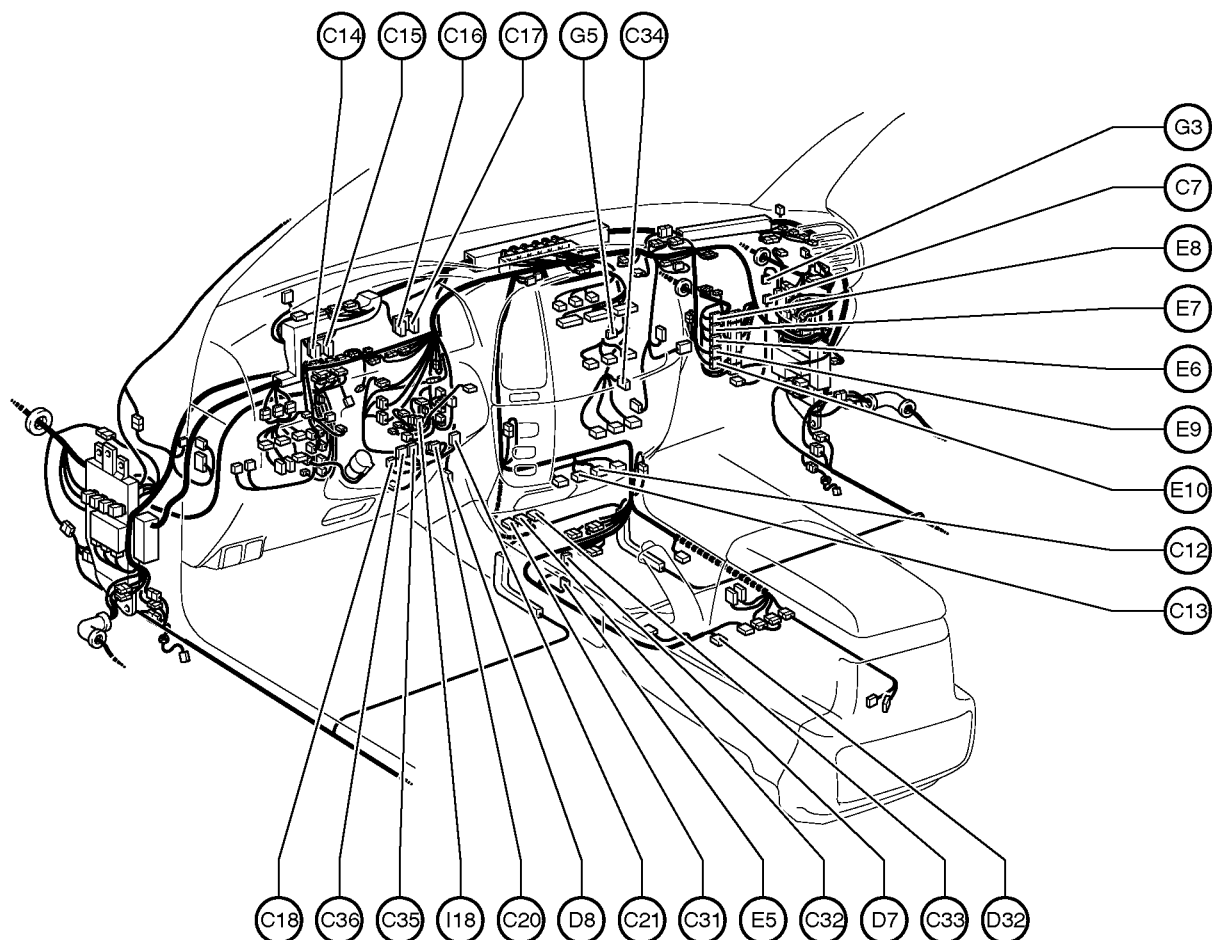

C 7 Center Diff. Lock Control Relay

C12 Cigarette Lighter

C13 Cigarette Lighter Illumination

C14 Combination Meter

C15 Combination Meter

C16 Combination Meter

C17 Combination Meter

C18 Combination SW

C20 Combination SW

C21 Combination SW

C31 Center Airbag Sensor Assembly

C32 Center Airbag Sensor Assembly

C33 Center Airbag Sensor Assembly

C34 Center Cluster Integration Panel

C35 Combination SW

C36 Combination SW

Steering Sensor

D 7 Damping Mode Select SW and Height Control SW

D 8 Data Link Connector 3

D32 DVD Automatic Changer

E 5 Electronically Controlled Transmission Pattern Select SW

E 6 Engine Control Module

E 7 Engine Control Module

E 8 Engine Control Module

E 9 Engine Control Module

E10 Engine Control Module


G 3 Glove Box Light

G 5 Gateway ECU

I 18 Ignition SW

G ELECTRICAL WIRING ROUTING


Position of Parts in Instrument Panel

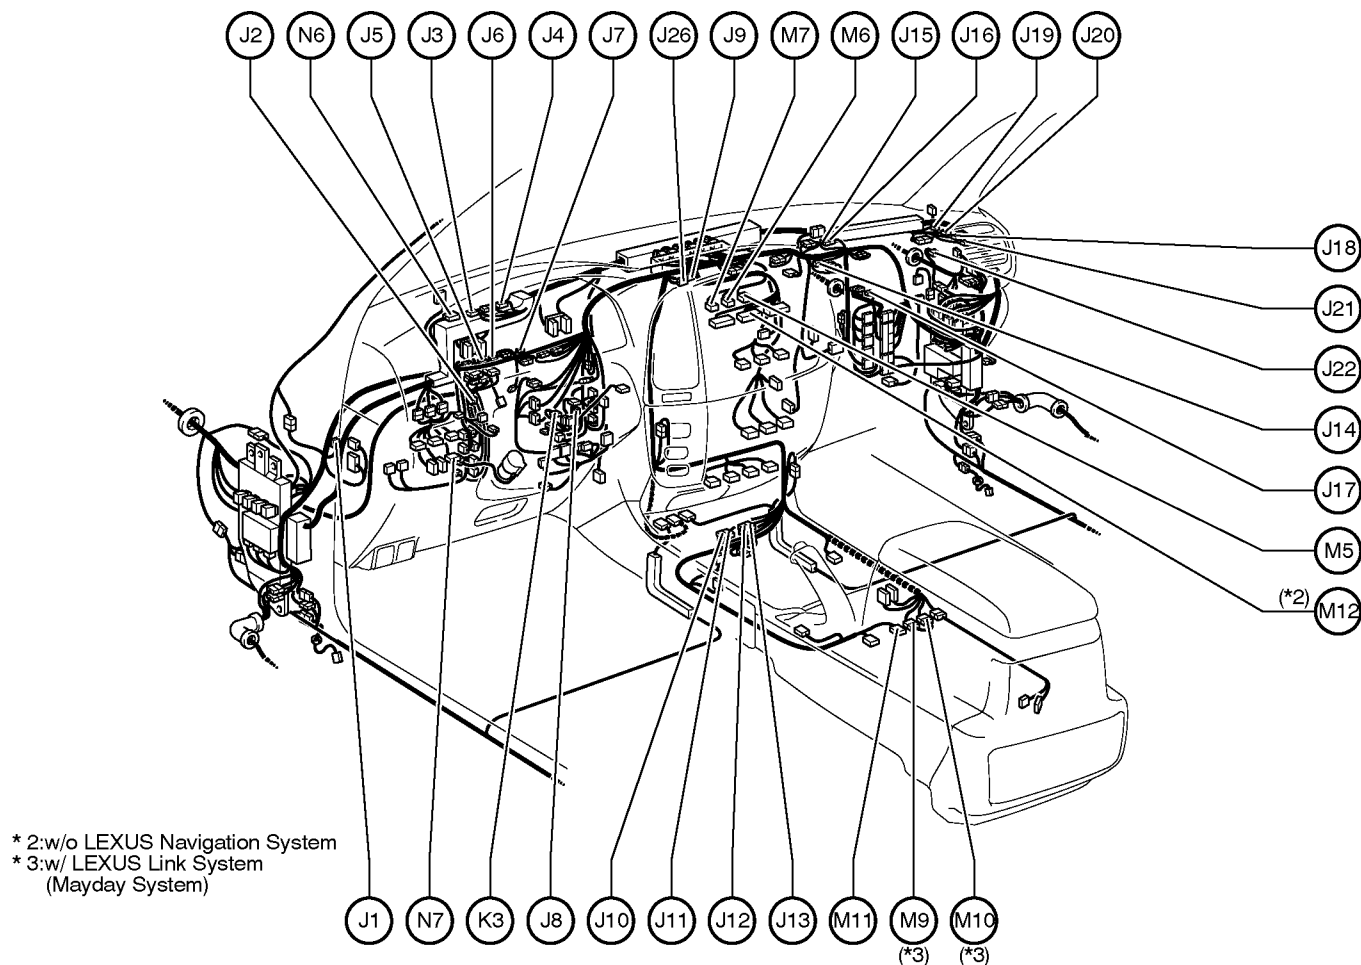

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector
- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 9 Junction Connector
- J 10 Junction Connector
- J 11 Junction Connector
- J 12 Junction Connector
- J 13 Junction Connector
- J 14 Junction Connector
- J 15 Junction Connector
- J 16 Junction Connector
- J 17 Junction Connector
- J 18 Junction Connector
- J 19 Junction Connector
- J 20 Junction Connector
- J 21 Junction Connector
- J 22 Junction Connector
- J 26 Junction Connector

- K 3 Key Interlock Solenoid
- M 5 Multi-Display
- M 6 Multi-Display
- M 7 Multi-Display
- M 9 Mayday ECU
- M10 Mayday ECU
- M11 Mayday ECU
- M12 Multi-Display
- N 6 Night View ECU
- N 7 Night View SW

Position of Parts in Instrument Panel

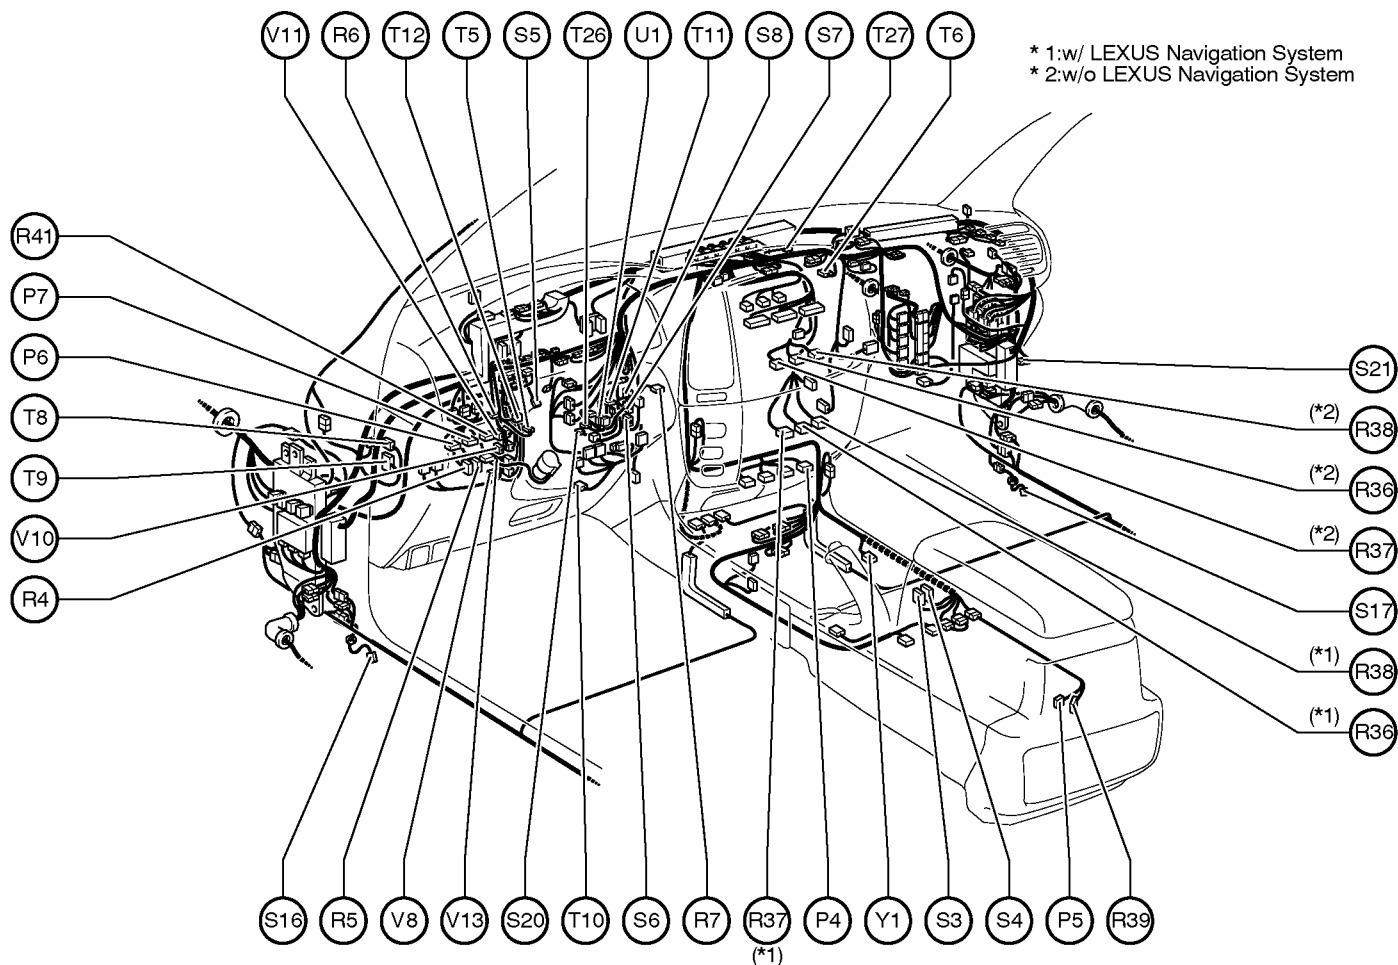

P 4 Power Outlet (Front)
 P 5 Power Outlet (Rear Console Box)
 P 6 Power Quarter Window SW LH
 P 7 Power Quarter Window SW RH

R 4 Remote Control Mirror SW
 R 5 Remote Control Mirror SW
 R 6 Rheostat
 R 7 Room Temp. Sensor (Front)
 R36 Radio and Player
 R37 Radio and Player
 R38 Radio and Player
 R39 Rear Seat Audio Controller
 R41 Roll Sensing of Curtain Shield Airbags Cutoff SW

S 3 Seat Heater SW (Driver's Seat)
 S 4 Seat Heater SW (Front Passenger's Seat)
 S 5 Stop Light SW
 S 6 Suspension Control ECU
 S 7 Suspension Control ECU
 S 8 Suspension Control ECU
 S16 Side Step Light LH and Outer Foot Light LH
 S17 Side Step Light RH and Outer Foot Light RH
 S20 Spot Light Illumination LH
 S21 Spot Light Illumination RH

T 5 Telescopic Motor
 T 6 Theft Deterrent ECU
 T 8 Tilt and Telescopic ECU
 T 9 Tilt and Telescopic ECU
 T10 Tilt Motor
 T11 Ignition Key Cylinder Light
 Transponder Key Amplifier
 T12 Turn Signal Flasher
 T26 Towing Brake Controller
 T27 Transponder Key Computer


U 1 Unlock Warning SW

V 8 VSC Warning Buzzer
 V10 VGRS ECU
 V11 VGRS ECU
 V13 VGRS Actuator

Y 1 Yaw Rate Sensor

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

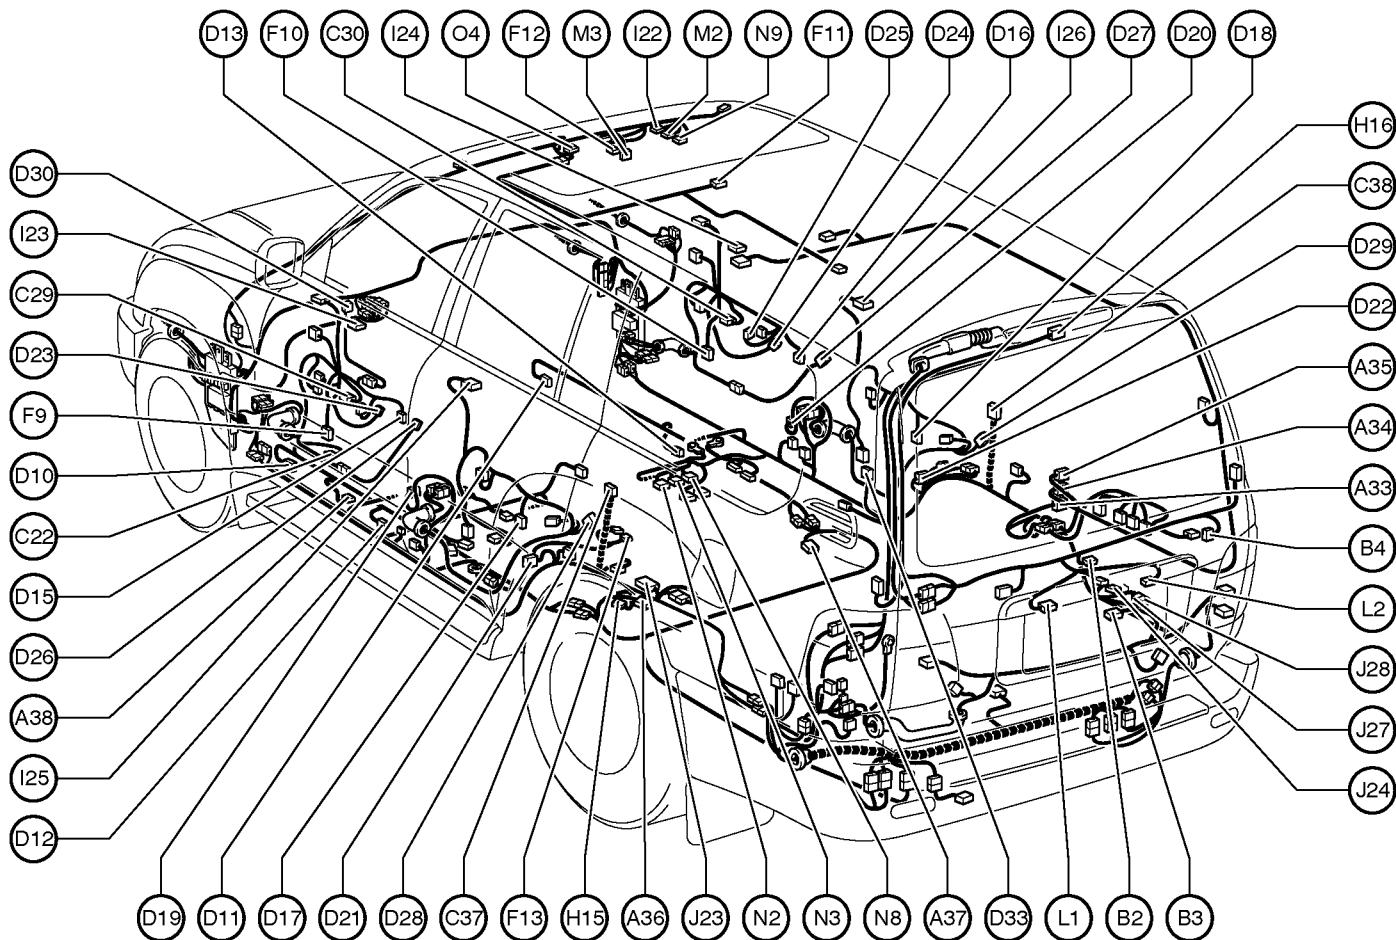

A 33 A/C Amplifier
A 34 A/C Amplifier
A 35 A/C Amplifier
A 36 ABS Speed Sensor Rear LH
A 37 ABS Speed Sensor Rear RH
A 38 Accumulator Solenoid

B 2 Back Door Courtesy SW
B 3 Back Door Key Lock and Unlock SW
B 4 Back Door Lock Motor
Back Door Unlock Detection SW

C 22 Control Valve Assembly
C 29 Center Speaker LH
C 30 Center Speaker RH
C 37 Curtain Shield Airbag Squib LH
C 38 Curtain Shield Airbag Squib RH

D 10 Damping Force Control Actuator Front LH
D 11 Damping Force Control Actuator Front RH
D 12 Damping Force Control Actuator Rear LH
D 13 Damping Force Control Actuator Rear RH
D 15 Door Courtesy Light Front LH
D 16 Door Courtesy Light Front RH
D 17 Door Courtesy Light Rear LH
D 18 Door Courtesy Light Rear RH
D 19 Door Courtesy SW Front LH
D 20 Door Courtesy SW Front RH
D 21 Door Courtesy SW Rear LH
D 22 Door Courtesy SW Rear RH
D 23 Door Key Lock and Unlock SW LH
D 24 Door Key Lock and Unlock SW RH
D 25 Door Lock Control SW RH
D 26 Door Lock Motor Front LH
Door Unlock Detection SW Front LH
D 27 Door Lock Motor Front RH
Door Unlock Detection SW Front RH
D 28 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH

D 29 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
D 30 Driving Position Memory SW
D 33 Door Control Receiver

F 9 Front Door Speaker LH
F 10 Front Door Speaker RH
F 11 Front Interior Light
Rear Personal Light
F 12 Front Personal Light
F 13 Fuel Pump
Fuel Sender

H 15 Height Control Sensor Rear
H 16 High Mounted Stop Light

I 22 Inner Mirror
I 23 Inside Door Handle Illumination Front LH
I 24 Inside Door Handle Illumination Front RH
I 25 Inside Door Handle Illumination Rear LH
I 26 Inside Door Handle Illumination Rear RH

J 23 Junction Connector
J 24 Junction Connector
J 27 Junction Connector
J 28 Junction Connector


L 1 License Plate Light LH
L 2 License Plate Light RH

M 2 Moon Roof Control ECU
M 3 Moon Roof Control SW

N 2 Navigation ECU
N 3 Navigation ECU
N 8 Navigation ECU
N 9 Night View Camera

O 4 Overhead J/B

Position of Parts in Body

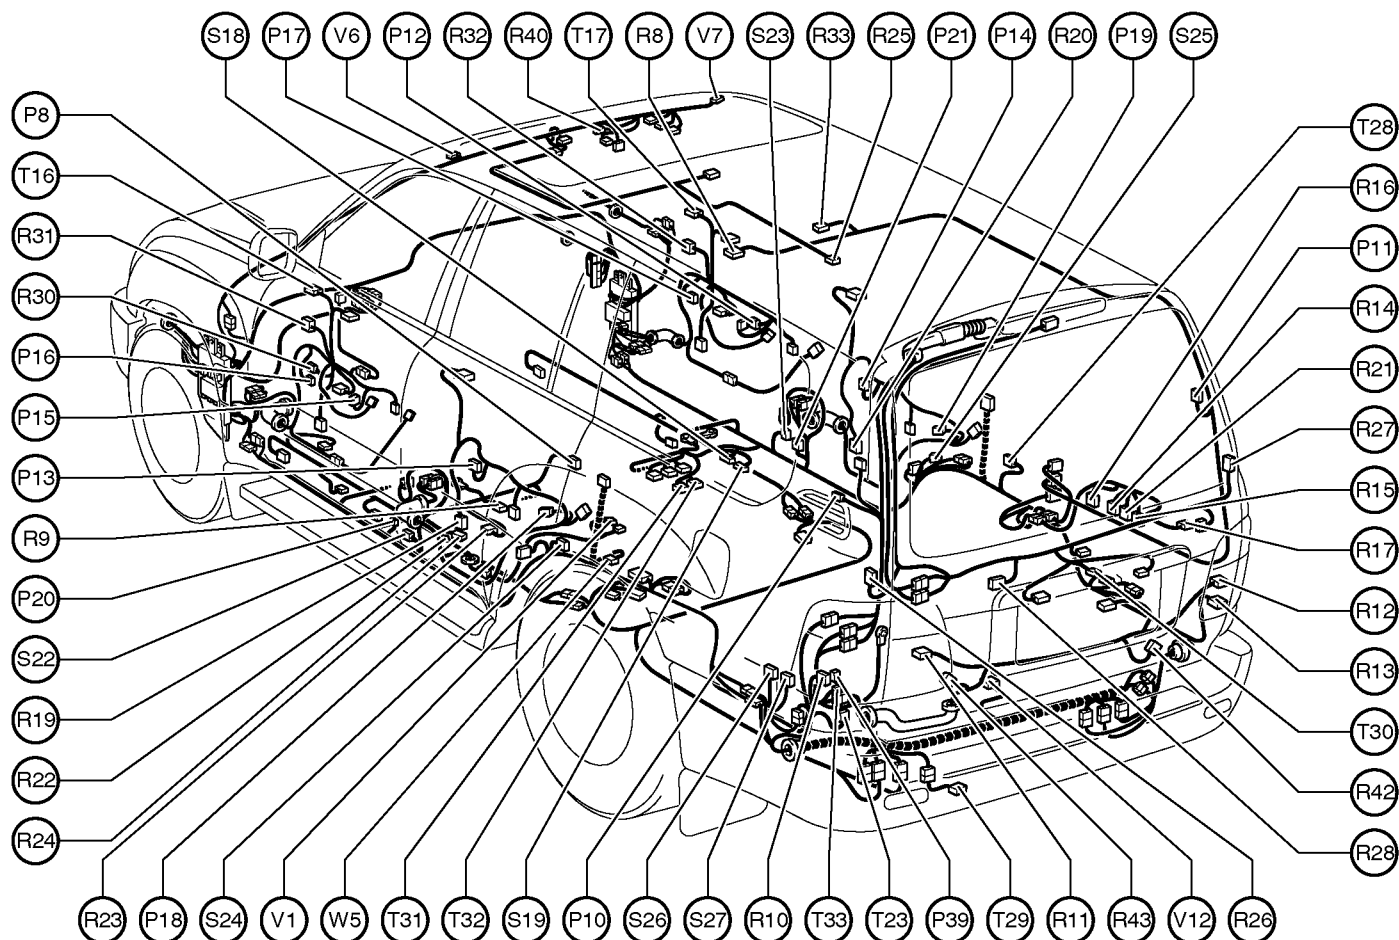

P 8 Parking Brake SW
 P 10 Power Vent Window Motor LH
 P 11 Power Vent Window Motor RH
 P 12 Power Window Control SW Front RH
 P 13 Power Window Control SW Rear LH
 P 14 Power Window Control SW Rear RH
 P 15 Power Window Master SW
 P 16 Power Window Motor Front LH
 P 17 Power Window Motor Front RH
 P 18 Power Window Motor Rear LH
 P 19 Power Window Motor Rear RH
 P 20 Pretensioner LH
 P 21 Pretensioner RH
 P 39 Power Outlet (Luggage Compartment)

R 8 Rear A/C Control SW
 R 9 Rear Air Mix Control Servo Motor
 R 10 Rear Combination Light LH
 R 11 Rear Combination Light LH
 R 12 Rear Combination Light RH
 R 13 Rear Combination Light RH
 R 14 Rear Cooler Blower Motor
 R 15 Rear Cooler Magnetic Valve
 R 16 Rear Cooler Power Transistor
 R 17 Rear Cooler Relay
 R 19 Rear Door Speaker LH
 R 20 Rear Door Speaker RH
 R 21 Rear Evaporator Temp. Sensor
 R 22 Rear Heater Blower Motor
 R 23 Rear Heater Power Transistor
 R 24 Rear Inlet Air Temp. Sensor
 R 25 Rear Interior Light
 R 26 Rear Window Defogger
 R 27 Rear Window Defogger

R 28 Rear Wiper Motor
 R 30 Remote Control Mirror ECU
 R 31 Remote Control Mirror LH
 R 32 Remote Control Mirror RH
 R 33 Room Temp. Sensor (Rear)
 R 40 Rain Sensor
 R 42 Rear Combination Light LH
 R 43 Rear Combination Light RH

S 18 Stereo Component Amplifier
 S 19 Stereo Component Amplifier
 S 22 Side Airbag Sensor Front LH
 S 23 Side Airbag Sensor Front RH
 S 24 Side Airbag Sensor Rear LH
 S 25 Side Airbag Sensor Rear RH
 S 26 Sub Body ECU
 S 27 Sub Body ECU

T 16 Tweeter LH
 T 17 Tweeter RH
 T 23 Towing Converter Relay
 T 28 Theft Deterrent Siren
 T 29 Trailer Socket
 T 30 Television Camera
 T 31 Television Camera ECU
 T 32 Television Camera ECU
 T 33 Towing Hitch Relay

V 1 Vapor Pressure Sensor
 V 6 Vanity Light LH
 V 7 Vanity Light RH
 V 12 VSV (Pressure Switching Valve)

W 5 Woofer (Speaker)

Position of Parts in Seat	
---------------------------	--

