




I GROUND POINT

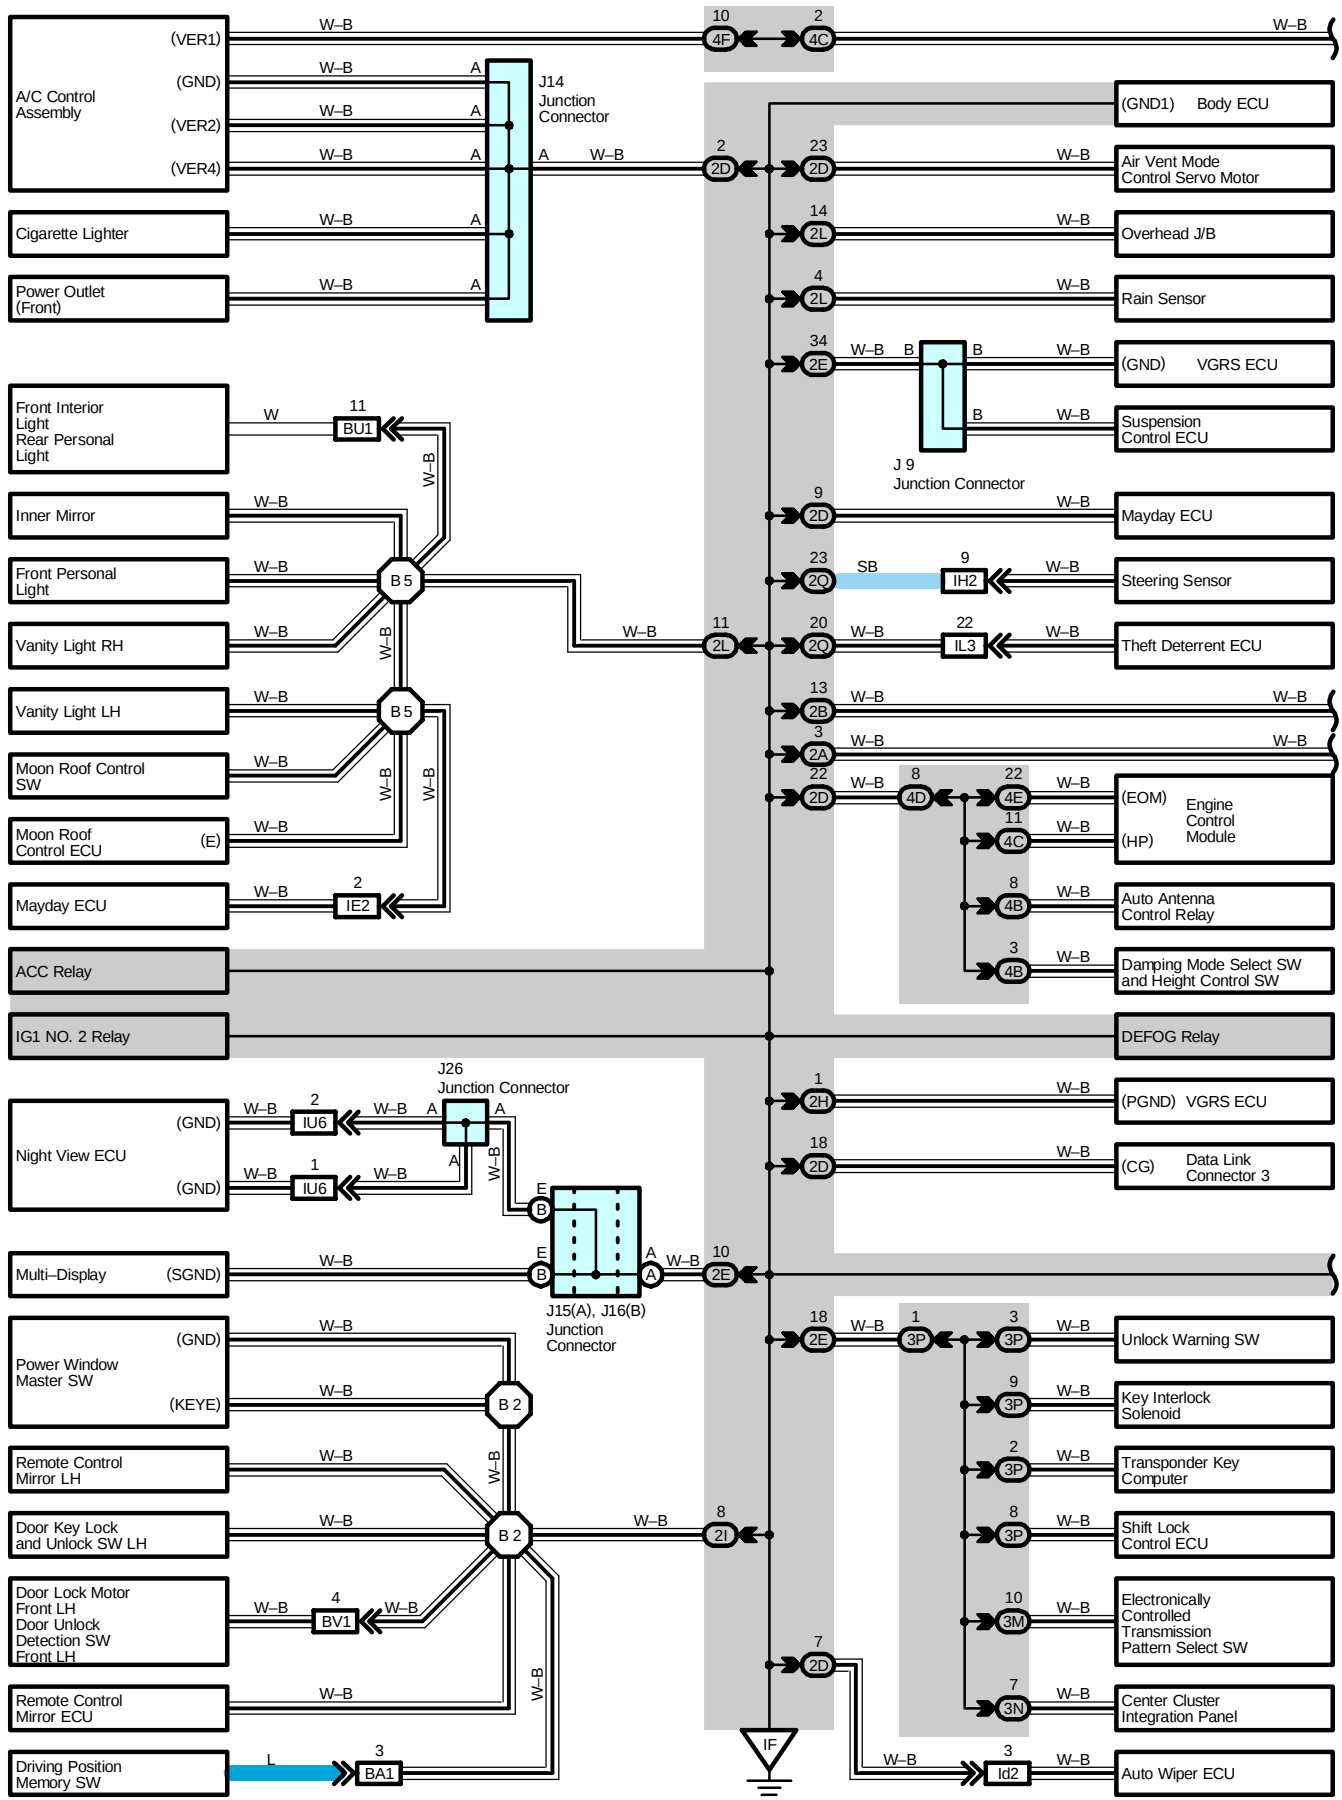

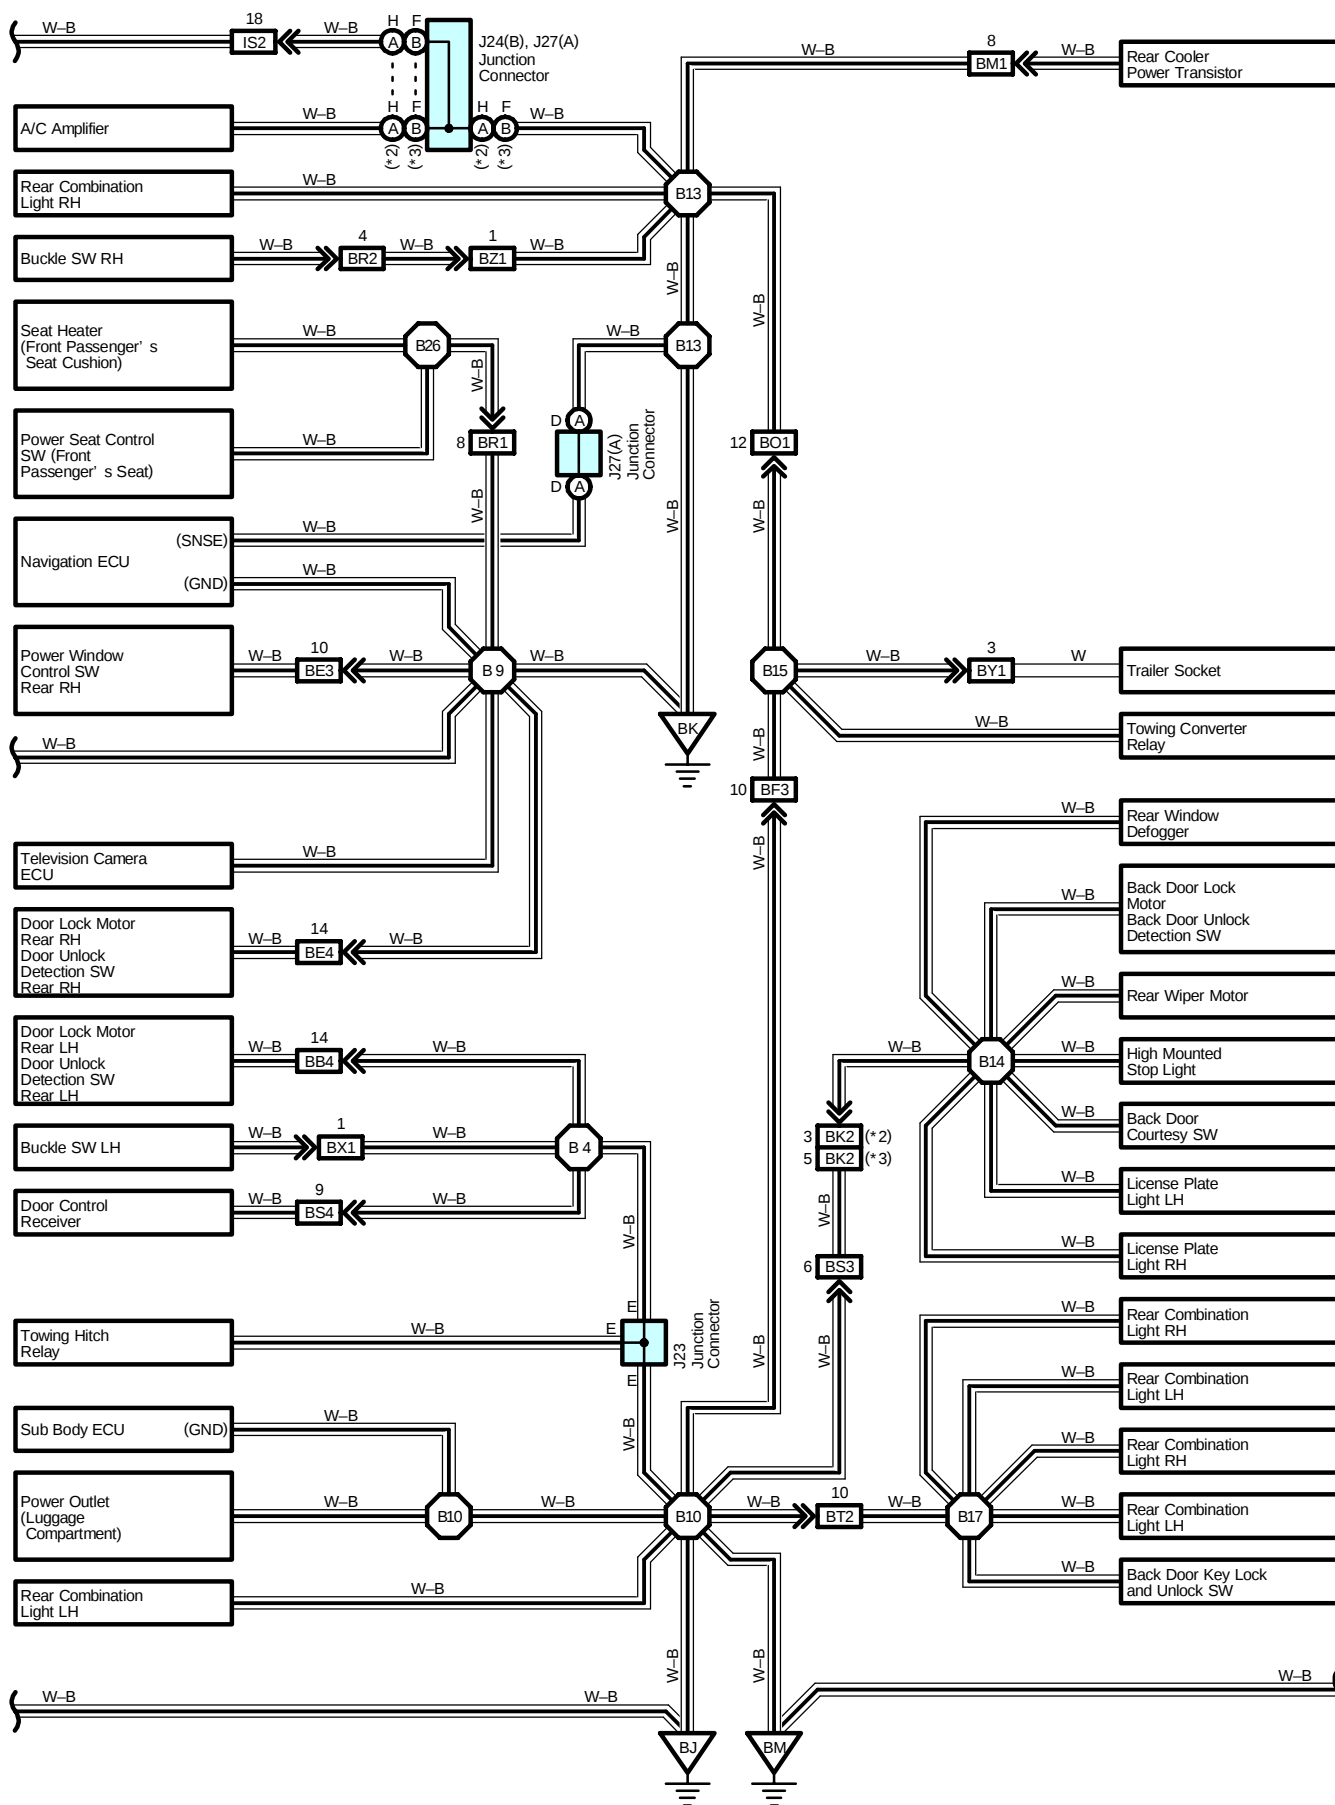

I GROUND POINT

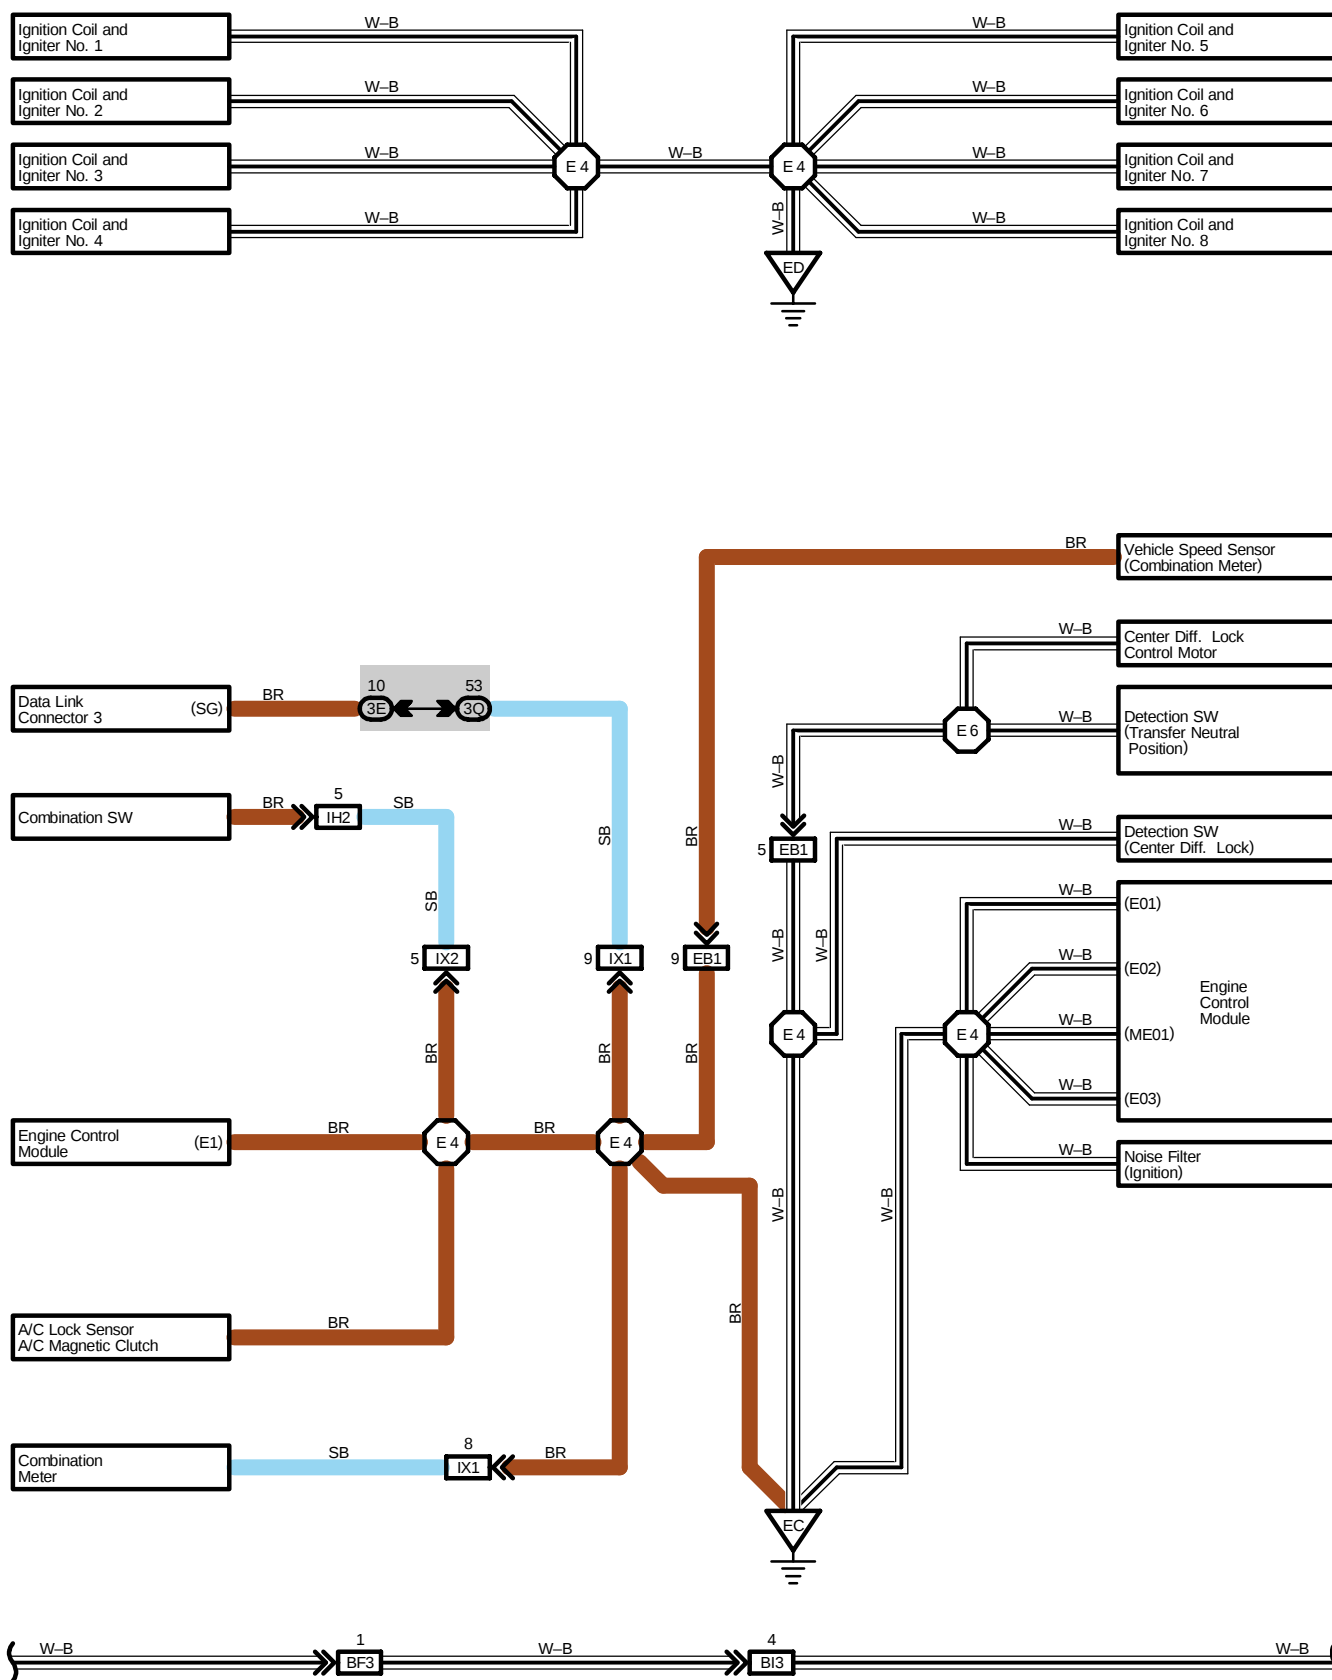

I GROUND POINT

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J1	72	J14	72	J23	74
J7	72	J15	A 72	J24	B 74
J9	72	J16	B 72	J26	72
J10	A 72	J19	72	J27	A 74
J11	B 72	J22	72		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2B		
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2H		
2I	28	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	28	Roof No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3F		
3H		
3I	40	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3M	43	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3N		
3P	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
3Q		
4B	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4D		
4E		
4F		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	78	Engine Wire and Transmission Wire (On the Transmission)
IE2	80	Dash Wire and Roof No.1 Wire (Left Kick Panel)
IF2	80	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IH2	82	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II5	82	Dash Wire and Column Wire (Near the Ignition SW)
IL3	82	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IP2	84	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	84	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IS2	84	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IU6	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IX2		
Id2	86	Dash Wire and Dash Wire (Behind the Combination Meter)
Ik1	88	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
BA1	90	Front Door LH Wire and Front Door Sub Wire (Front Door LH)
BB3	90	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BB4		
BC1	90	Floor No.1 Wire and Fuel Tank Wire (Near the Fuel Tank)
BD1	90	Frame No.2 Wire and Frame Wire (Near the Left Rear Suspension Support)
BE3	90	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BE4		
BF3	90	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BG1	92	Frame No.3 Wire and Frame Wire (Near the Right Rear Suspension Support)
BI3	92	Frame Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BK2	92	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BM1	92	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)
BO1	94	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BR1	96	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)
BR2		
BS3	94	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BS4		
BT2	94	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BU1	94	Roof No.3 Wire and Roof No.1 Wire (Front Side of Roof)
BV1	94	Door Lock LH Sub Wire and Front Door LH Wire (Front Door LH)
BW1	94	Door Lock RH Sub Wire and Front Door RH Wire (Front Door RH)
BX1	94	Floor No.1 Wire and Floor No.1 Wire (Near the Left Rear Suspension Support)
BY1	94	Frame No.4 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BZ1	94	Floor No.2 Wire and Floor No.2 Wire (Near the Right Rear Suspension Support)

I GROUND POINT



: Ground Points

Code	See Page	Ground Points Location
EA	78	Front Right Side of Fender Apron
EB		
EC	78	Rear Bank of Right Cylinder Head
ED	78	Rear Bank of Left Cylinder Head
EE	78	Front Left Side of Fender Apron
IF	80	Set Bolt of Cowl Side J/B LH
IG		
IH	80	Set Bolt of Cowl Side J/B RH
II		
BJ	90	Under the Driver's Seat
BK	90	Front Side Under the Front Passenger's Seat
BL	90	Rear Side Under the Front Passenger's Seat
BM	90	Left Rear Side Quarter Panel



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	78	Engine Room Main Wire	B5	92	Roof No.1 Wire
E2	78	Engine Room No.2 Wire	B7	92	Front Door RH Wire
E4	78	Engine Wire	B9	92	Floor No.2 Wire
E6	78	Transmission Wire	B10	92	Floor No.1 Wire
E8	78	Engine Room No.2 Wire	B11	92	Frame Wire
E10	78	Engine Room Main Wire	B13	92	Floor No.2 Wire
I2	82	Engine Room No.2 Wire	B14	92	Back Door Upper Wire
I3	82	Instrument Panel Wire	B15	92	Floor No.3 Wire
I6	82	Column Wire	B17	92	Back Door Lower Wire
B2	92	Front Door LH Wire	B21	92	Floor No.1 Wire
B3	92	Floor No.1 Wire	B26	96	Front Seat RH Wire
B4					

