

2004 LX 470

ELECTRICAL WIRING DIAGRAM

	Section Code	Page
INTRODUCTION	A	2
HOW TO USE THIS MANUAL	B	3
TROUBLESHOOTING	C	12
ABBREVIATIONS	D	17
GLOSSARY OF TERMS AND SYMBOLS	E	18
RELAY LOCATIONS	F	20
ELECTRICAL WIRING ROUTING	G	68
SYSTEM CIRCUITS	H	98
GROUND POINT	I	428
POWER SOURCE (Current Flow Chart)	J	438
CONNECTOR LIST	K	448
PART NUMBER OF CONNECTORS	L	462
OVERALL ELECTRICAL WIRING DIAGRAM .	M	468

©2003 TOYOTA MOTOR CORPORATION

All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.