




Power Source

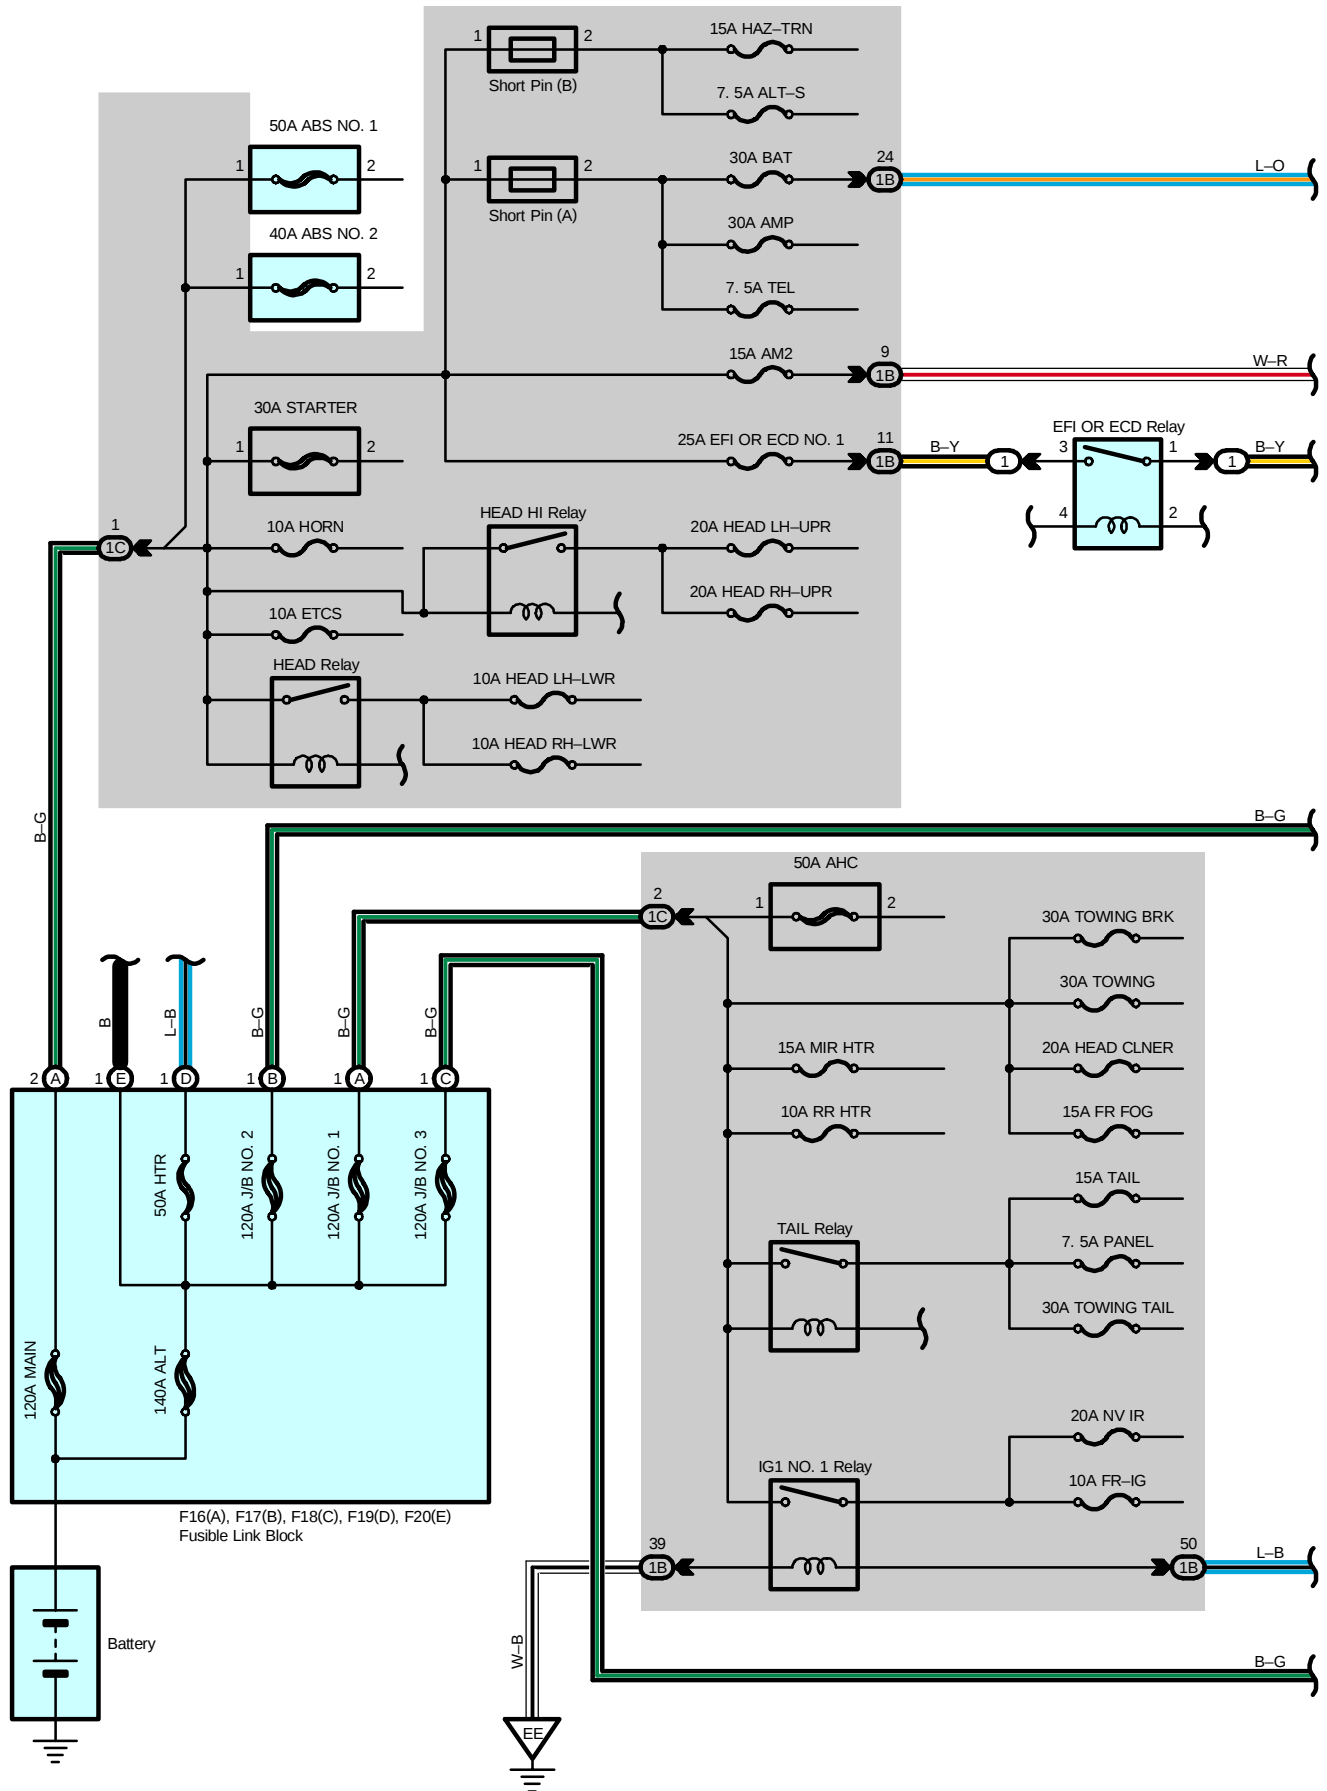

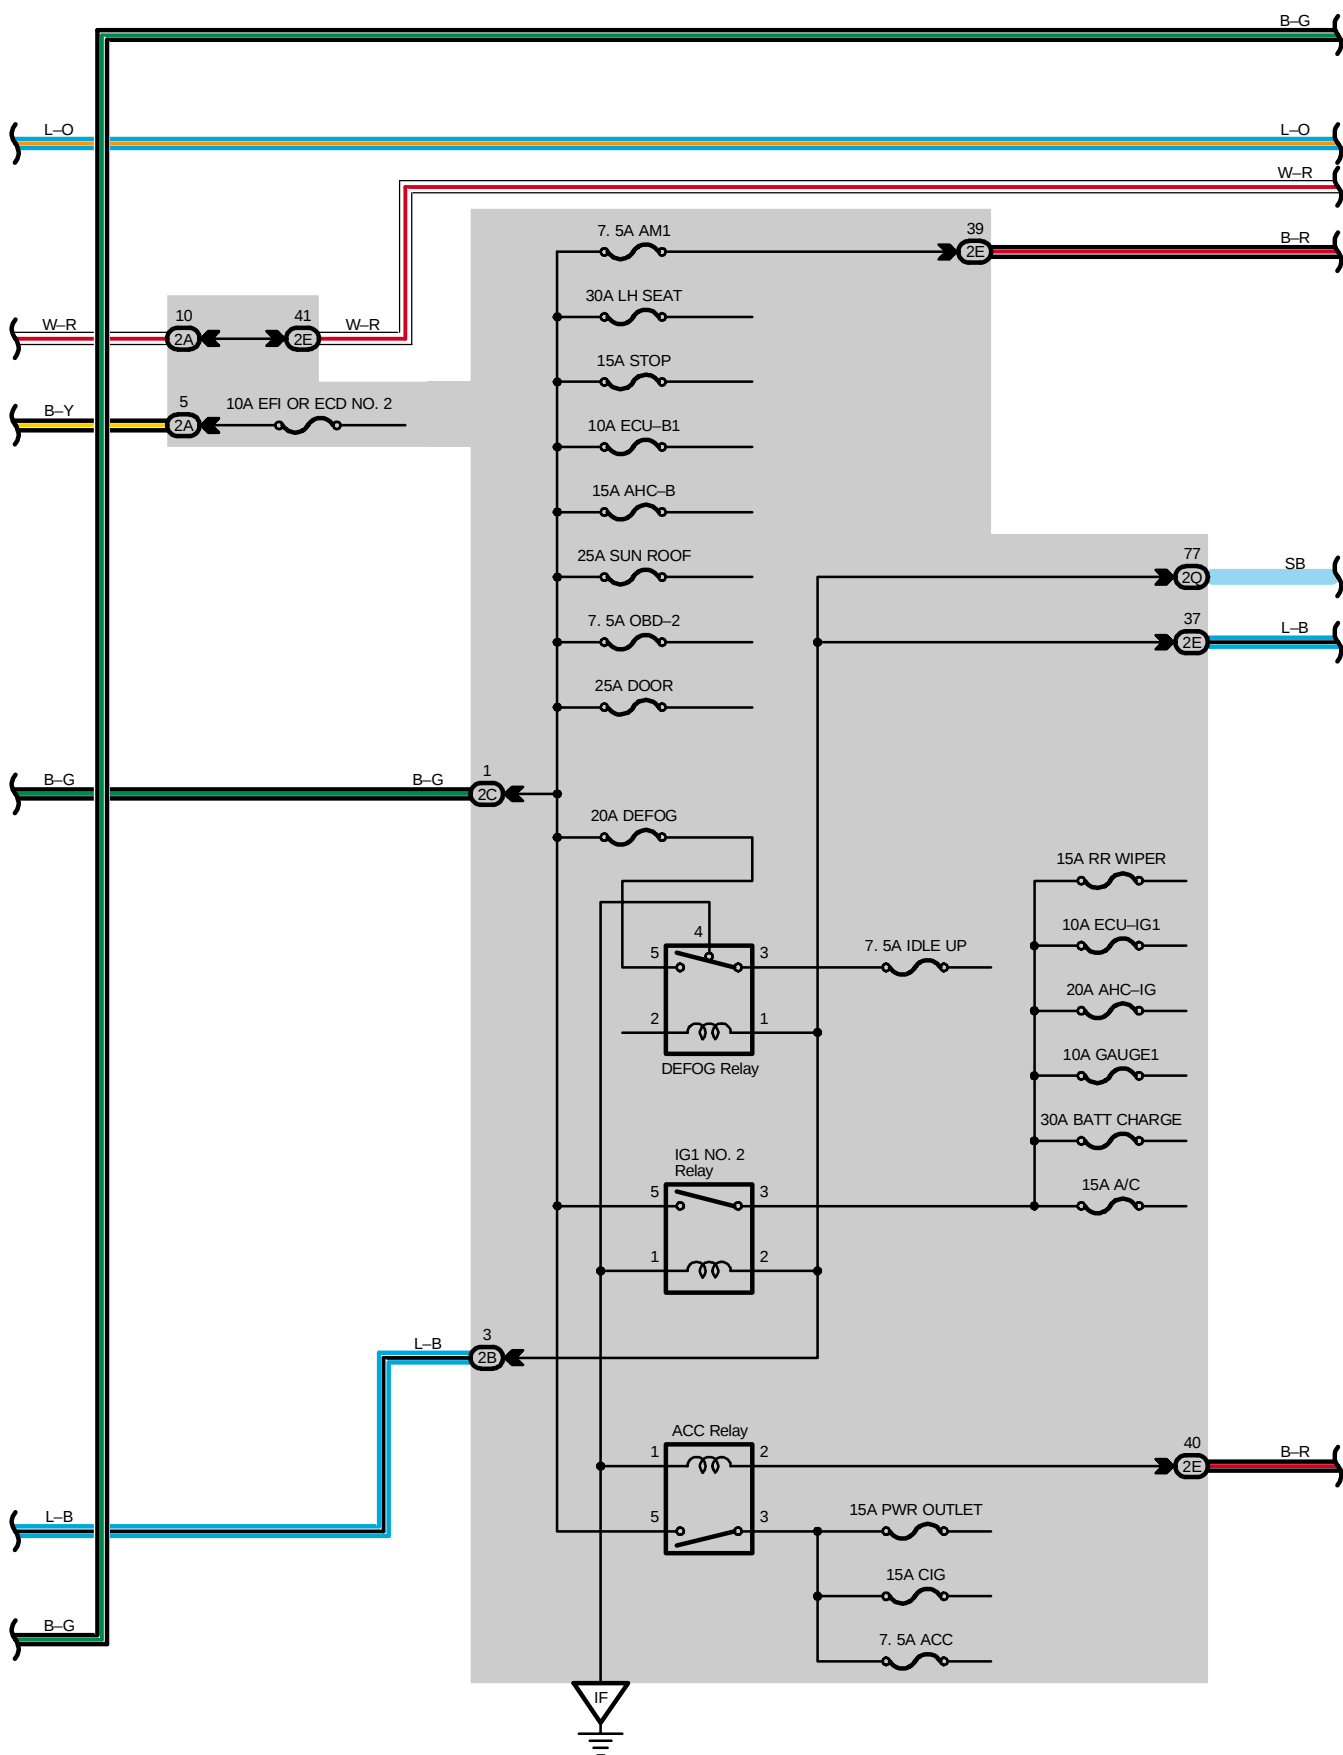

Power Source

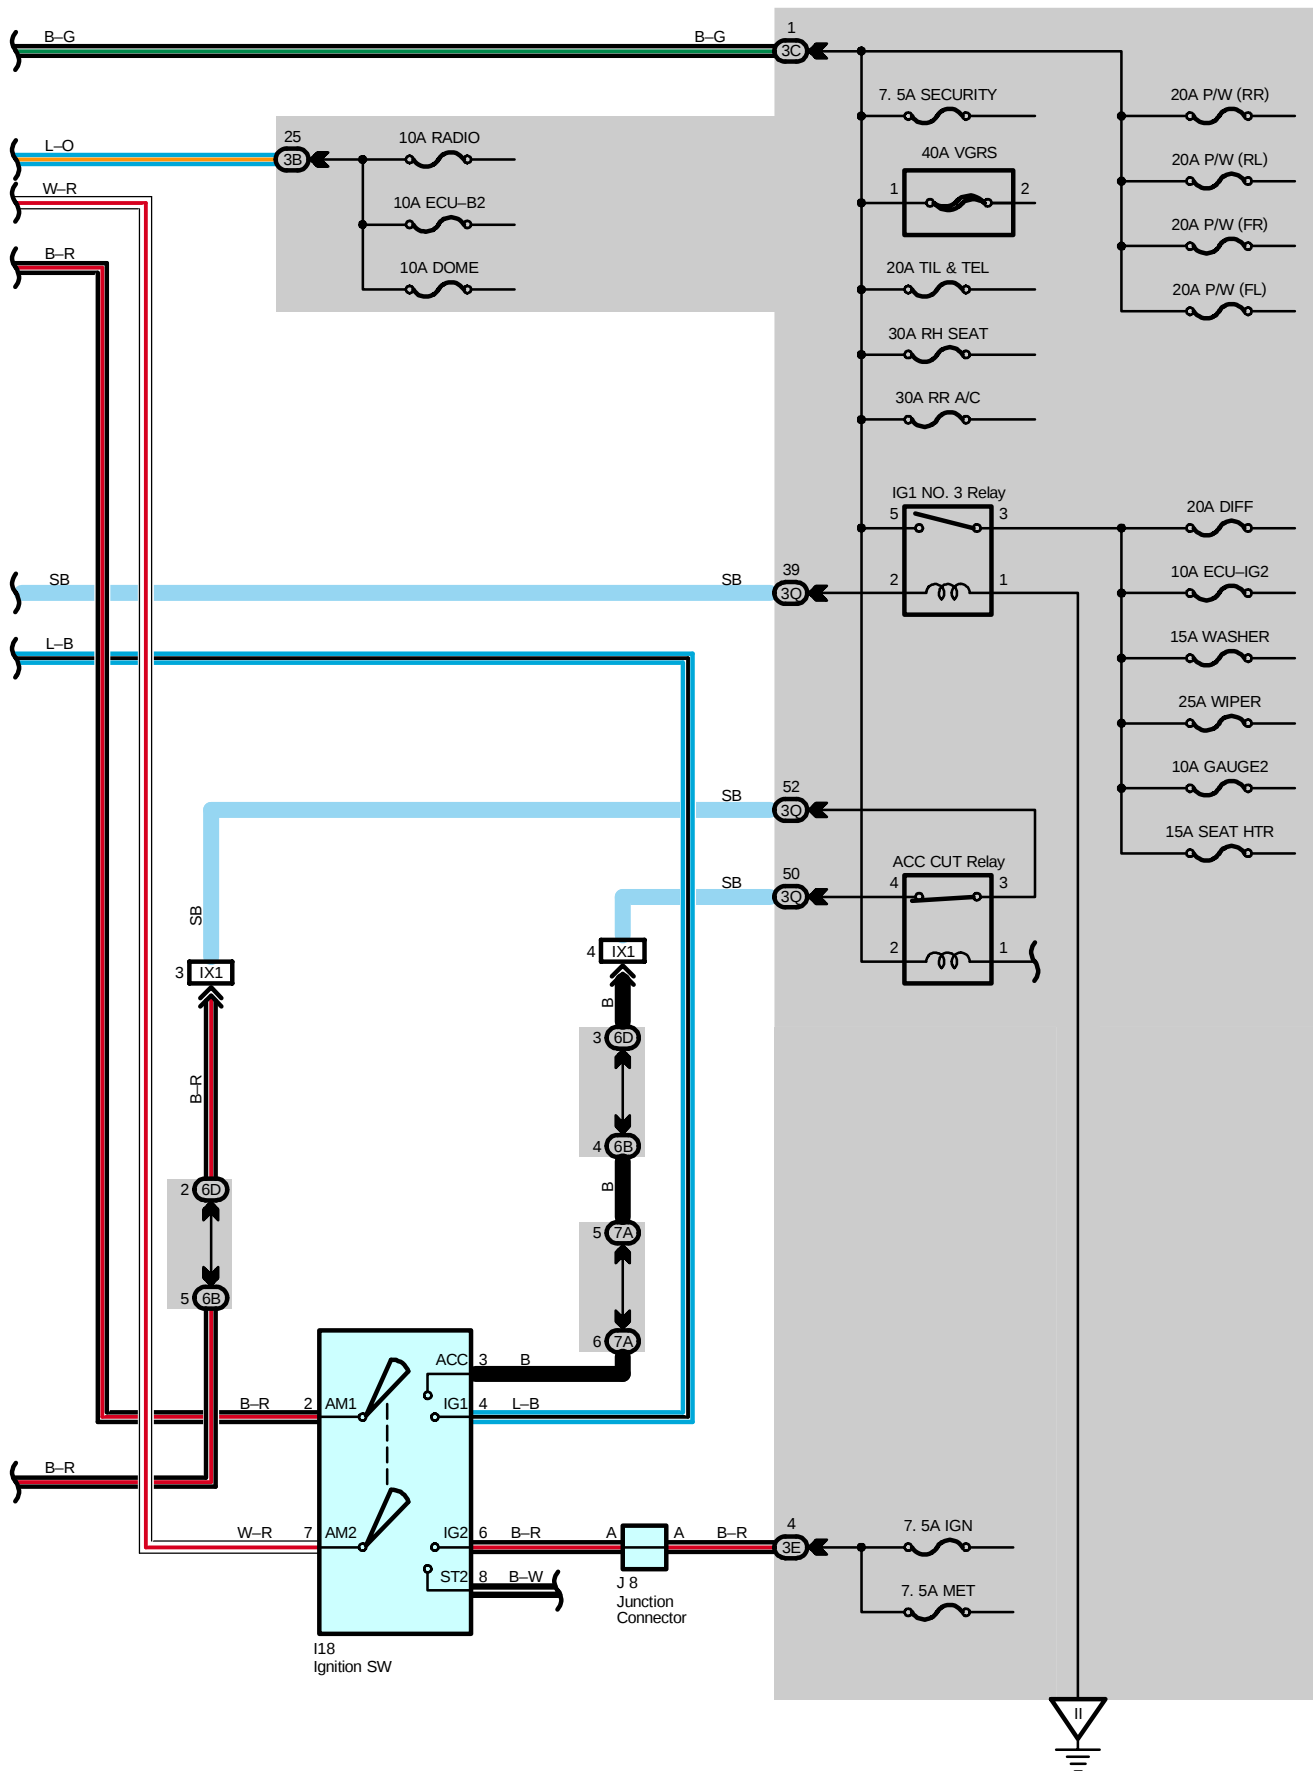

Service Hints

I18 Ignition SW

- 2-3 : Closed with ignition SW at ACC or ON position
- 2-4 : Closed with ignition SW at ON or ST position
- 7-6 : Closed with ignition SW at ON or ST position
- 7-8 : Closed with ignition SW at ST position

: Parts Location

Code		See Page	Code		See Page	Code		See Page
F16	A	68	F19	D	68	J8	72	
F17	B	68	F20	E	68			
F18	C	68	I18		71			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2B		
2C		
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3C		
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
6B	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6D	60	Engine Wire and J/B No.6 (Behind the Grove Box)
7A	64	Dash Wire and J/B No.7 (Behind the Grove Box)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
EE	78	Front Left Side of Fender Apron
IF	80	Set Bolt of Cowl Side J/B LH
II	80	Set Bolt of Cowl Side J/B RH