


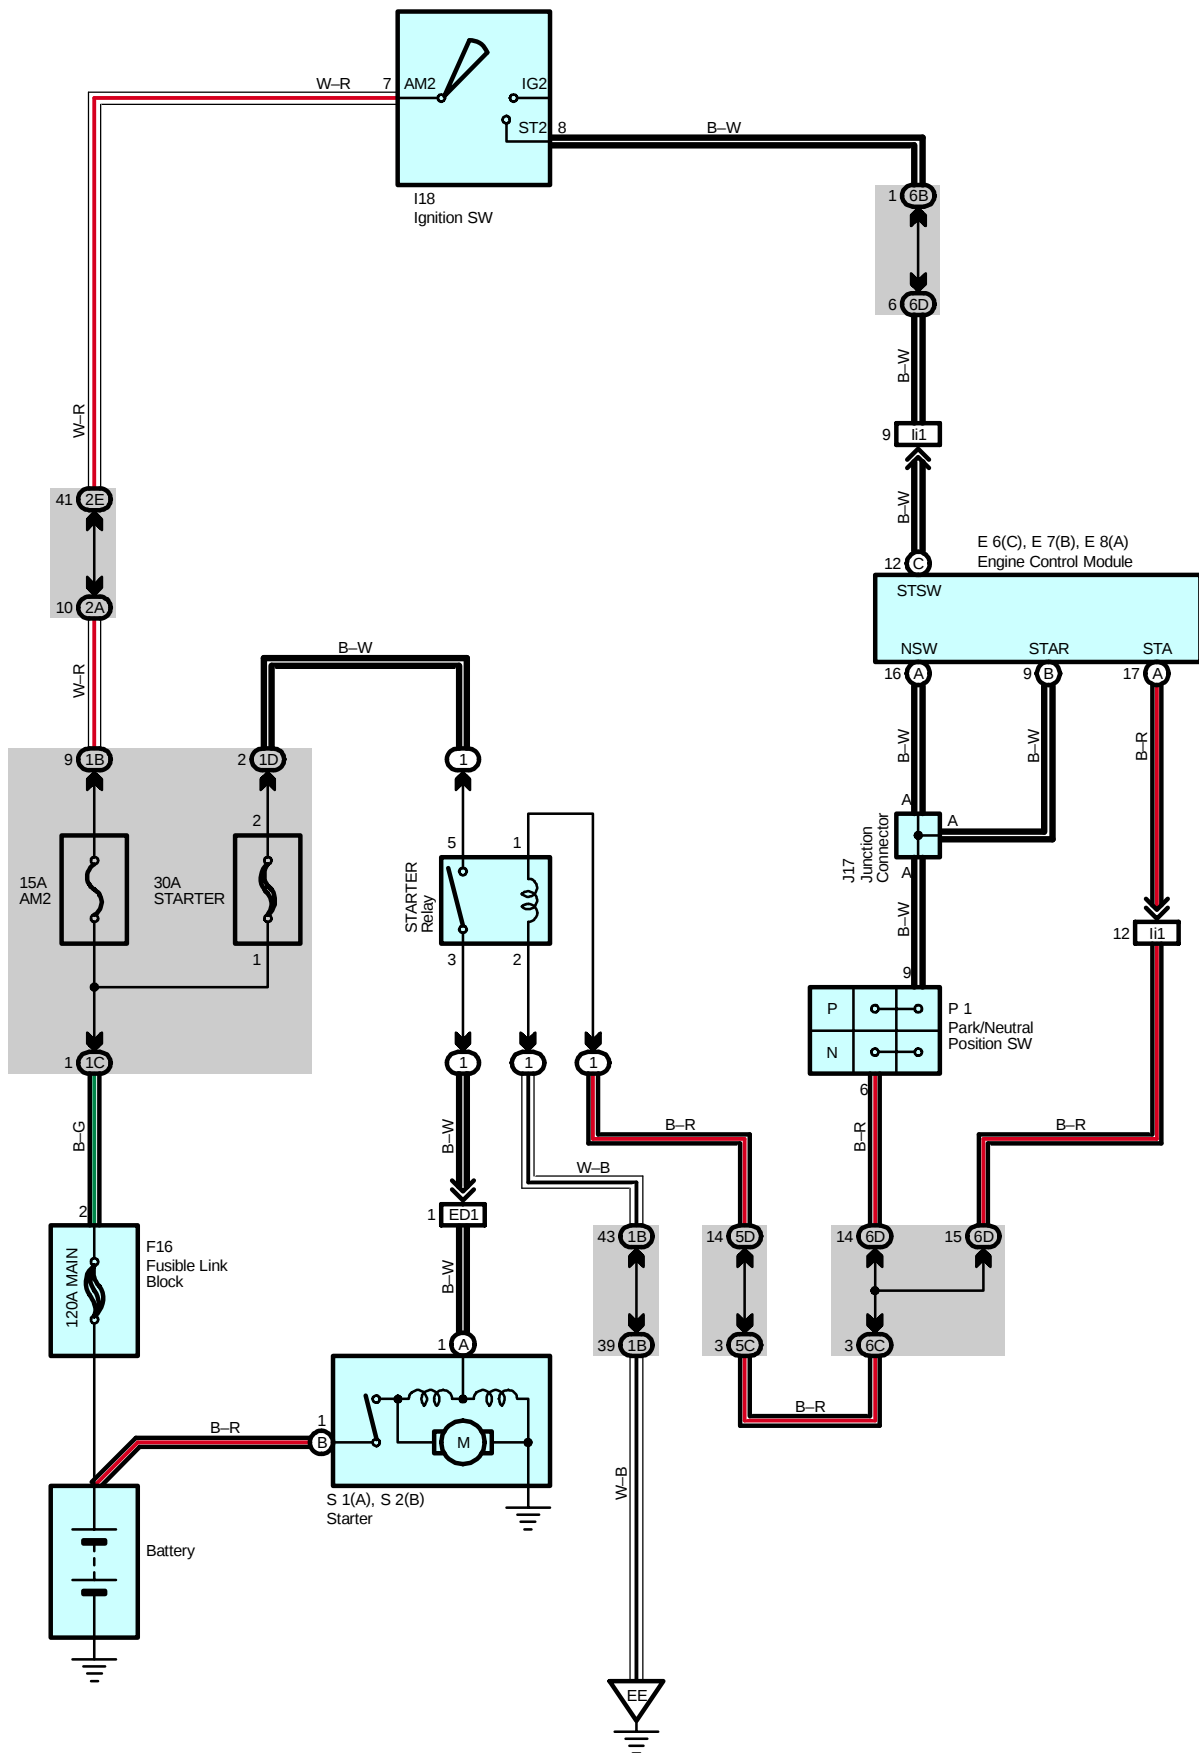

## Service Hints

### I18 Ignition SW

7-8 : Closed with ignition SW at ST position

### P1 Park/Neutral Position SW

6-9 : Closed with A/T shift lever in P or N position

### S1 (A), S2 (B) Starter

Points closed with Park/Neutral position SW at P or N position and ignition SW at ST position

## : Parts Location

| Code |   | See Page | Code |    | See Page | Code |   | See Page |
|------|---|----------|------|----|----------|------|---|----------|
| E6   | C | 71       | F16  | 68 |          | P1   |   | 69       |
| E7   | B | 71       | I18  | 71 |          | S1   | A | 69       |
| E8   | A | 71       | J17  | 72 |          | S2   | B | 69       |

## : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)       |
|------|----------|-------------------------------------------|
| 1    | 22       | Engine Room R/B (Engine Compartment Left) |

## : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                |
|------|----------|---------------------------------------------------------------------|
| 1B   | 24       | Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left) |
| 1C   |          |                                                                     |
| 1D   |          |                                                                     |
| 2A   | 28       | Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)        |
| 2E   | 28       | Dash Wire and Cowl Side J/B LH (Left Kick Panel)                    |
| 5C   | 56       | Dash Wire and J/B No.5 (Behind the Combination Meter)               |
| 5D   | 56       | Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)   |
| 6B   | 60       | Dash Wire and J/B No.6 (Behind the Grove Box)                       |
| 6C   |          |                                                                     |
| 6D   | 60       | Engine Wire and J/B No.6 (Behind the Grove Box)                     |

## : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)            |
|------|----------|-----------------------------------------------------------------------|
| ED1  | 78       | Engine No.2 Wire and Engine Room No.2 Wire (Near the Engine Room J/B) |
| I11  | 88       | Engine Wire and Engine Wire (Behind the Glove Box)                    |

## : Ground Points

| Code | See Page | Ground Points Location          |
|------|----------|---------------------------------|
| EE   | 78       | Front Left Side of Fender Apron |