



Headlight (w/o Daytime Running Light)

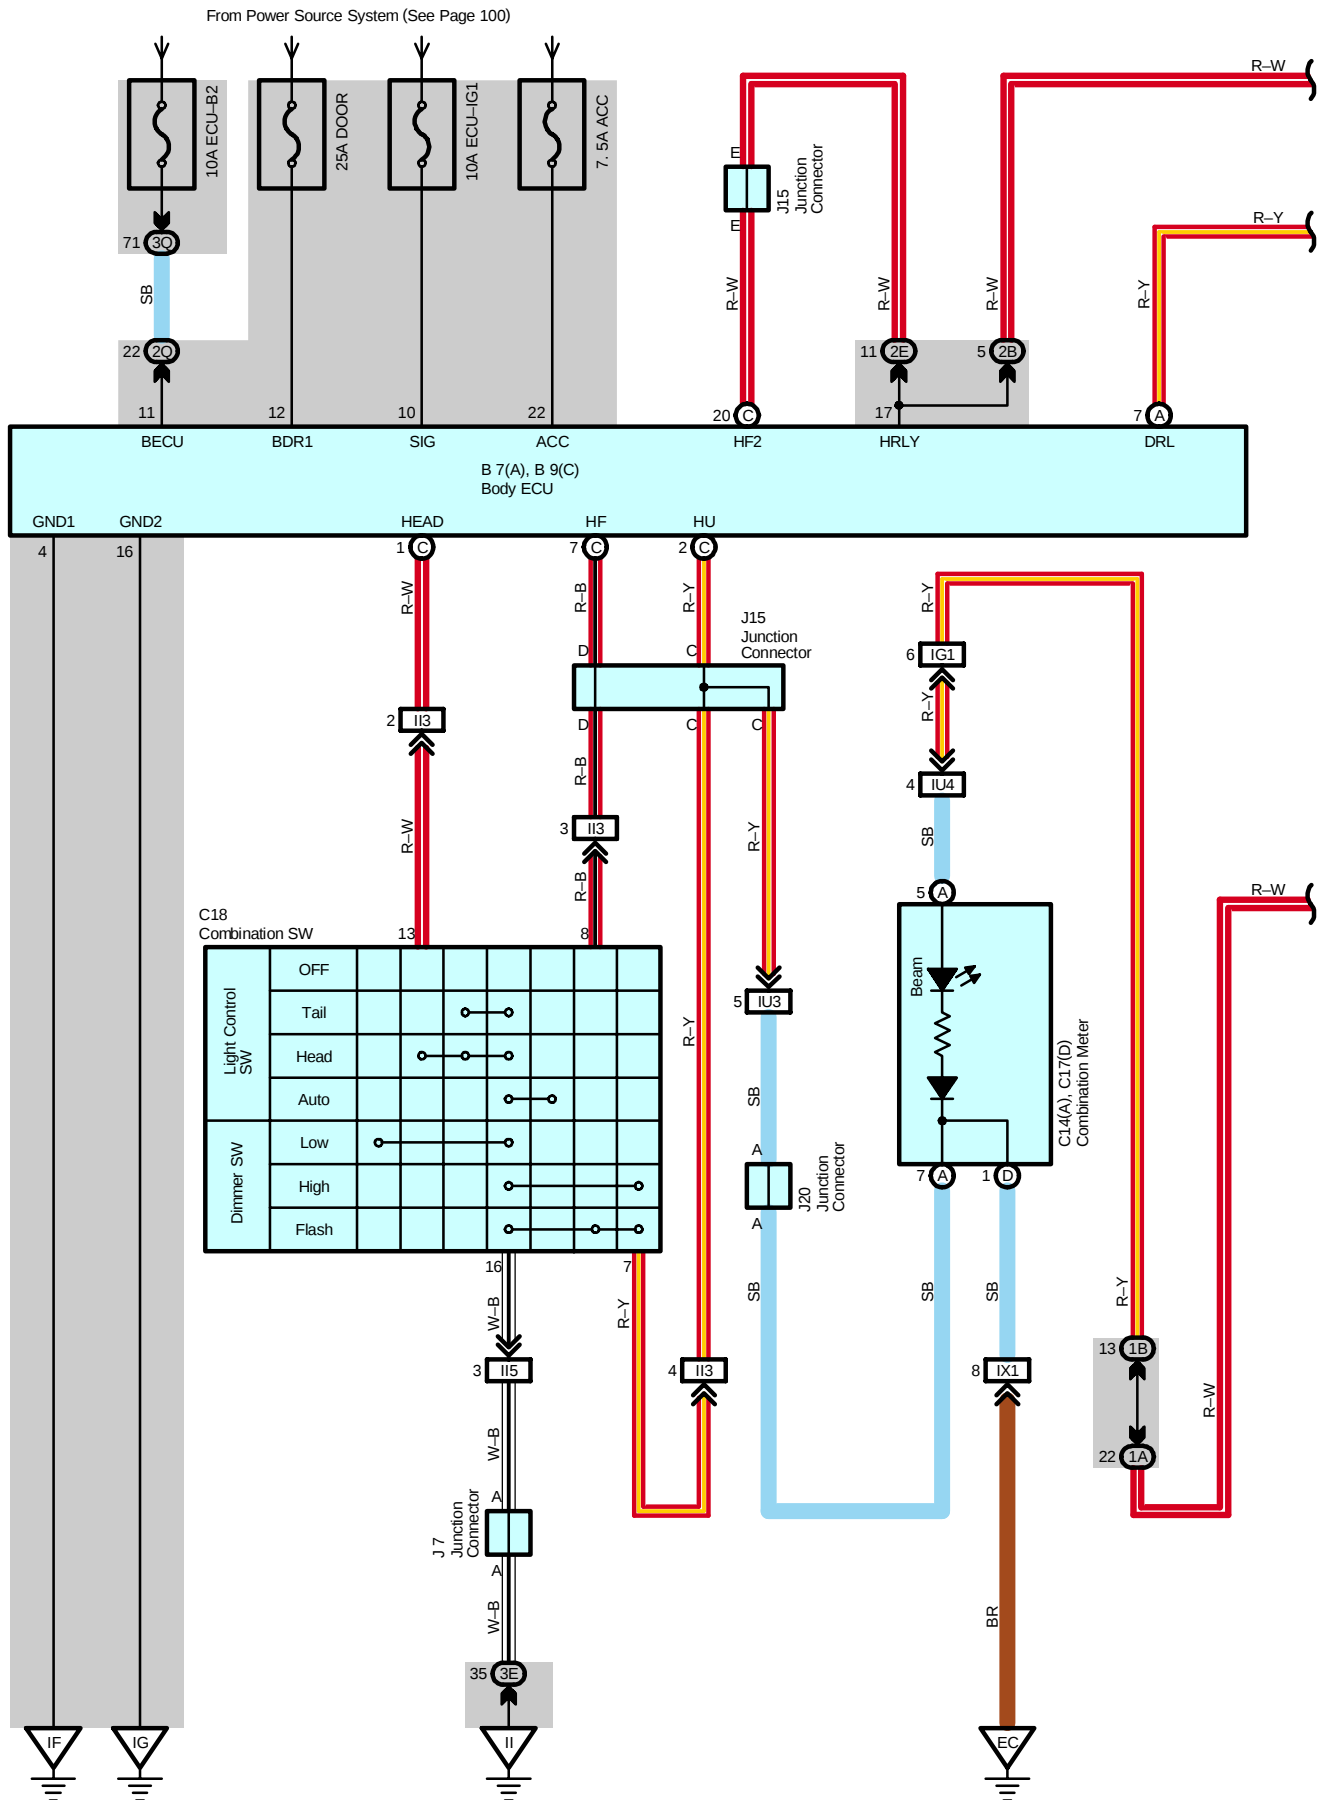

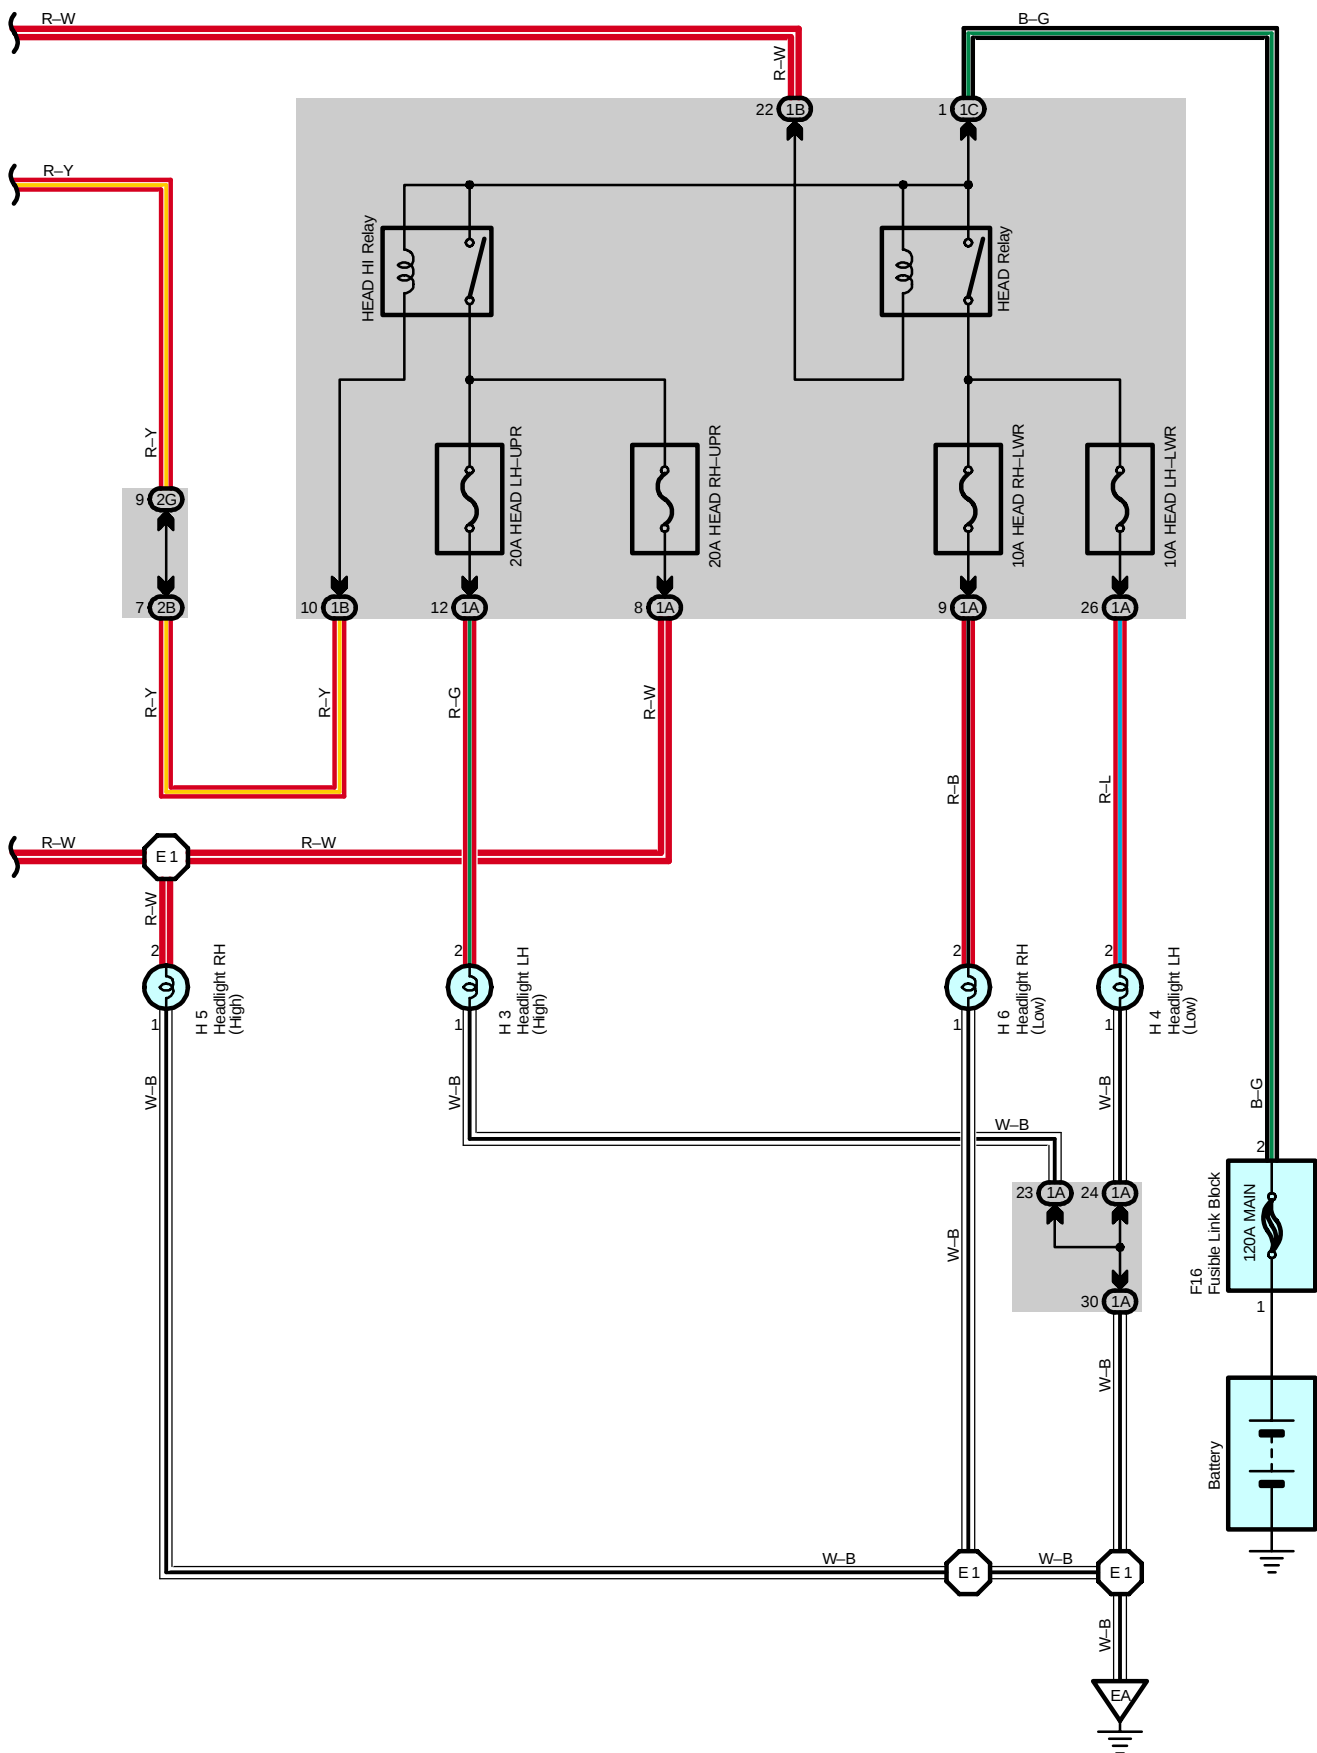

Headlight (w/o Daytime Running Light)

Service Hints

C18 Combination SW

- 13-16 : Closed with light control SW at HEAD position
- 8-16 : Closed with dimmer SW at FLASH position
- 7-16 : Closed with dimmer SW at HIGH or FLASH position

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
B7	A	70	F16	68	J7	72
B9	C	70	H3	69	J15	72
C14	A	71	H4	69	J20	72
C17	D	71	H5	69		
C18		71	H6	69		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2G		
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	82	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
II3	82	Dash Wire and Column Wire (Near the Ignition SW)
II5		
IU3	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	78	Front Right Side of Fender Apron
EC	78	Rear Bank of Right Cylinder Head
IF	80	Set Bolt of Cowl Side J/B LH
IG		
II	80	Set Bolt of Cowl Side J/B RH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	78	Engine Room Main Wire			

