





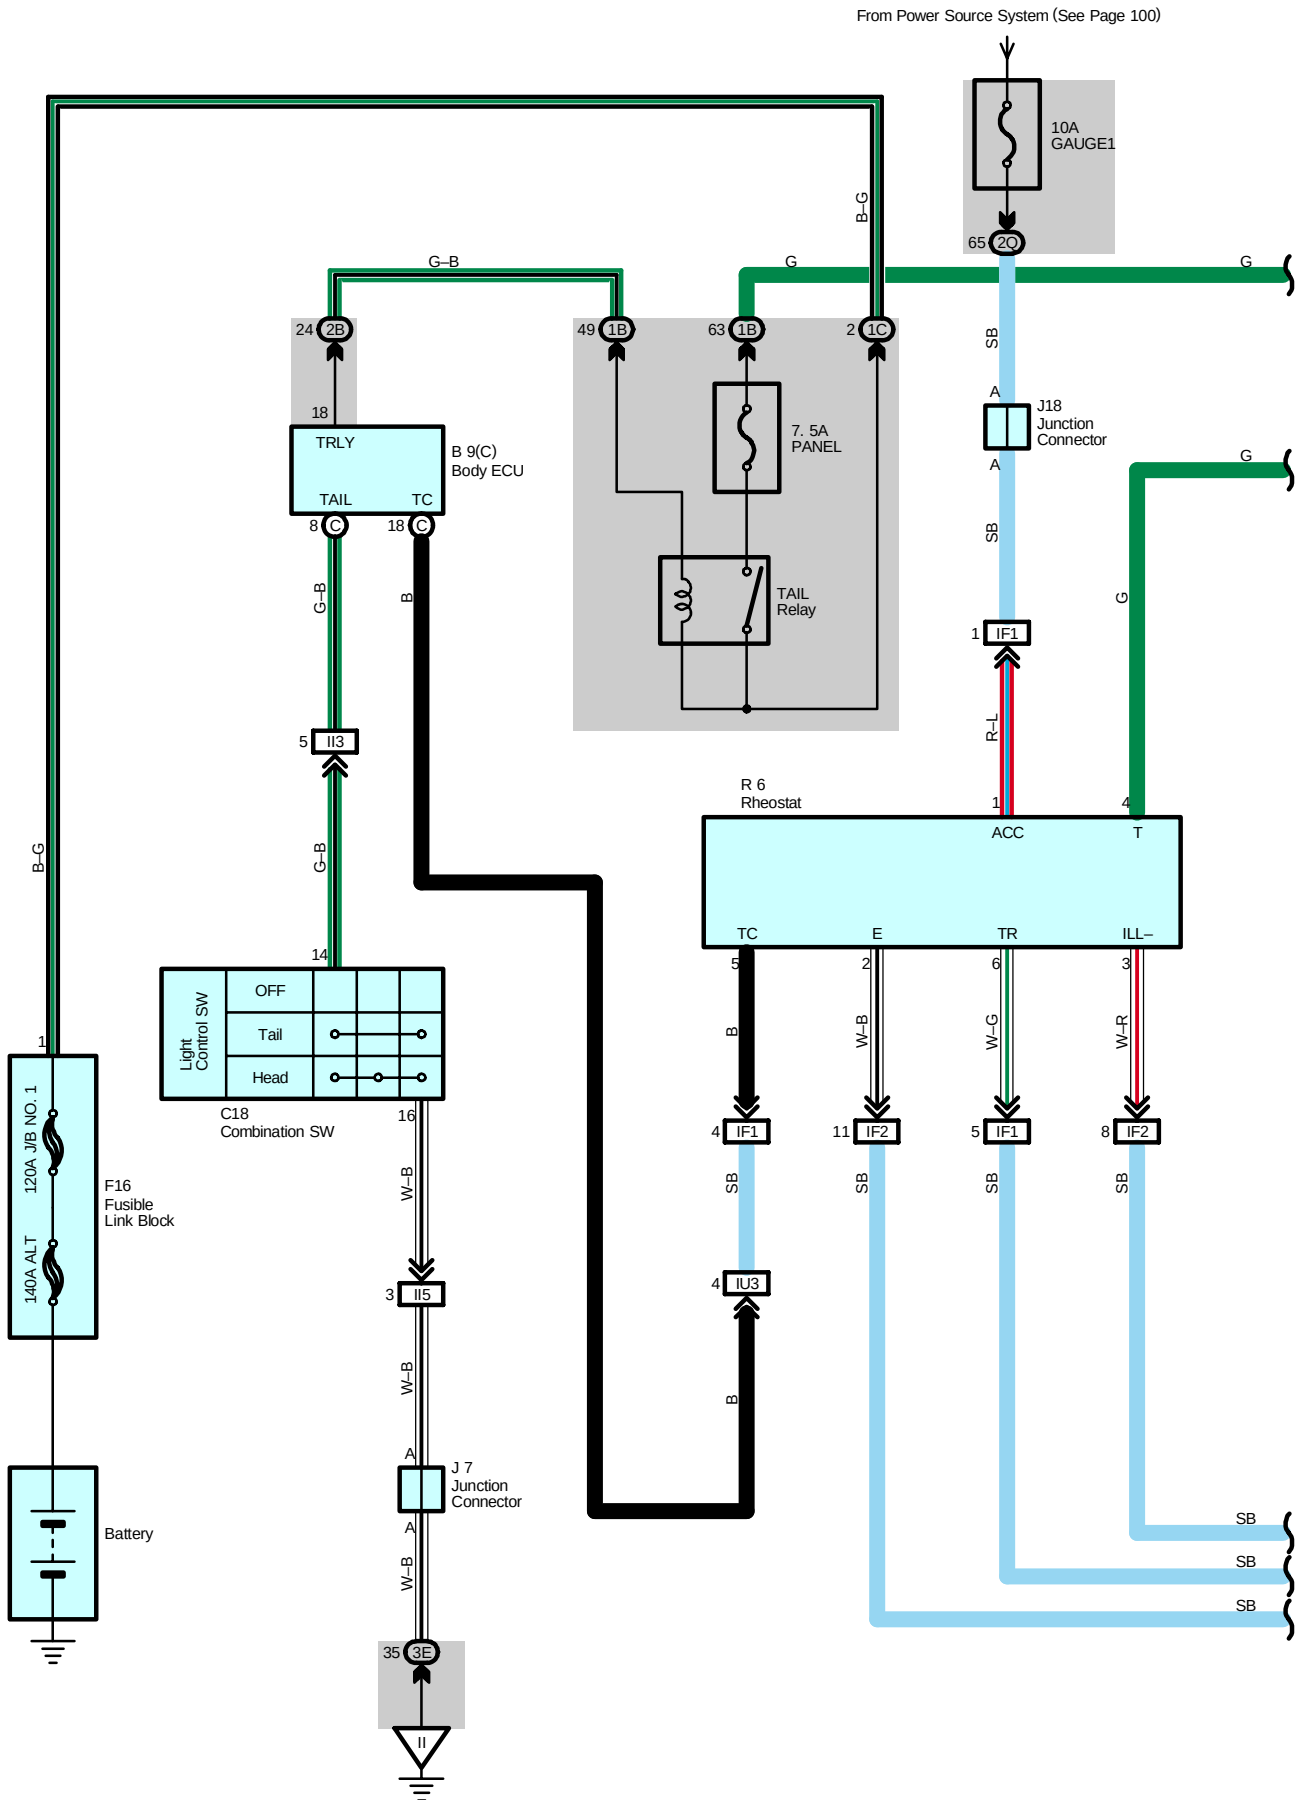

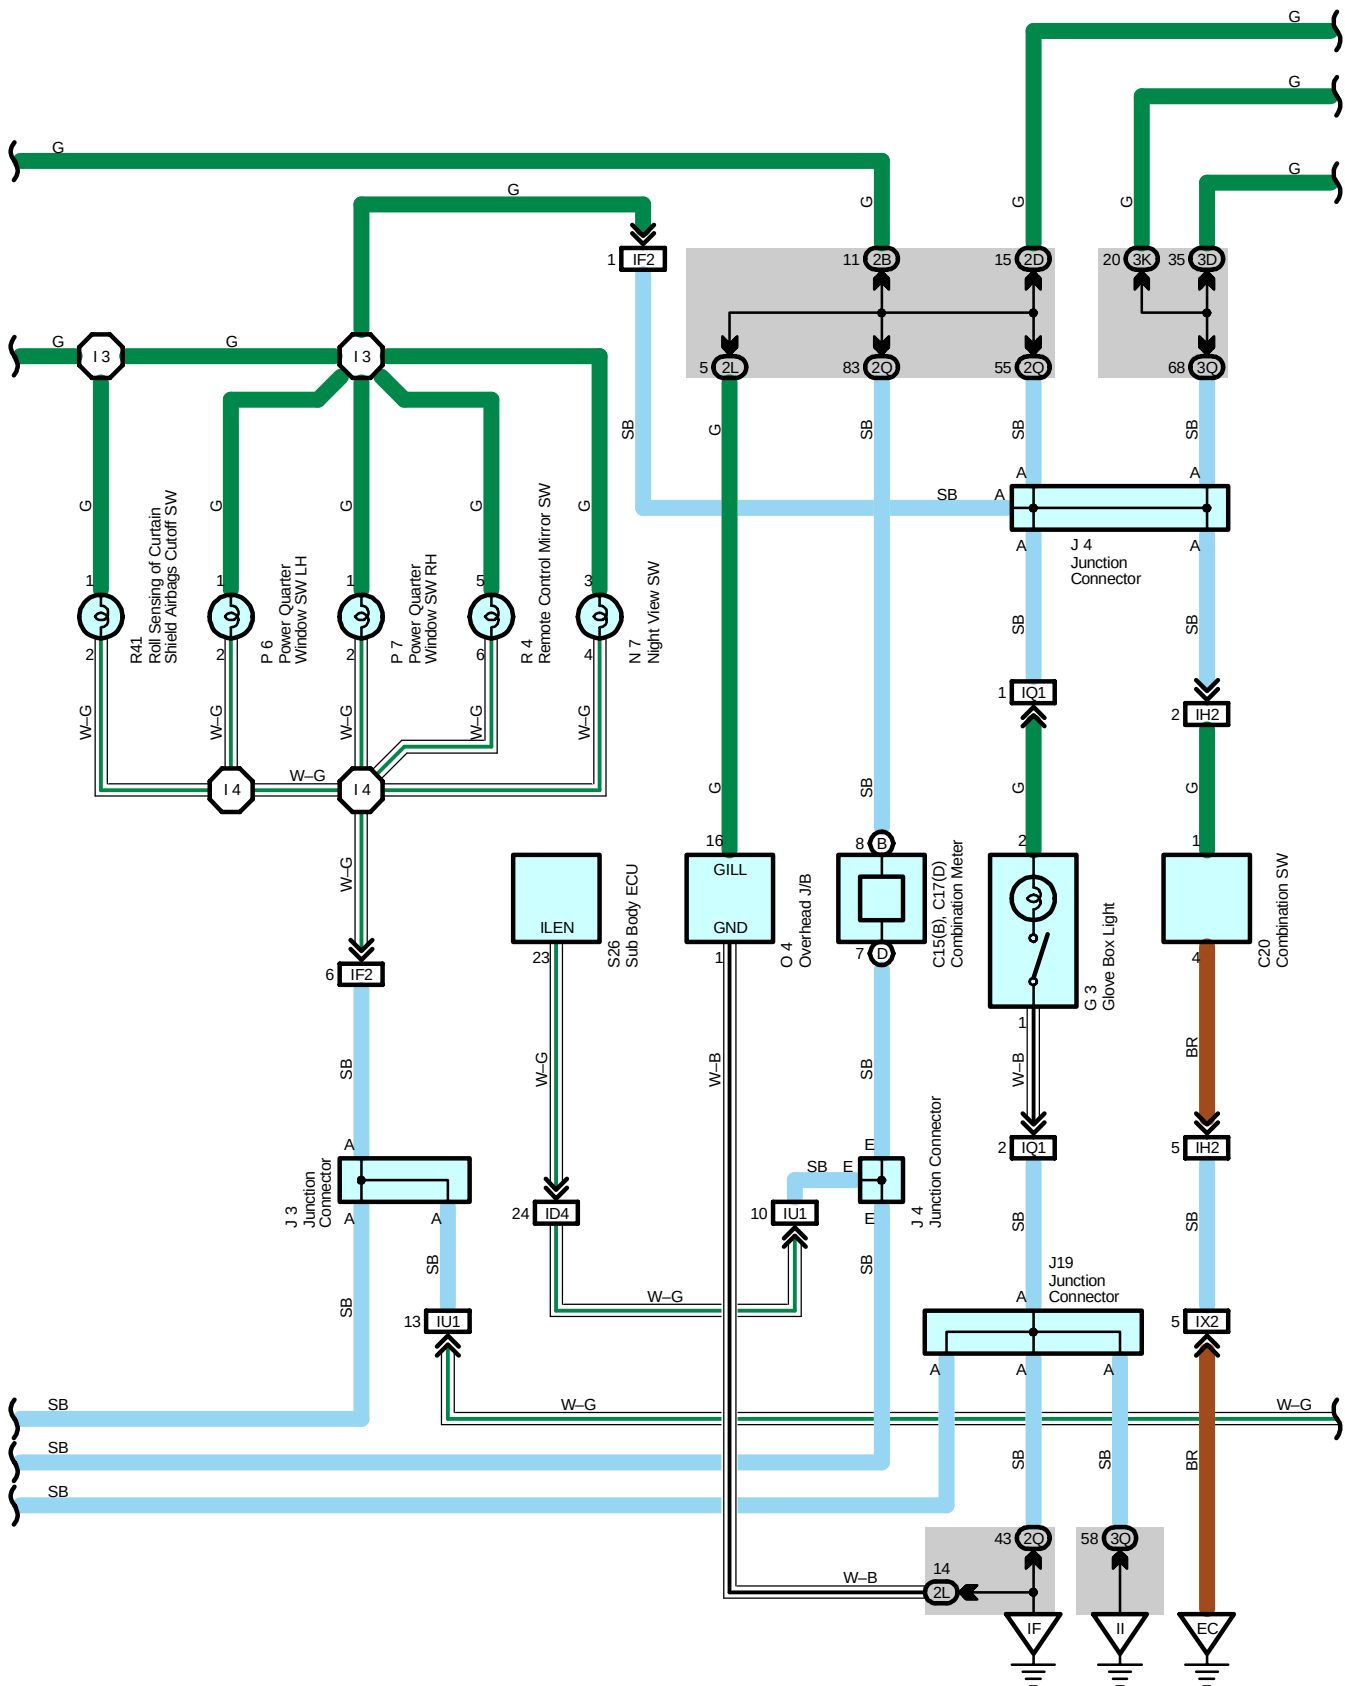

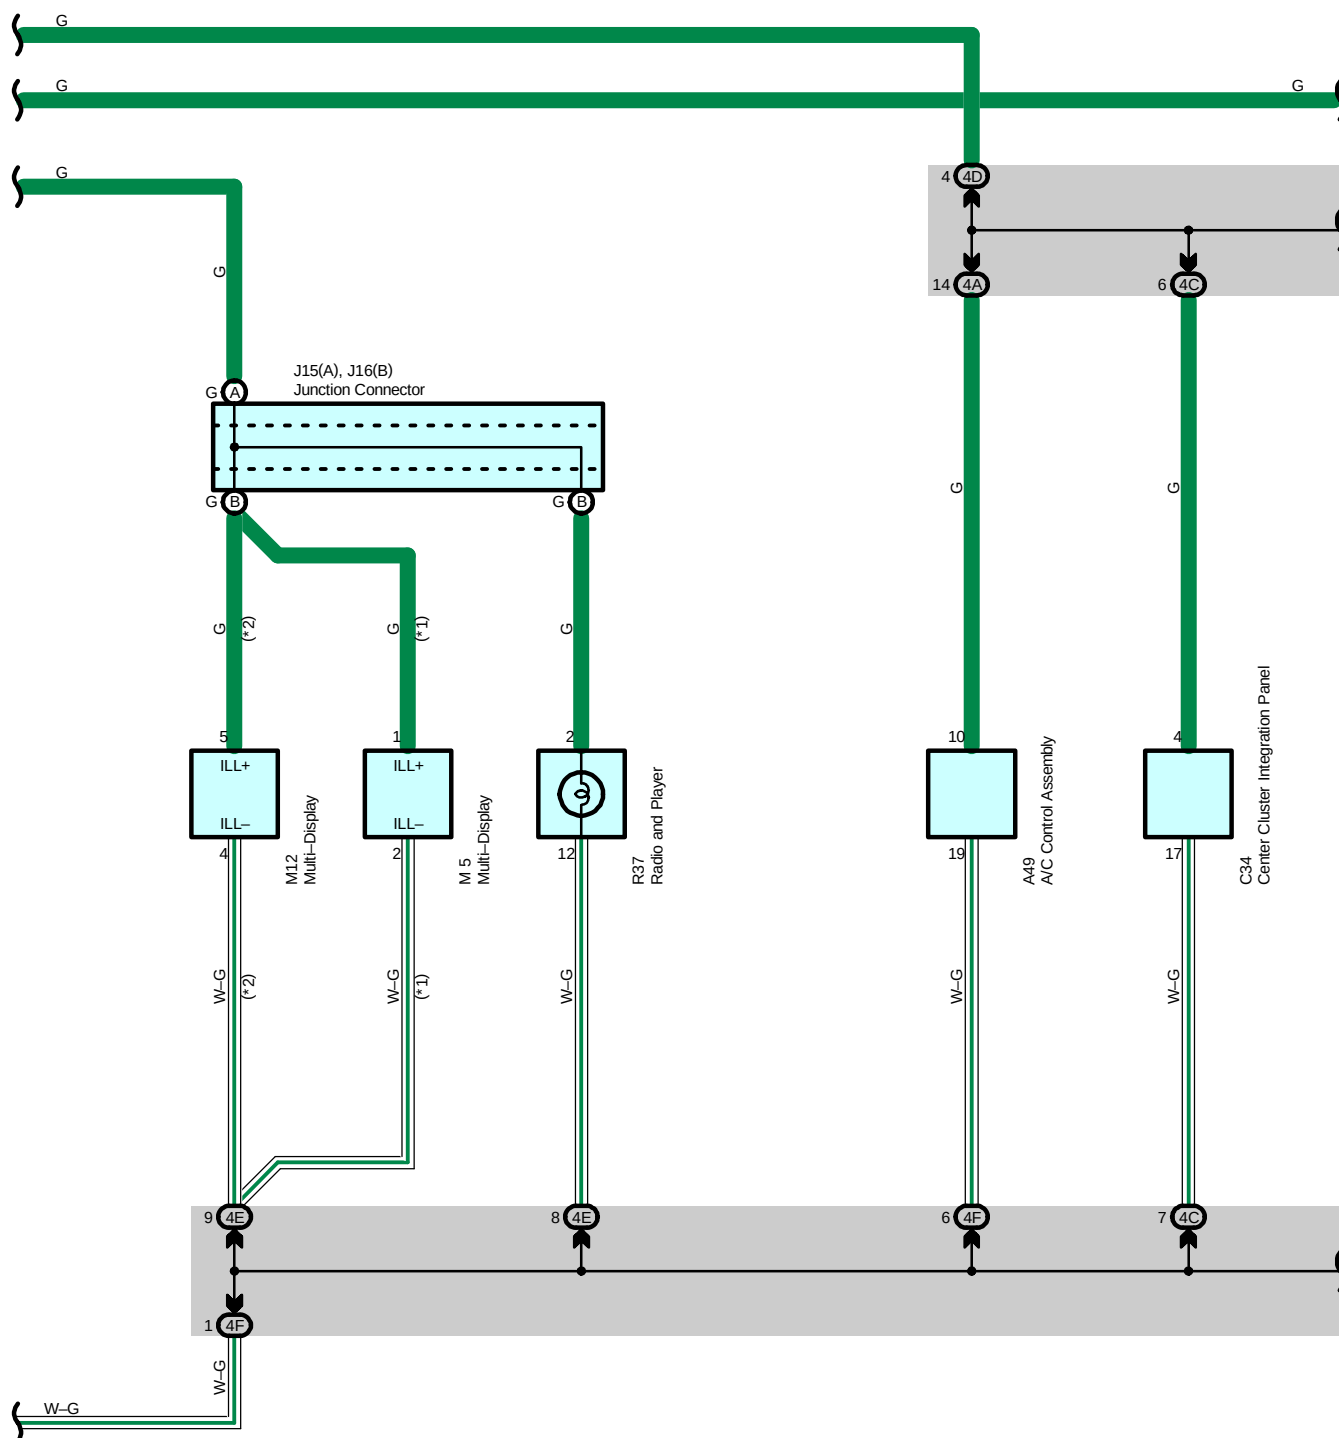

- * 1 : w/ LEXUS Navigation System
- * 2 : w/o LEXUS Navigation System

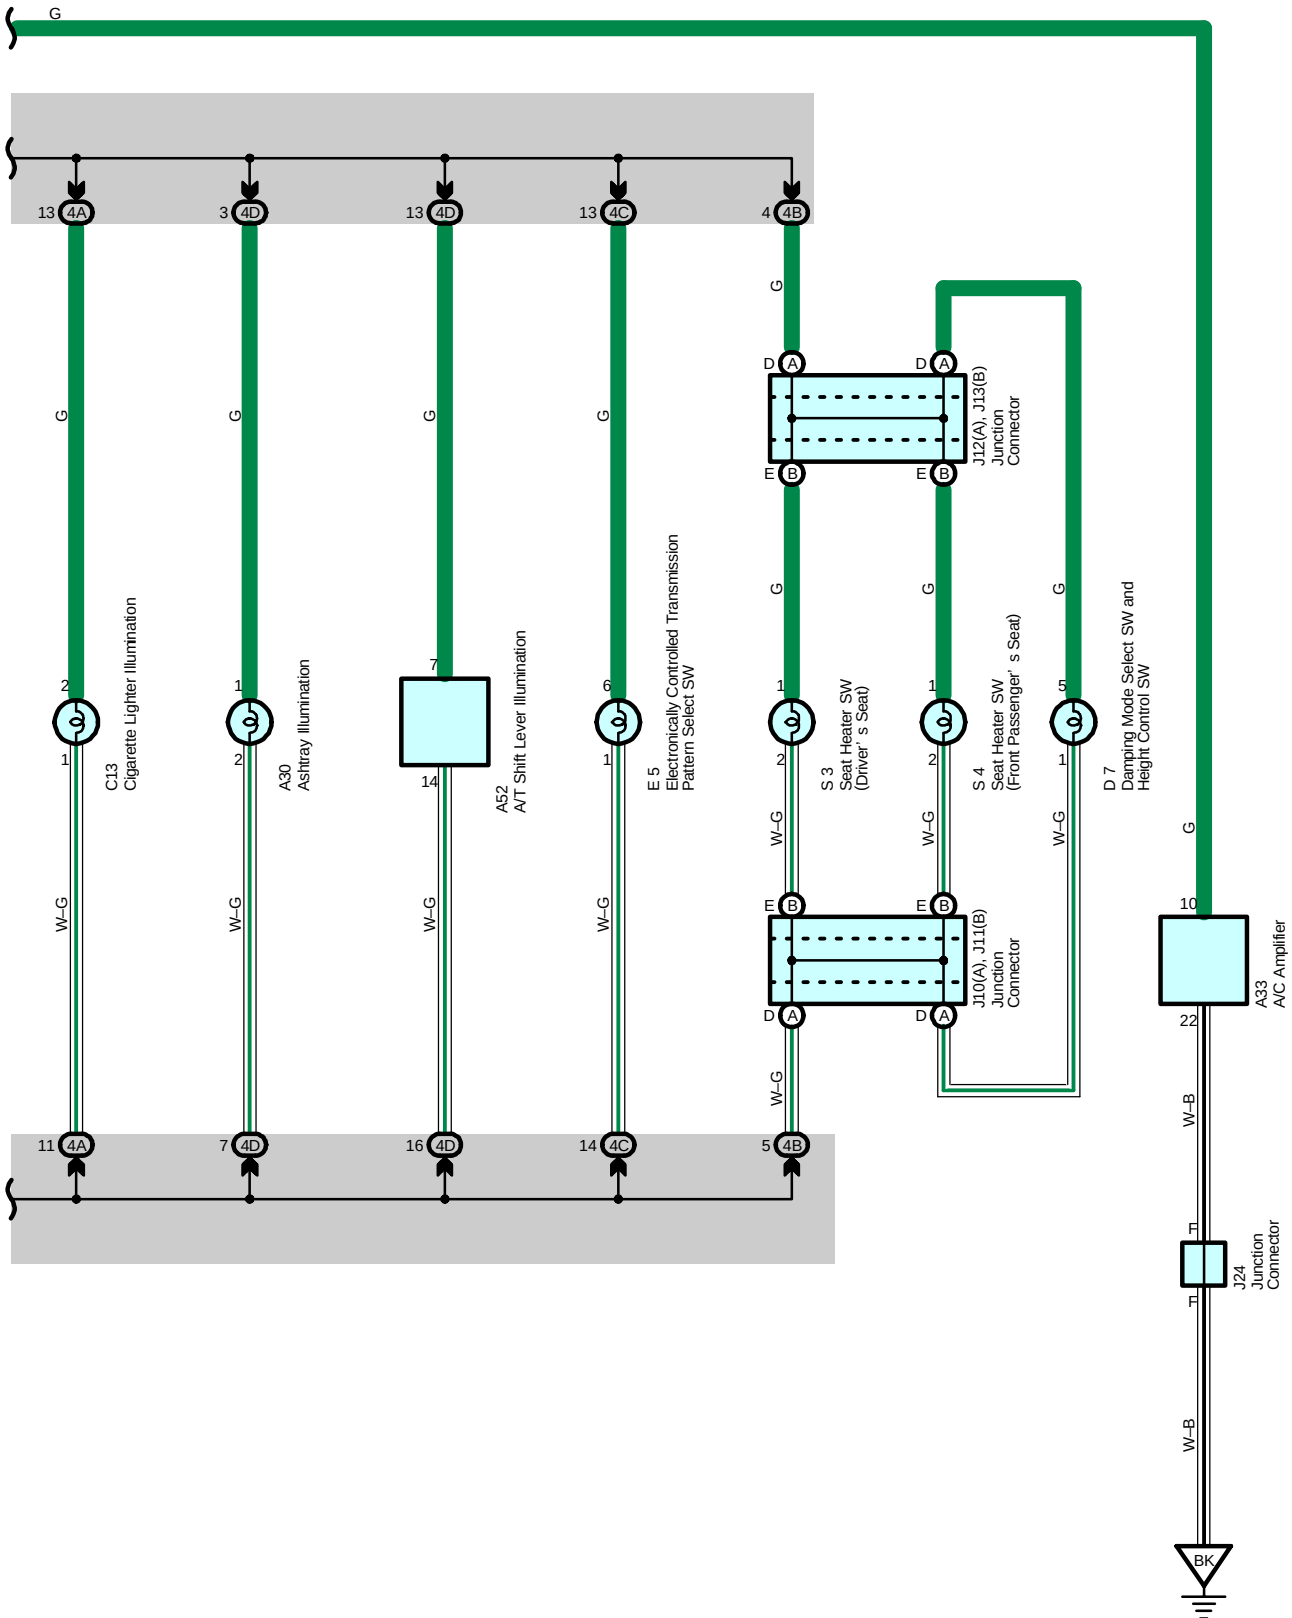

Service Hints

C18 Combination SW

14–16 : Closed with light control SW at TAIL or HEAD position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A30	70	G3	71	M12	72
A33	74	J3	72	N7	72
A49	70	J4	72	O4	74
A52	70	J7	72	P6	73
B9	70	J10	72	P7	73
C13	71	J11	72	R4	73
C15	71	J12	72	R6	73
C17	71	J13	72	R37	73
C18	71	J15	72	R41	73
C20	71	J16	72	S3	73
C34	71	J18	72	S4	73
D7	71	J19	72	S26	75
E5	71	J24	74		
F16	68	M5	72		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2L	28	Roof No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4B		
4C		
4D		
4E		
4F		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID4	80	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IF1	80	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
IH2	82	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II3	82	Dash Wire and Column Wire (Near the Ignition SW)
II5		
IQ1	84	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IU1	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU3		
IX2	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)

**: Ground Points**

Code	See Page	Ground Points Location
EC	78	Rear Bank of Right Cylinder Head
IF	80	Set Bolt of Cowl Side J/B LH
II	80	Set Bolt of Cowl Side J/B RH
BK	90	Front Side Under the Front Passenger's Seat

**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	82	Instrument Panel Wire	I4	82	Instrument Panel Wire