


Power Outlet

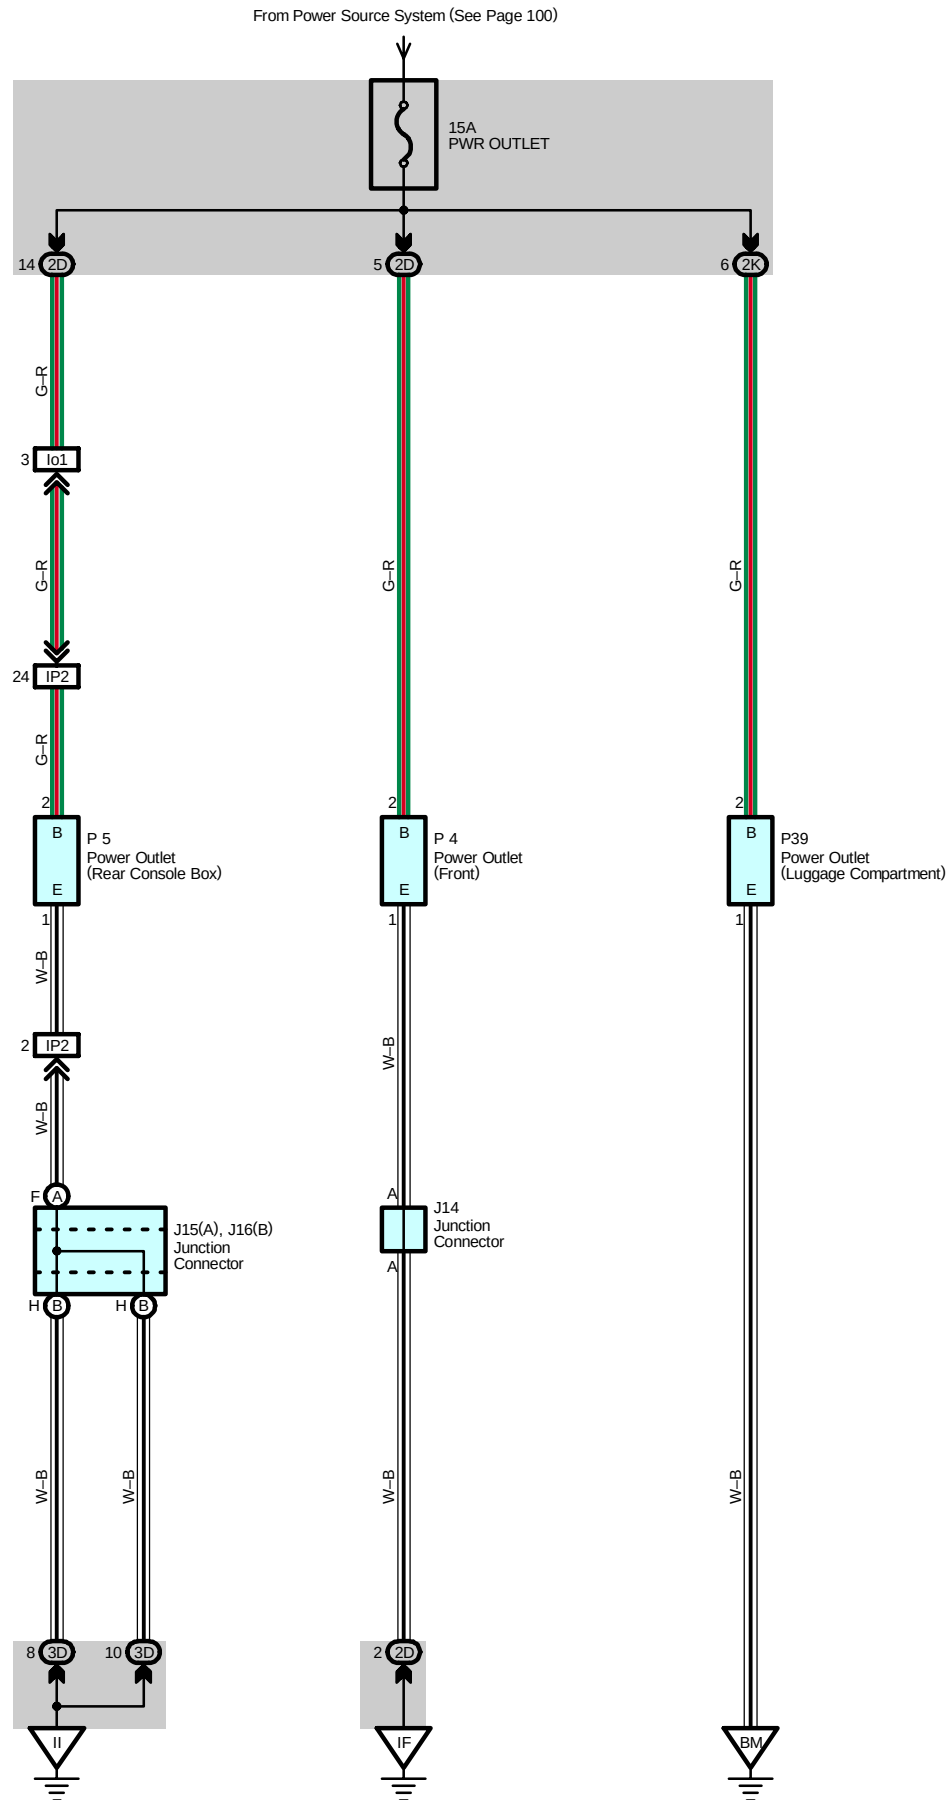

Service Hints

P4 Power Outlet (Front)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

P5 Power Outlet (Rear Console Box)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

P39 Power Outlet (Luggage Compartment)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J14	72	J16	B	P5	73
J15	A	P4	73	P39	75

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IP2	84	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
Io1	88	Dash Wire and Dash Wire (Center Side of Front Console)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH
II	80	Set Bolt of Cowl Side J/B RH
BM	90	Left Rear Side Quarter Panel