


From Power Source System (See Page 100)

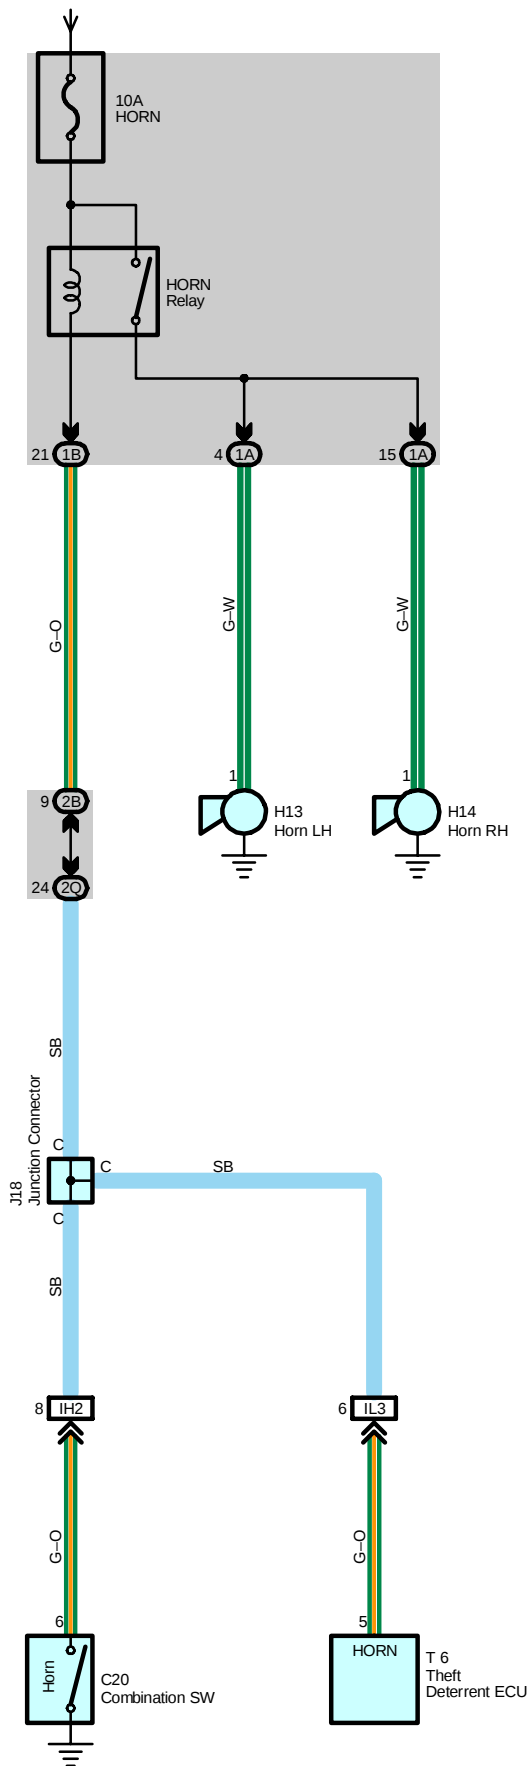

## Service Hints

### C20 Combination SW

6-Ground : Continuity with horn SW on

### : Parts Location

| Code | See Page           | Code | See Page           | Code | See Page           |
|------|--------------------|------|--------------------|------|--------------------|
| C20  | <a href="#">71</a> | H14  | <a href="#">69</a> | T6   | <a href="#">73</a> |
| H13  | <a href="#">69</a> | J18  | <a href="#">72</a> |      |                    |

### : Junction Block and Wire Harness Connector

| Code | See Page           | Junction Block and Wire Harness (Connector Location)                     |
|------|--------------------|--------------------------------------------------------------------------|
| 1A   | <a href="#">24</a> | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)      |
| 1B   | <a href="#">24</a> | Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)      |
| 2B   | <a href="#">28</a> | Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)             |
| 2Q   | <a href="#">30</a> | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel) |

### : Connector Joining Wire Harness and Wire Harness

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)                    |
|------|--------------------|-------------------------------------------------------------------------------|
| IH2  | <a href="#">82</a> | Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)      |
| IL3  | <a href="#">82</a> | Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center) |