


Power Rear Quarter Window

From Power Source System (See Page 100)

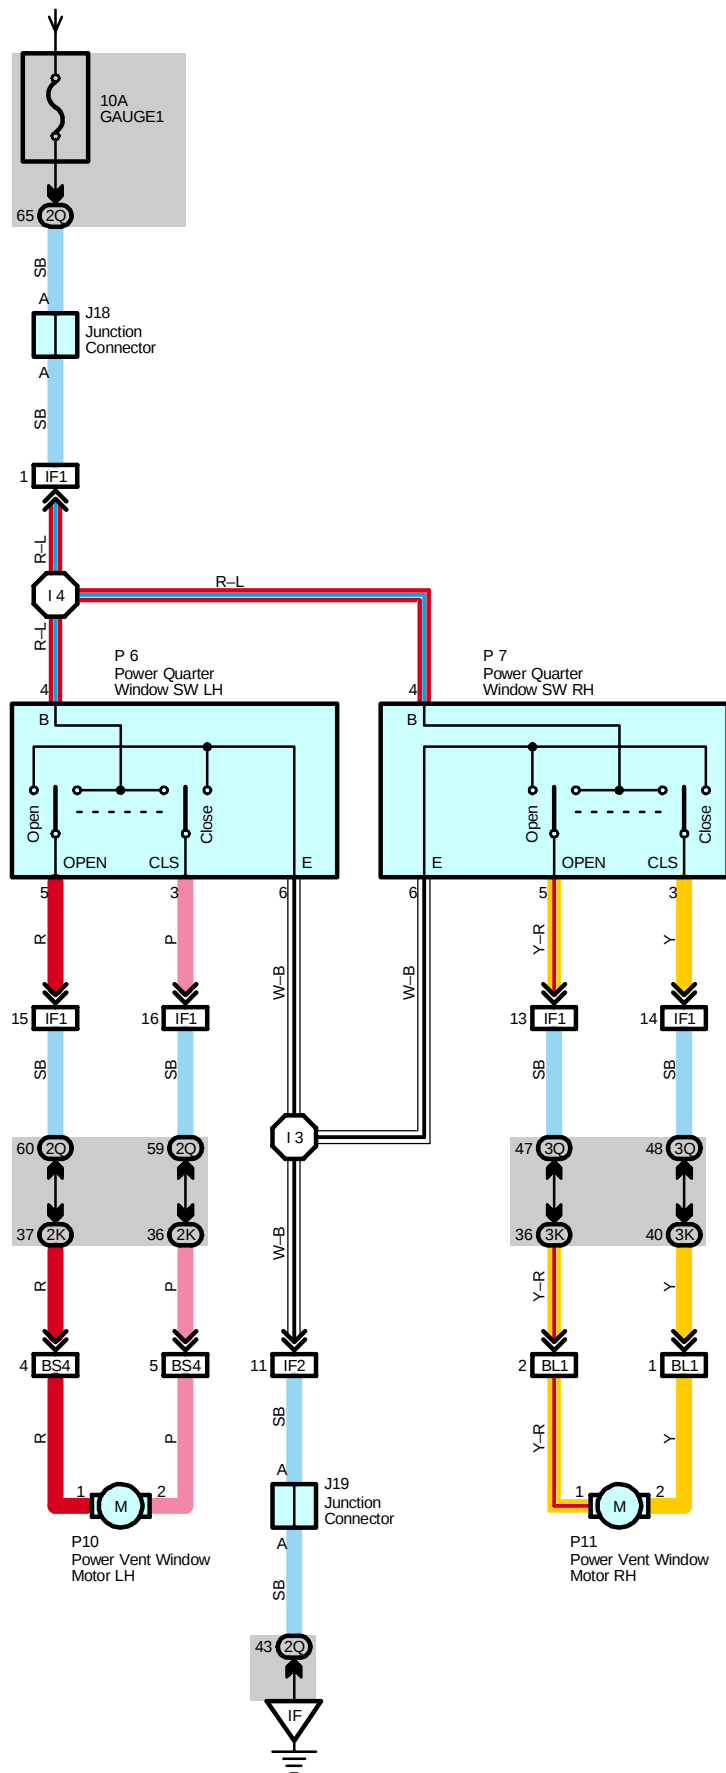

Service Hints

P6 Power Quarter Window SW LH

4-Ground : Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

P7 Power Quarter Window SW RH

4-Ground : Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J18	72	P6	73	P10	75
J19	72	P7	73	P11	75

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	80	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
BL1	92	Roof No.2 Wire and Floor No.2 Wire (Right Side Rear Quarter Panel)
BS4	94	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	82	Instrument Panel Wire	I4	82	Instrument Panel Wire