



Seat Heater

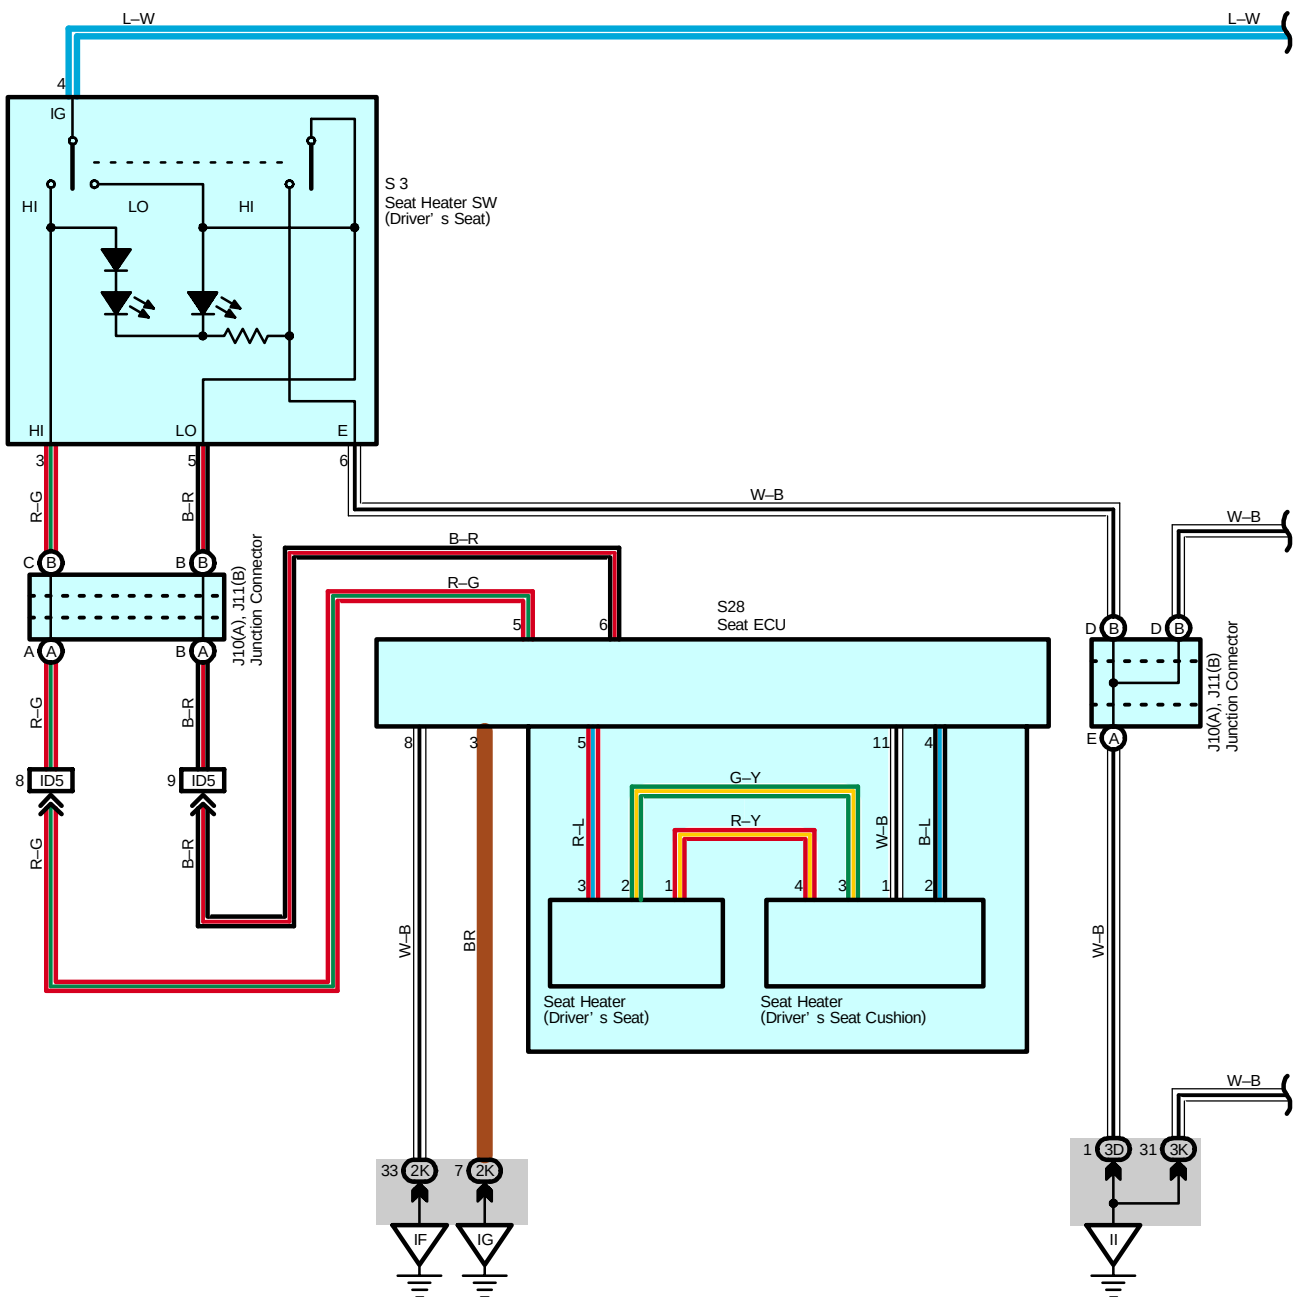

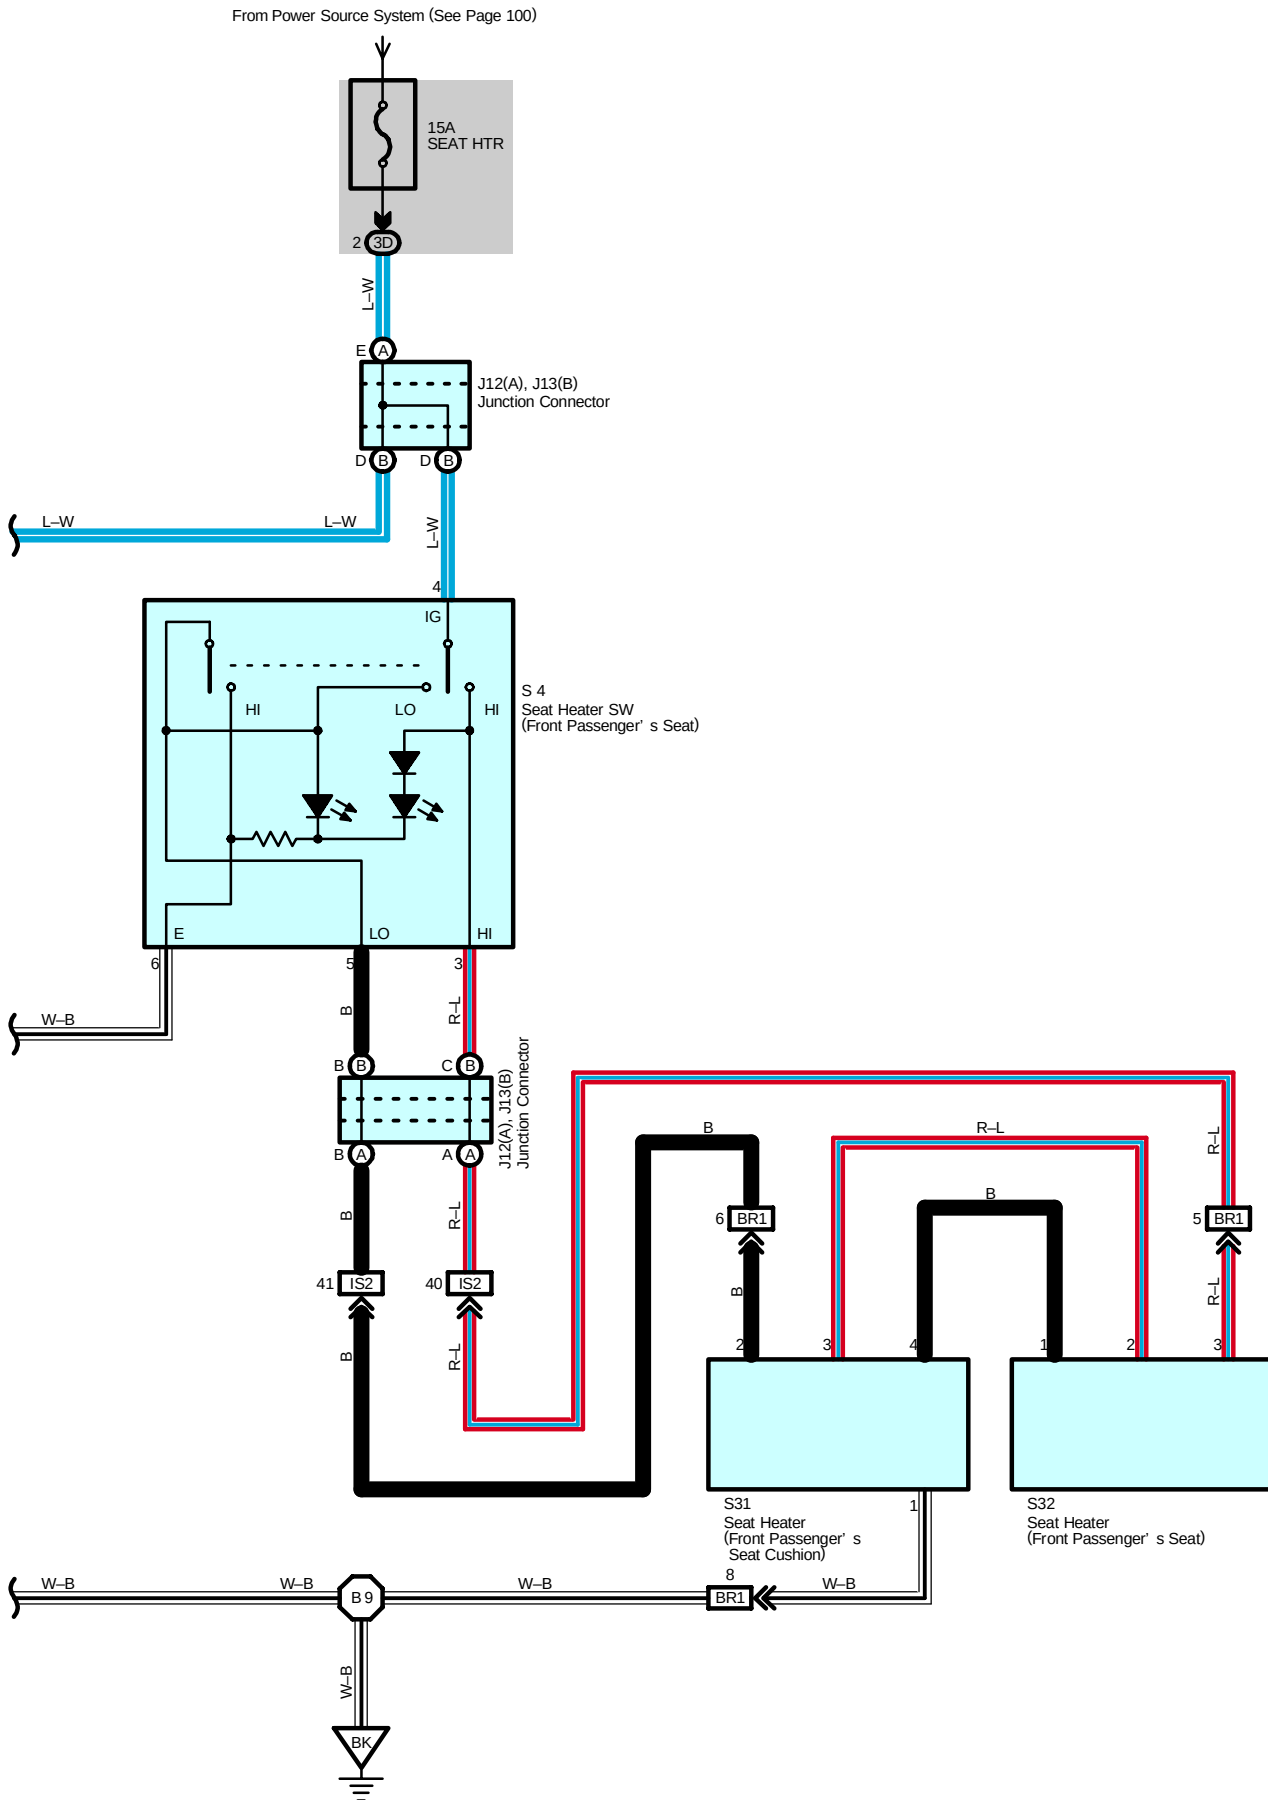

Seat Heater

Service Hints

S3 Seat Heater SW (Driver's Seat)

4-Ground : Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

S4 Seat Heater SW (Front Passenger's Seat)

4-Ground : Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J10	A 72	J13	B 72	S28	76
J11	B 72	S3	73	S31	76
J12	A 72	S4	73	S32	76

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID5	80	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IS2	84	Dash Wire and Floor No.2 Wire (Right Kick Panel)
BR1	96	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH
IG		
II	80	Set Bolt of Cowl Side J/B RH
BK	90	Front Side Under the Front Passenger's Seat

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B9	92	Floor No.2 Wire			

