


Mirror Heater

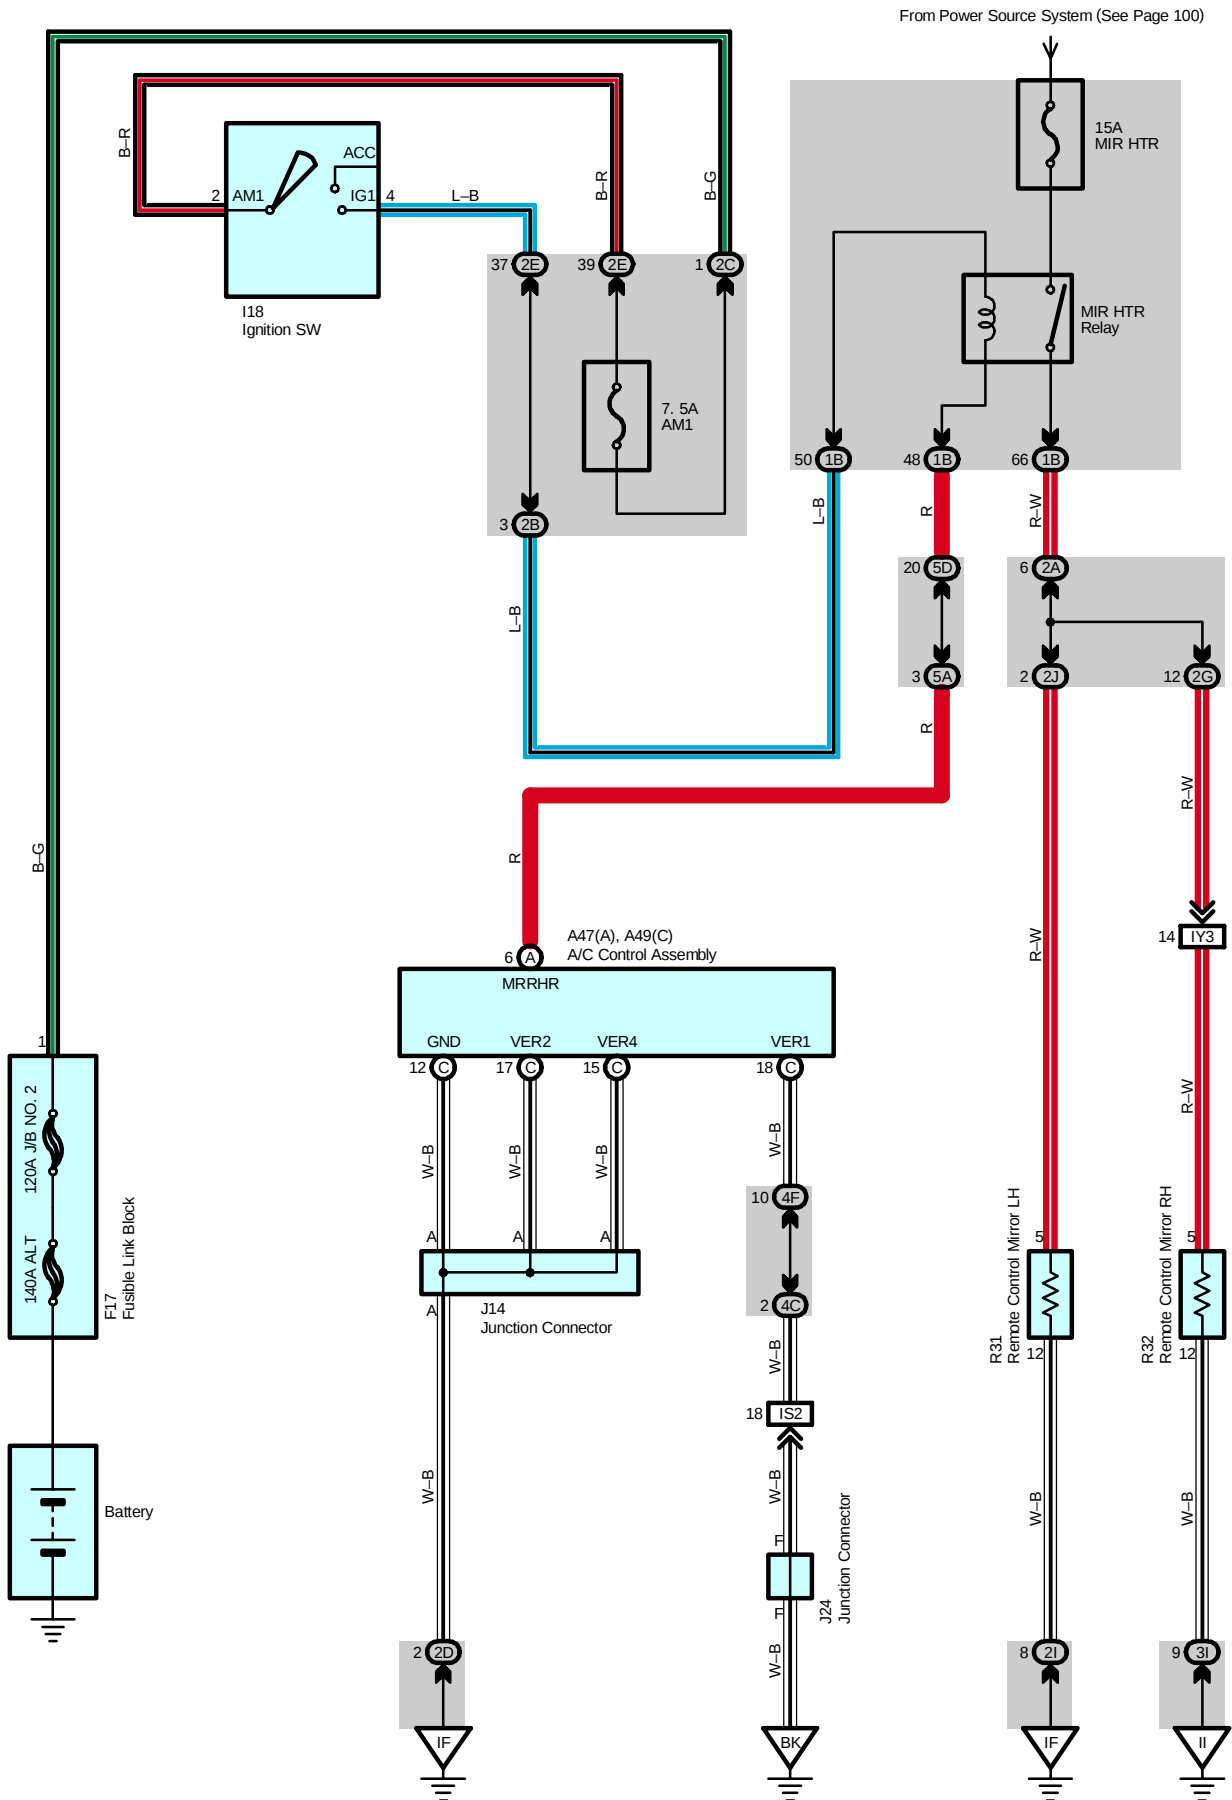

Service Hints

A47 (A), A49 (C) A/C Control Assembly

(A) 6–Ground : Approx. 12 volts with ignition SW at ON or ST position

(C)12, (C) 15, (C) 17, (C) 18–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A47 A	70	I18	71	R31	75
A49 C	70	J14	72	R32	75
F17	68	J24	74		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2B		
2C		
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2G		
2I	28	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2J		
3I	40	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
4C	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4F		
5A	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5D	56	Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IS2	84	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IY3	86	Front Door RH Wire and Dash Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH
II	80	Set Bolt of Cowl Side J/B RH
BK	90	Front Side Under the Front Passenger's Seat