



Service Hints

A31 Auto Antenna Control Relay

- 4-Ground : Always approx. 12 volts
- 17-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 7-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 5-Ground : Always continuity

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A17		68		A49	C	70		J22	72		
A31		70		C34		71		R37	73		
A47	A	70		J14		72					

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3N	43	
3P		
4B	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4D		
4E		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IW3	86	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
Ie1	86	Dash Wire and Dash Wire (Behind the Combination Meter)

: Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH
II	80	Set Bolt of Cowl Side J/B RH