


AIR OUTLET SERVOMOTOR INSPECTION

AC1LL-07


1. REMOVE LOWER NO. 1 PANEL (See page [BO-104](#))

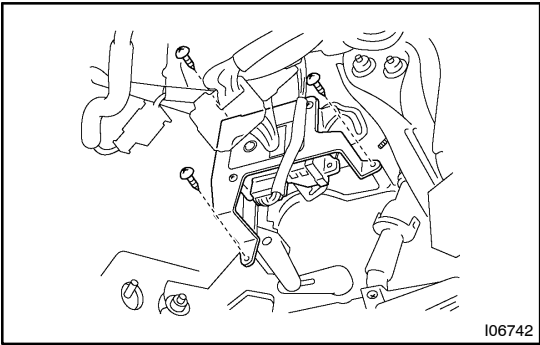

I06742

2. REMOVE AIR OUTLET SERVOMOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and the air outlet servomotor.

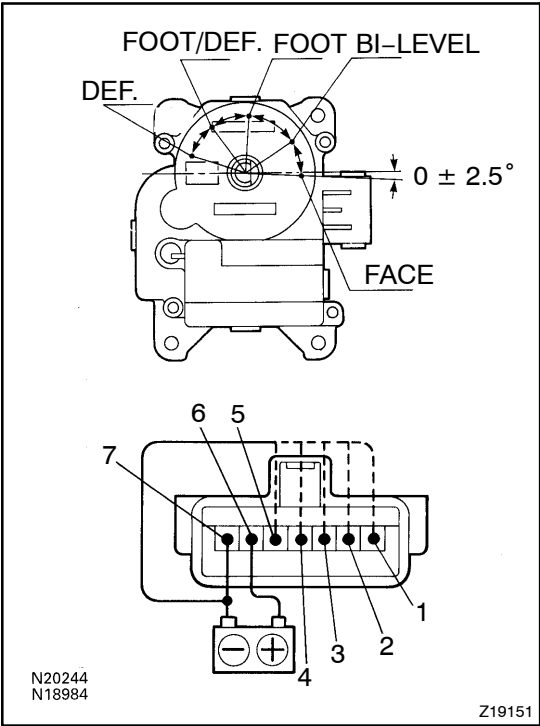

N20244
N18984

Z19151

3. INSPECT AIR OUTLET SERVOMOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 7.
- (b) Connect the negative (-) lead from the battery to each terminal and check that the shaft rotates at each position, as shown in the illustration.

Connected terminal	Position
5	DEF.
4	FOOT/DEF.
3	FOOT
2	B/L
1	FACE

If operation is not as specified, replace the servomotor.

4. INSTALL AIR OUTLET SERVOMOTOR

- (a) Install the air outlet servomotor with the 3 screws.
- (b) Connect the connector.