


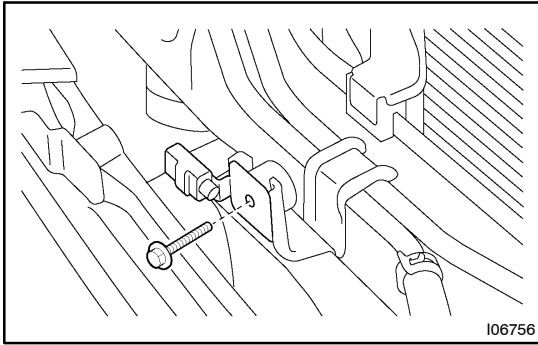

AC1LP-06

AMBIENT TEMPERATURE SENSOR INSPECTION

1. REMOVE AMBIENT TEMPERATURE SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and the ambient temperature sensor.

2. INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT (See page [DI-1734](#))

3. INSTALL AMBIENT TEMPERATURE SENSOR

- (a) Install the ambient temperature sensor to the condenser upper bracket.
- (b) Connect the connector.