


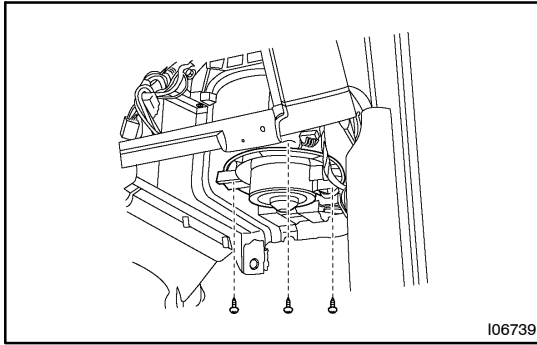

FRONT A/C BLOWER MOTOR INSPECTION

AC1LG-04

- 1. REMOVE BLOWER MOTOR**
 - (a) Disconnect the connector.
 - (b) Remove the 3 screws and the blower motor.
- 2. INSPECT BLOWER MOTOR CIRCUIT**
(See page [DI-1790](#))
- 3. INSTALL BLOWER MOTOR**
 - (a) Install the blower motor with 3 screws.
 - (b) Connect the connector.