


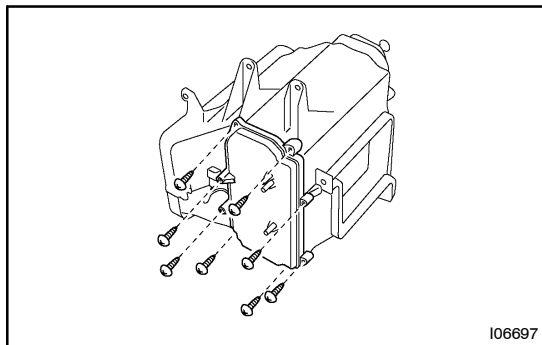

I06697

DISASSEMBLY

1. REMOVE EVAPORATOR

- Disconnect the connector clamp.
- Remove the 8 screws and No. 1 cooler cover.
- Pull out the evaporator


HINT:

At the time of reassembly, if evaporator is replaced, add compressor oil to the evaporator.

Add: 40 cc (1.4 fl.oz.)


Compressor oil: ND-OIL 8 or equivalent

- Pull out the air refiner filter.

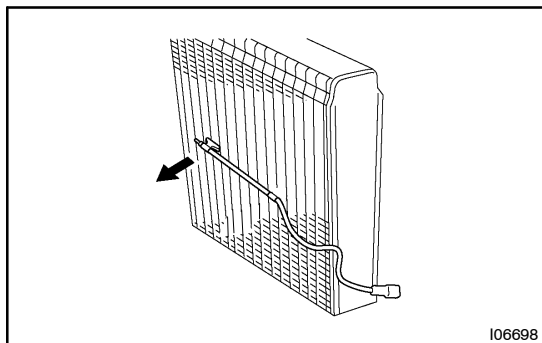

I06698

2. PULL OUT EVAPORATOR TEMPERATURE SENSOR FROM EVAPORATOR

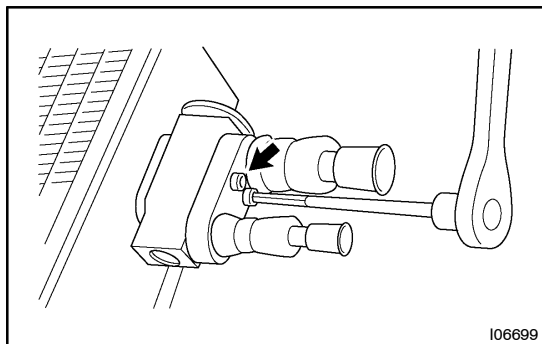

I06699

3. REMOVE EXPANSION VALVE

- Remove the grommet.
- Pry out the packing.

HINT:

At the time of reassembly, do not reuse the packing.

- Using a hexagon wrench (5.0 mm, 0.20 in.), remove the 2 bolts and separate the expansion valve, tube and evaporator.

Torque: 3.4 N·m (35 kgf·cm, 30 in·lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of reassembly, lubricate 4 new O-rings with compressor oil and install them in the tube.

4. REMOVE DRAIN HOSE