


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all coolant.

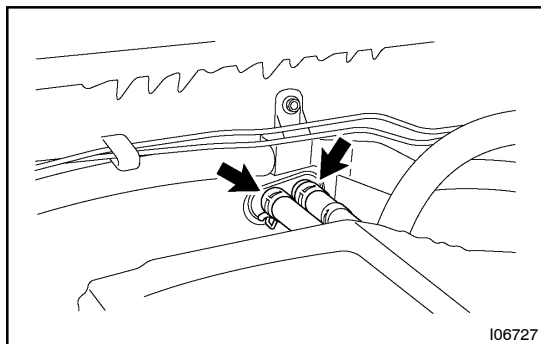

2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES


- Using pliers, grip the claws of the hose clip and slide the clip along the hose.
- Disconnect the water hoses from the heater radiator pipes.

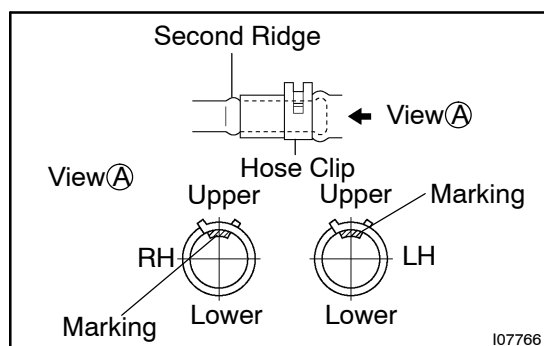

HINT:


At the time of installation, refer to the following items.

- Push the water hose onto the heater radiator pipe to the second ridge on the pipe.
 - Install a hose clip in the position as shown in the illustration.
- REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-104](#))**
 - REMOVE FRONT COOLING UNIT (See page [AC-24](#))**

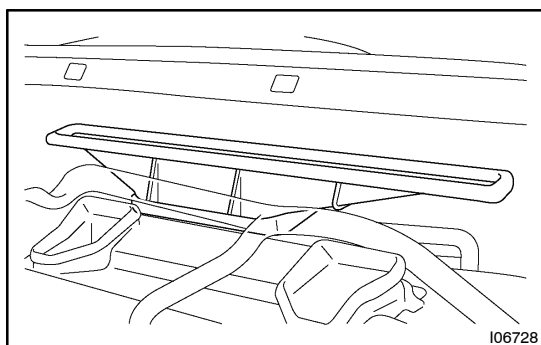

5. REMOVE HEATER UNIT

- Remove the lower defroster nozzle.

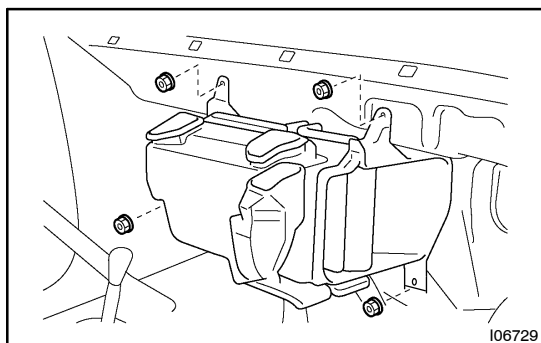

- Disconnect the connector.
- Remove the 4 nuts and heater unit.