


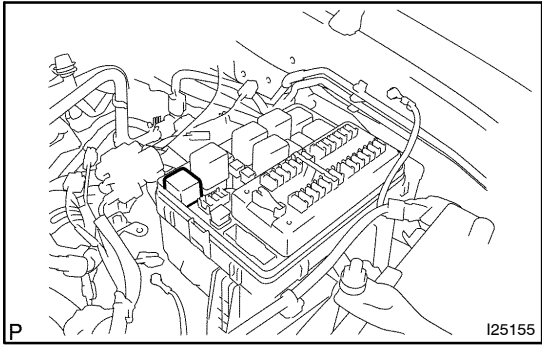


HEATER MAIN RELAY INSPECTION

AC3PF-01

1. REMOVE HEATER MAIN RELAY

Remove the heater main relay.

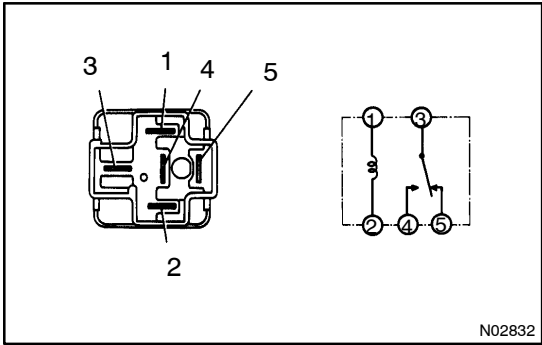

2. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2 3 - 4	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

3. INSTALL HEATER MAIN RELAY