


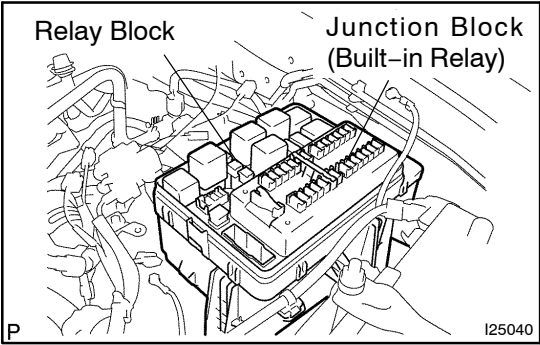

# MAGNETIC CLUTCH RELAY INSPECTION

AC1LY-04

**HINT:**

The magnetic clutch relay is built in the engine room junction block. Since the relay is constructed with a relay block that is in the junction block as a unit, it is impossible to disconnect the wire harness connecting with the relay block.

If the relay has a malfunction, replace it with the junction block assembly wireharness together.

- 1. REMOVE ENGINE ROOM J/B**
- 2. INSPECT MAGNETIC CLUTCH RELAY CONTINUITY**

| Condition                            | Tester connection | Specified condition |
|--------------------------------------|-------------------|---------------------|
| Constant                             | 57 - 65           | Continuity          |
| Apply B+ between terminals 57 and 65 | 63 - 65           | Continuity          |

If continuity is not as specified, replace the engine room J/B.

- 3. INSTALL ENGINE ROOM J/B**

