


POWER TRANSISTOR (for Rear Cooler)


INSPECTION

AC1U-05

1. REMOVE REAR DOOR SCUFF PLATE RH
2. REMOVE REAR FLOOR MAT SUPPORT PLATE
3. REMOVE QUARTER TRIM PANEL RH

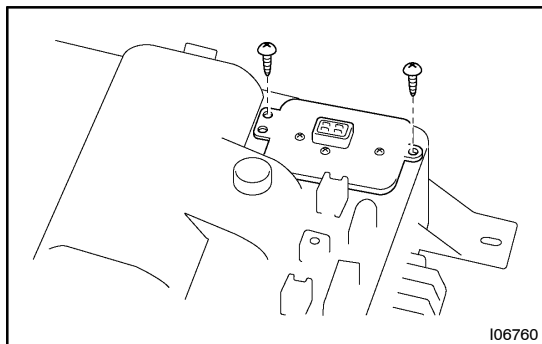


4. REMOVE POWER TRANSISTOR
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and the power transistor.

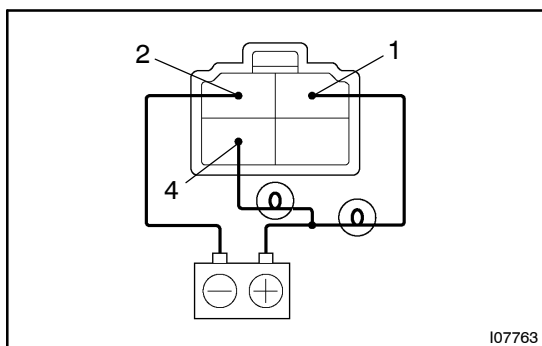

5. INSPECT POWER TRANSISTOR OPERATION
 - (a) Connect the positive (+) lead to terminal 1 through a 12 V – 3.4 W test bulb and negative (–) lead to terminal 2.
 - (b) Check the test bulb comes on when another positive (+) lead is connected to terminal 4 through a 12 V – 3.4 W test bulb.

If operation is not as specified, replace the power transistor.

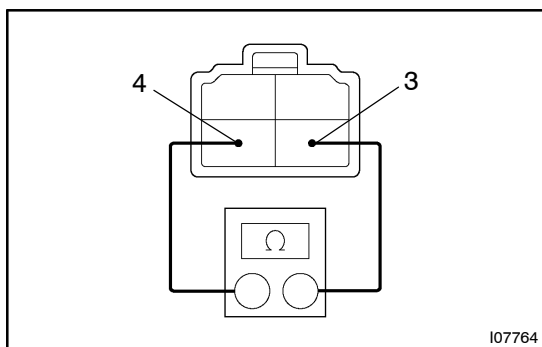

6. INSPECT POWER TRANSISTOR RESISTANCE

Measure resistance between terminal 3 and 4.

Standard resistance: 2.0 – 2.4 k Ω

If resistance is not as specified, replace the power transistor.

7. INSTALL POWER TRANSISTOR
 - (a) Install the power transistor with 2 screws.
 - (b) Connect the connector.
8. INSTALL QUARTER TRIM PANEL RH
9. INSTALL REAR FLOOR MAT SUPPORT PLATE
10. INSTALL REAR DOOR SCUFF PLATE RH