


PRESSURE SWITCH ON-VEHICLE INSPECTION

AC3PE-01


1. SET VEHICLE IN THESE CONDITION

- Engine speed at 1,500 rpm
- Blower speed control switch at "HI" position
- Temperature control dial at "MAX. COOL" position
- Manifold gauge set setting.

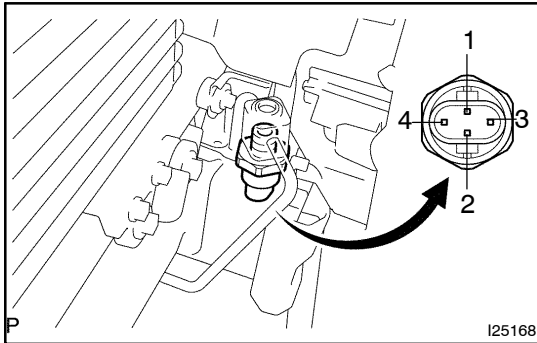

2. INSPECT PRESSURE SWITCH OPERATION

- Disconnect the connector.

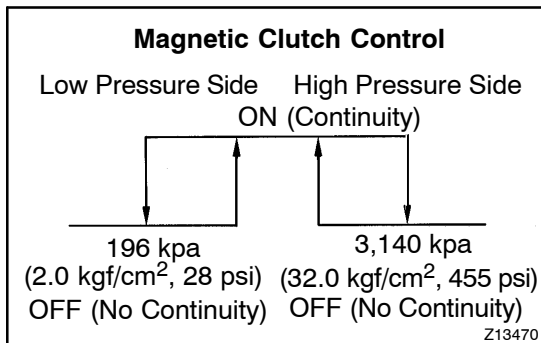

- Inspect pressure switch continuity (Magnetic Clutch Control)

- Connect the positive (+) lead from the ohmmeter to terminal 4 and the negative (-) lead to terminal 1.
- Check continuity between terminals when refrigerant pressure changes, as shown in the illustration.

If continuity is not as specified, replace the pressure switch.