

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM


HINT:

At the time of installation, refer to the following items.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for any leakage of refrigerant.

Specified amount: 1,050 ± 50 g (37.03 ± 1.76 oz.)

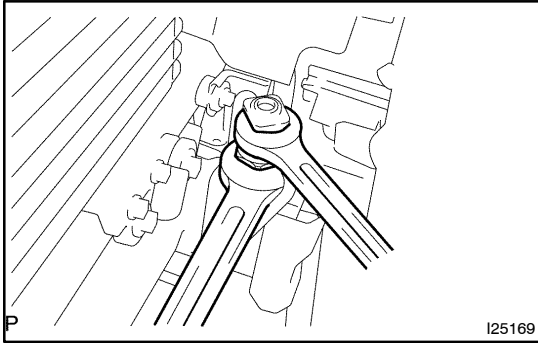

2. REMOVE PRESSURE SWITCH FROM LIQUID TUBE

Disconnect the connector and remove the pressure switch.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

HINT:

- Lock the switch mount on the tube with an open end wrench, be careful not to deform the tube, and remove the pressure switch.
- At the time of installation, lubricate a new O-ring with compressor oil and install the pressure switch.