

REAR COOLING UNIT ON-VEHICLE INSPECTION

AC1KA-05

1. INSPECT EXPANSION VALVE


- (a) Check amount of gas during refrigeration cycle.
- (b) Set on manifold gauge set.
- (c) Start the engine.
- (d) Operate the A/C system.
- (e) Inspect the expansion valve.
 - (1) Run the engine at 1,500 rpm for at least 5 minutes.
 - (2) Check the high pressure reading is 1.37 – 1.57 MPa (14 – 16 kgf/cm², 199 – 288 psi).
 - (3) Check the low pressure reading.

If the low pressure reading is 0 kPa (0 kgf/cm², 0psi), replace the expansion valve.

2. REMOVE REAR DOOR SCUFF PLATE RH

3. REMOVE REAR FLOOR MAT SUPPORT PLATE

4. REMOVE QUARTER TRIM PANEL RH

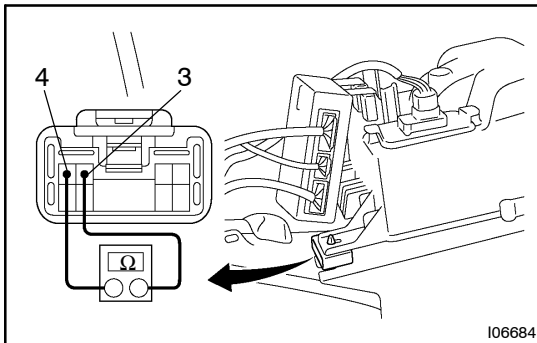


I06684

5. INSPECT THERMISTOR RESISTANCE

- (a) Disconnect the connector.
- (b) Measure resistance between terminal 3 and 4.

Standard resistance: Approx. 1.5 kΩ at 25 °C (77 °F)

If resistance is not as specified, proceed "INSPECTION" on page [AC-36](#).

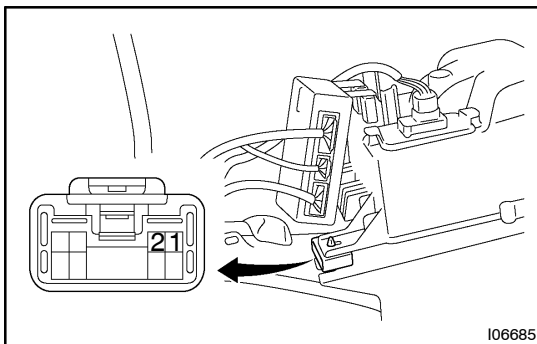


I06685

6. INSPECT MAGNETIC VALVE CONTINUITY

- (a) Disconnect the connector.
- (b) Check the continuity exists between terminal 1 and 2.

If resistance is not as specified, proceed "INSPECTION" on page [AC-36](#).

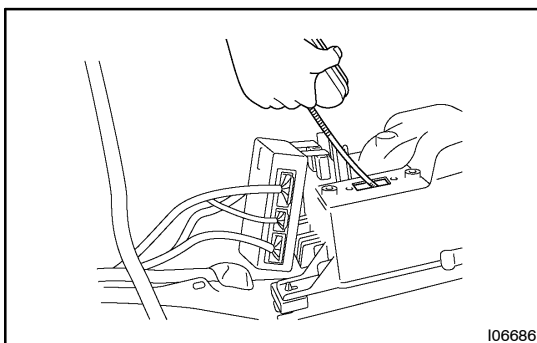

I06686

7. CHECK FOR LEAKAGE OF REFRIGERANT

- (a) Remove the power transistor.
 - (b) Using a gas leak detector, check for leaks of refrigerant.
- If there is a leakage, check the evaporator or tightening torque at the joints.