



CIRCUIT

I25532

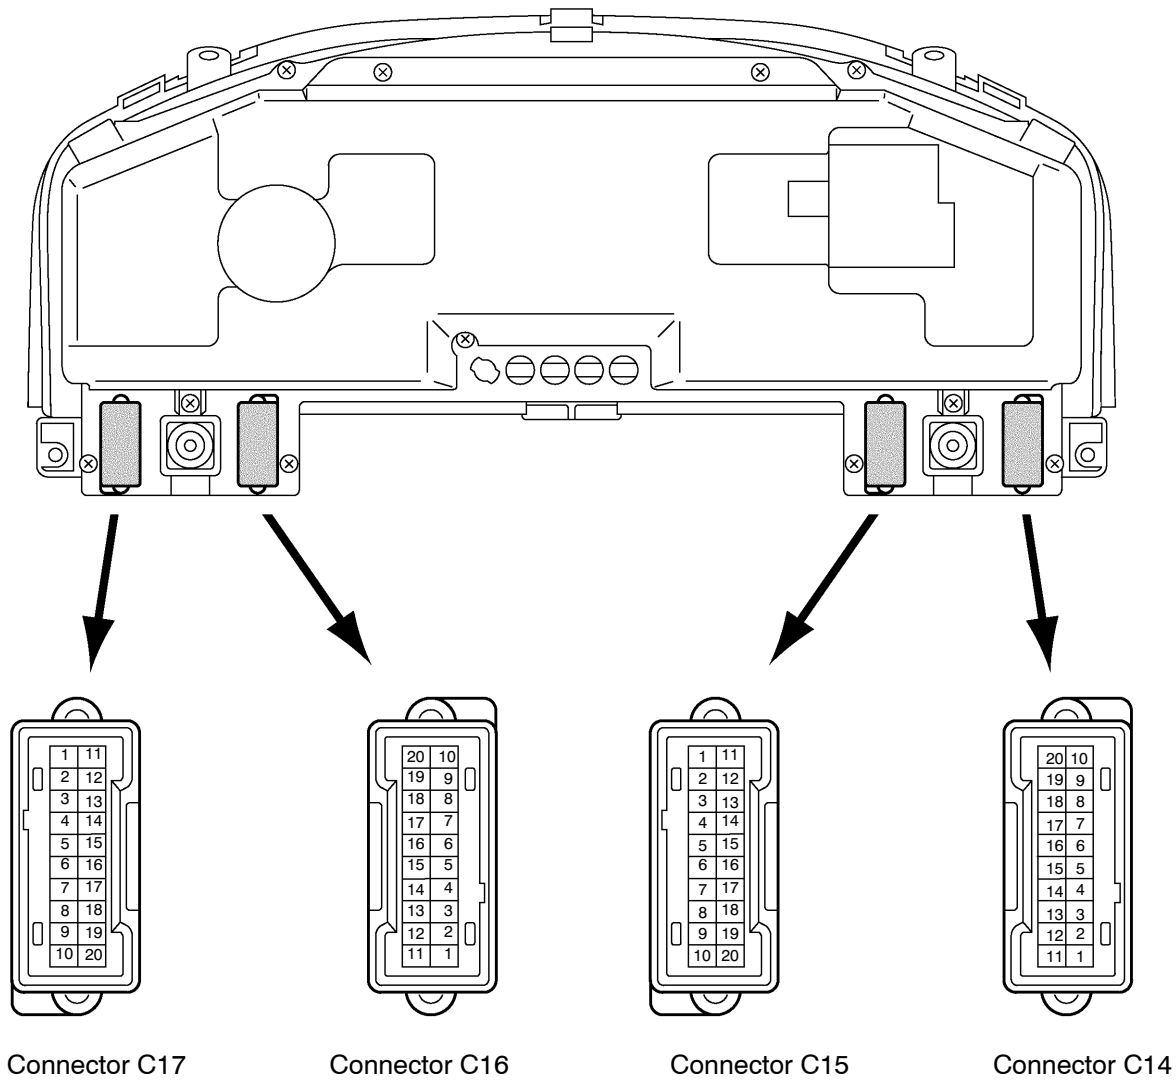


H

I29076

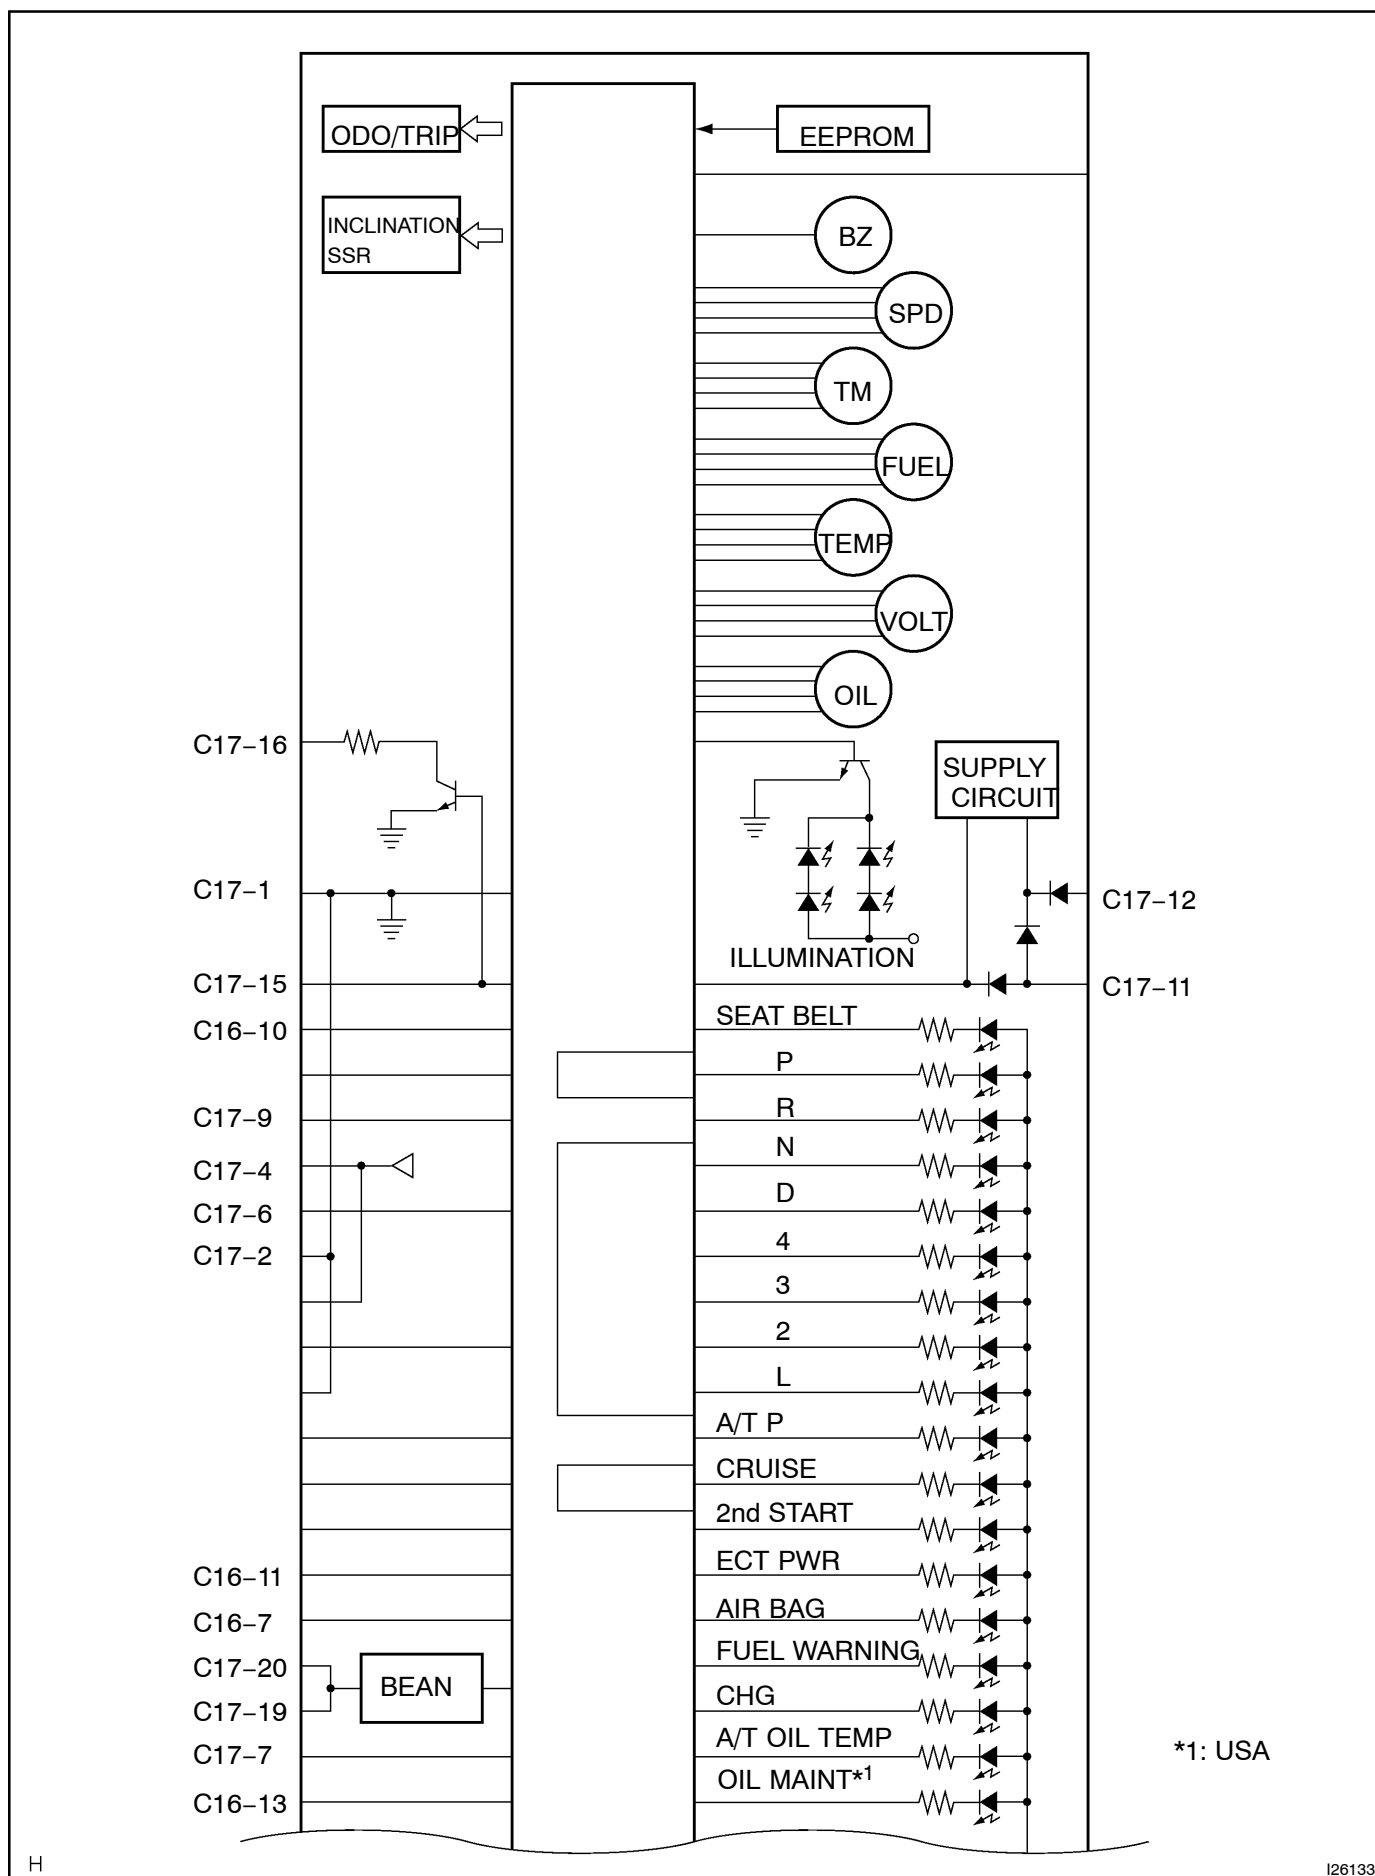

H

I26133

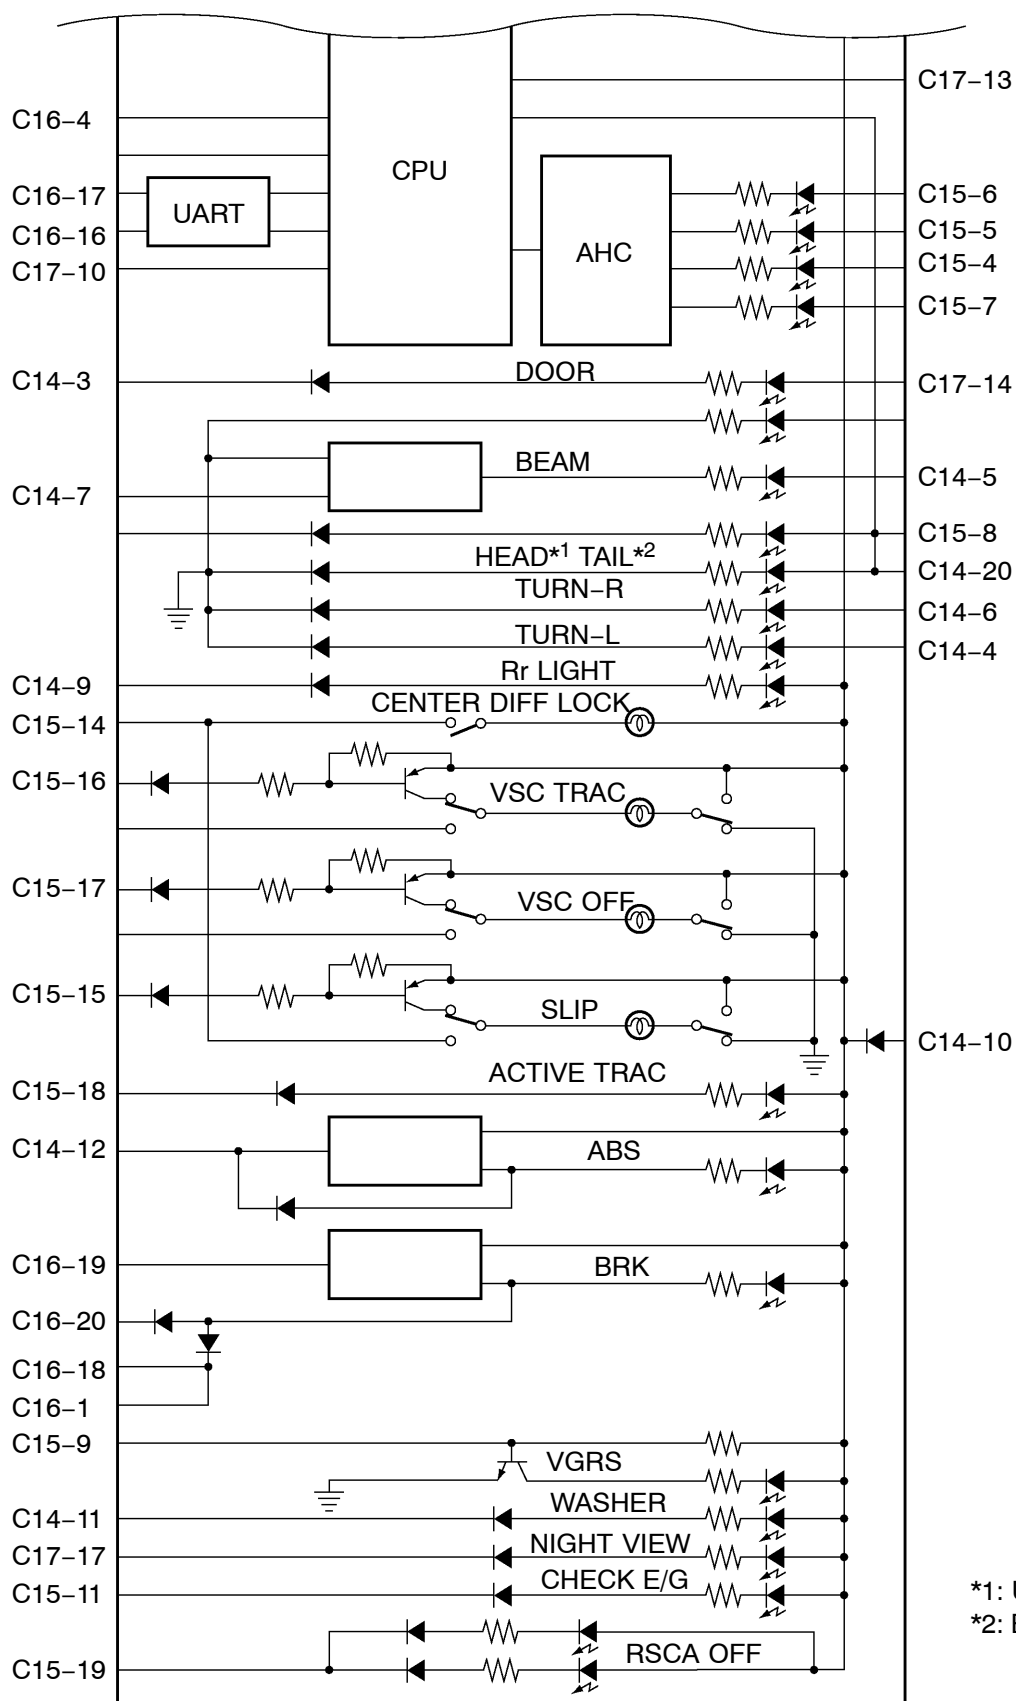

*1: USA
*2: Except USA

No.		Wiring connector side
C14	3	Body Control ECU (Main)
	4	Flasher Relay
	5	H/L R-HI Fuse
	6	Flasher Relay
	7	Light Control Switch
	9	Body Control ECU (Sub)
	10	MET Fuse
	11	Washer Level Warning Switch
	12	ABS, TRC, VSC ECU
	20	H/L L-LO Fuse
C15	4	Suspension Control ECU
	5	Suspension Control ECU
	6	Suspension Control ECU
	7	Suspension Control ECU
	8	PANEL Fuse
	9	VGRS ECU
	11	ECM
	14	CTR DIFF Switch
	15	ABS, TRC, VSC ECU
	16	ABS, TRC, VSC ECU
	17	ABS, TRC, VSC ECU
	18	ABS, TRC, VSC ECU
	19	Airbag ECU
C16	1	Body Control ECU (Main)
	4	Airbag ECU
	7	Oil Pressure Sender Gauge
	10	ECM
	11	Driver Seat Belt Buckle Switch
	13	Body Control ECU (Main)
	16	Multi-Display
	17	Multi-Display
	18	ABS, TRC, VSC ECU
	19	ABS, TRC, VSC ECU
	20	ABS & BA & TRAC & VSC Actuator
C17	1	Engine Ground
	2	Main Fuel Sender Gauge
	4	Main Fuel Sender Gauge
	6	Main Fuel Sender Gauge
	7	Light Control Rheostat
	9	Key Unlock Warning Switch
	10	Body Control ECU (Main) (Door Courtesy Switch Signal)
	11	GAUGE 1 Fuse
	12	ECU-B2 Fuse
	13	ACC Fuse
	14	DOME Fuse
	15	Speed Sensor
	16	Speed Control Unit
	17	Lamp Failure Relay
	19	Gateway ECU
	20	ECM