

HEADLIGHT CLEANER SYSTEM

LOCATION

BE0T4-04

Engine Room Junction Block

- Head Cleaner Fuse

Headlight Cleaner Nozzle

Washer Tank

- Headlight Cleaner Relay
- Headlight Cleaner Motor

Combination Switch

- Headlight Cleaner Switch

Cowl Side J/B LH

- WASHER Fuse

Ignition Switch

H

I25051