



TRAILER TOWING LOCATION

BE28G-03

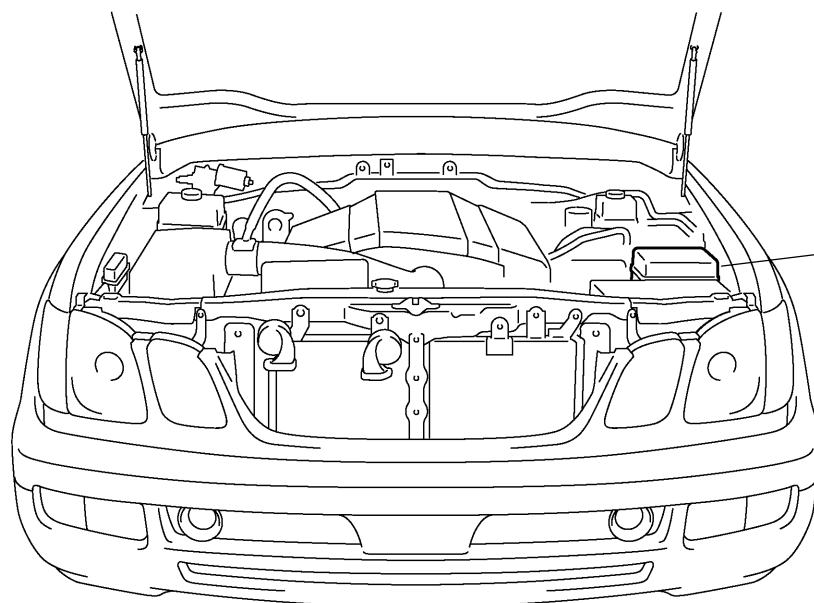

- Engine Room R/B
- TOWING Fuse
 - TOWING TAIL Fuse
 - TOWING BRK Fuse

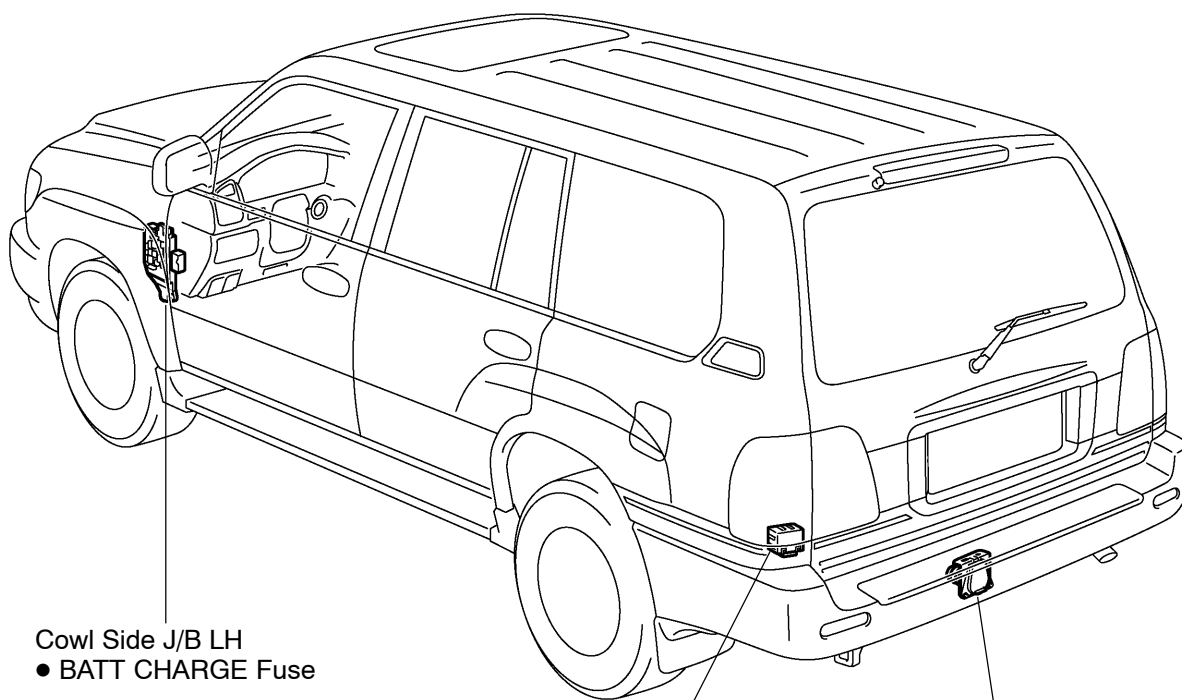

- Cowl Side J/B LH
- BATT CHARGE Fuse

Towing Converter Relay
(Located inside of the quarter trim panel LH)

Trailer Socket

H

I25065