


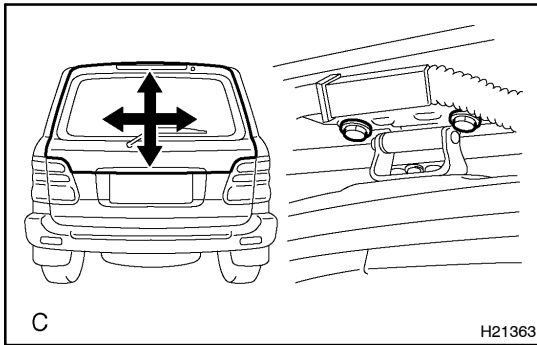


ADJUSTMENT

1. ADJUST DOOR IN LEFT / RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust it.


Torque: 28 N·m (286 kgf·cm, 21 ft·lbf)

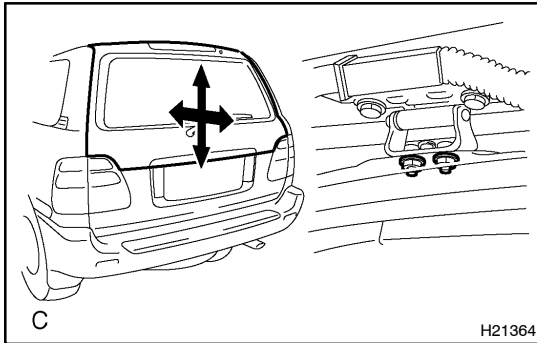

2. ADJUST DOOR IN FORWARD / REARWARD AND VERTICAL DIRECTIONS

Loosen the body side hinge nuts to adjust it.

Torque: 31 N·m (316 kgf·cm, 23 ft·lbf)

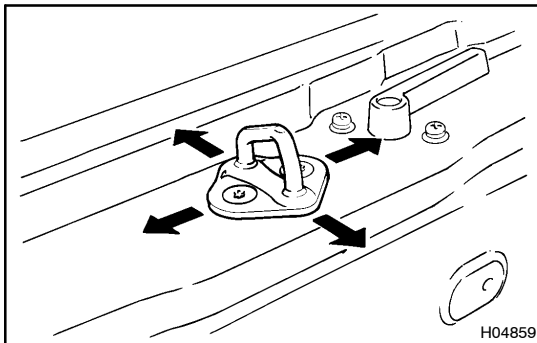

3. ADJUST DOOR LOCK STRIKER


(a) Check that the door fits, and door linkages are adjusted correctly.

(b) Using a torx wrench, loosen the door lock striker mounting screws.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

Torque: 11.5 N·m (117 kgf·cm, 8 ft·lbf)

(c) Using a plastic hammer, tap the door lock striker to adjust it.

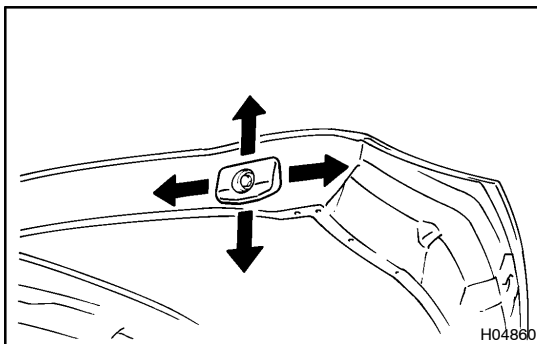

4. ADJUST LOWER STOPPER

(a) Loosen the stopper mounting bolt to adjust.

(b) Use the same manner described above to the other side it.