



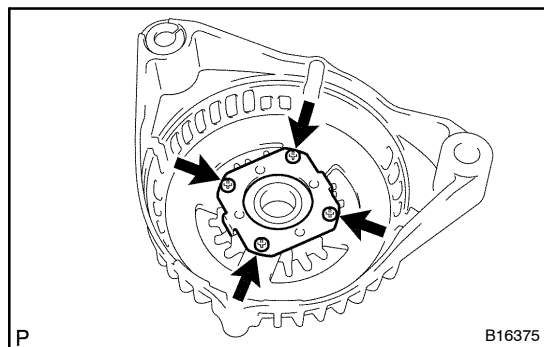


REPLACEMENT

1. REPLACE FRONT BEARING

- (a) Remove the 4 screws, bearing retainer and bearing.

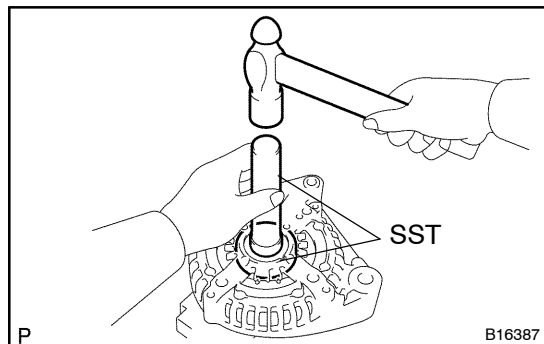

- (b) Using SST and a hammer, tap out the bearing.
SST 09950-60010 (09951-00250), 09950-70010 (09951-07100)

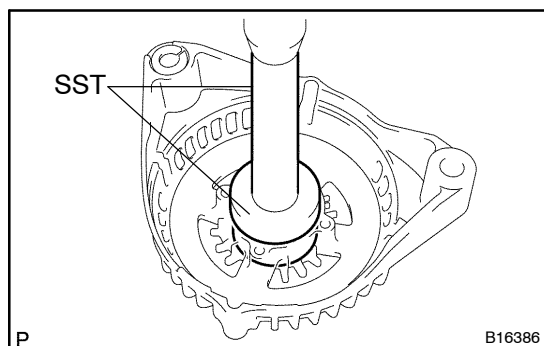

- (c) Using SST and a press, press in a new bearing.
SST 09950-60010 (09951-00470), 09950-70010 (09951-07100)
- (d) Install the bearing retainer with the 4 screws.
Torque: 2.3 N·m (23 kgf·cm, 20 in·lbf)