

 
 
|            |                   |                         |
|------------|-------------------|-------------------------|
| <b>DTC</b> | <b>C1289 / 41</b> | <b>VGRS Malfunction</b> |
|------------|-------------------|-------------------------|

## CIRCUIT DESCRIPTION

| DTC No.    | DTC Detecting Condition          | Trouble Area        |
|------------|----------------------------------|---------------------|
| C1289 / 41 | VGRS control system is abnormal. | VGRS control system |

## INSPECTION PROCEDURE

|          |                                                                      |
|----------|----------------------------------------------------------------------|
| <b>1</b> | <b>Check the DTC for the VGRS (See page <a href="#">DI-801</a>).</b> |
|----------|----------------------------------------------------------------------|

\*1**Repair VGRS control system according to the code output.**\*2**Check for ECU connected to malfunction indicator light.**

\*1: Output NG code

\*2: Malfunction indicator light remains ON