


ABS & VEHICLE STABILITY CONTROL (VSC) & BRAKE ASSIST (BA) SYSTEM

HOW TO PROCEED WITH TROUBLESHOOTING

DIC4S-01

Troubleshooting in accordance with the procedure on the following pages.

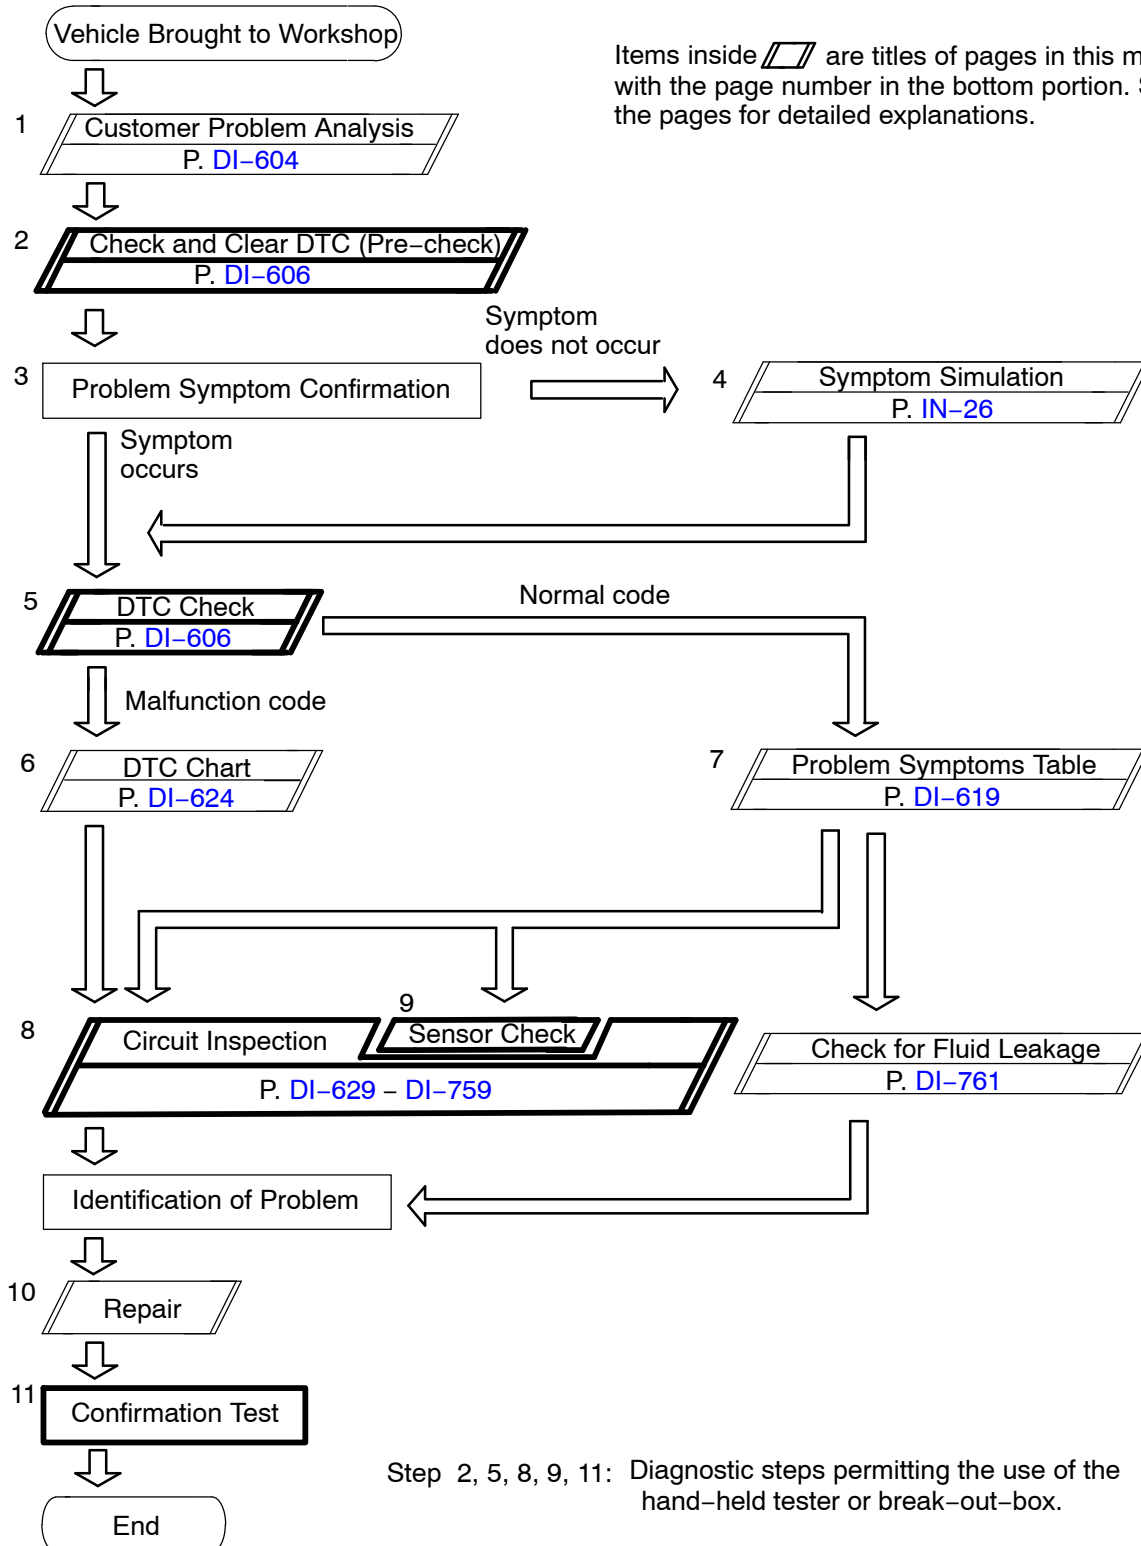

Fail safe function:

When a failure occurs in the ABS & BA & TRAC & VSC system, the ABS and VSC warning light is lit and the ABS & BA & TRAC & VSC operation is prohibited. In addition to this, when the failure which disables the EBD operation occurs, the BRAKE warning light is lit as well and the EBD operation is prohibited.