


DTC	47	Rear Air Mix Damper Control Servomotor Circuit
------------	-----------	---

CIRCUIT DESCRIPTION

The rear air mix damper control servomotor is controlled by the A/C amplifier and moves the air mix damper to the desired position.

DTC No.	Detection Item	Trouble Area
47	Air mix damper position sensor value does not change even if A/C control assembly operates air mix damper control servomotor	- Rear air mix damper control servomotor - Harness or connector between rear air mix control servomotor and A/C amplifier - A/C amplifier

WIRING DIAGRAM

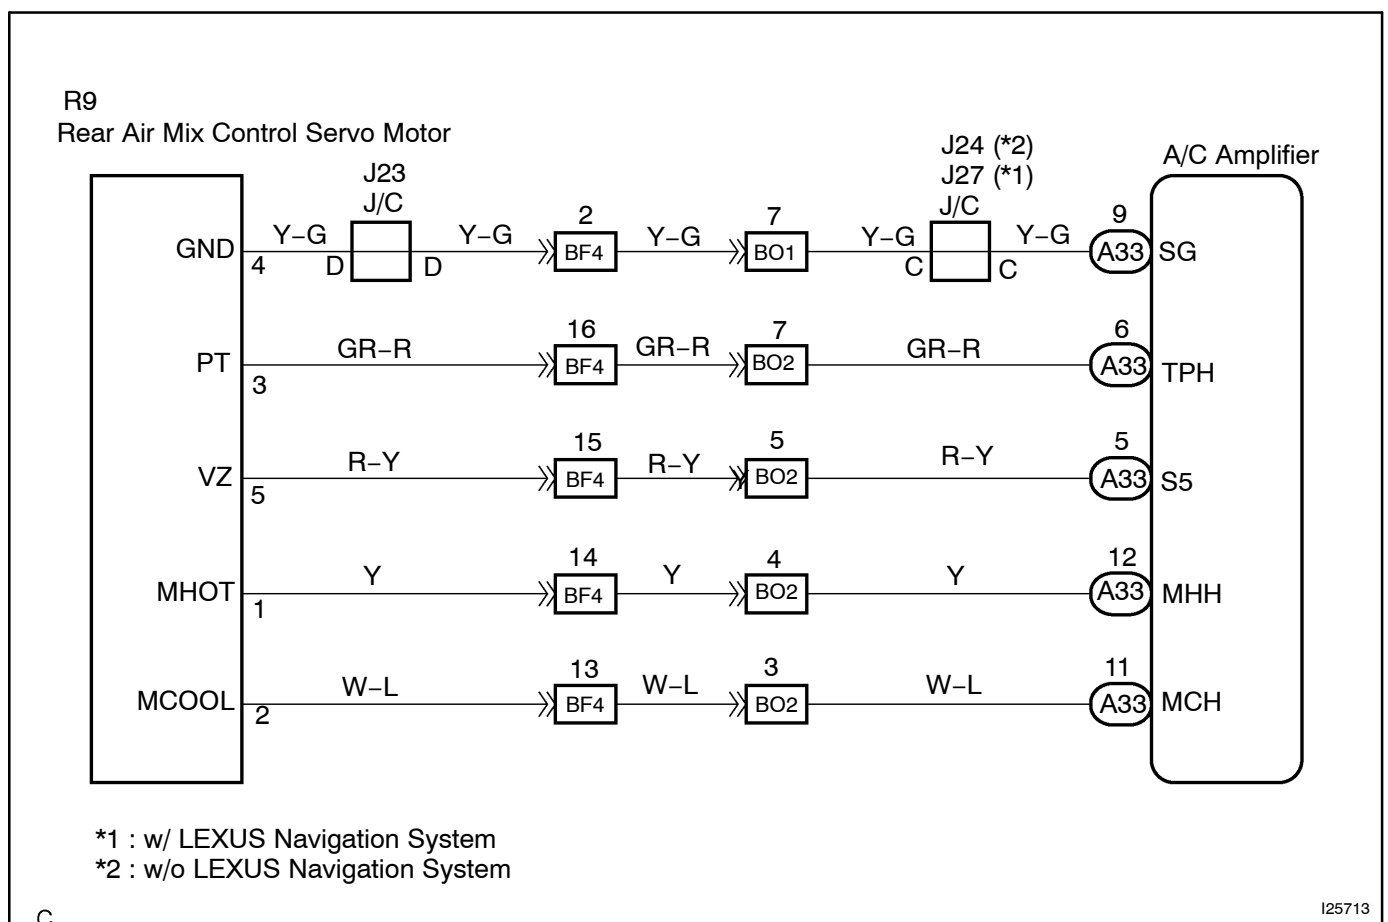

INSPECTION PROCEDURE

1 Actuator check.

PREPARATION:

- (a) Warm up the engine.
- (b) Set to actuator check mode (See page [DI-1717](#)).
- (c) Press the DEF switch and change it to step operation.

CHECK:

Press the DEF switch and check the operation of the air mix damper and the condition of the blower.

OK:


Display Code	Air Mix Damper	Condition
0 - 2	0% (Fully closed)	Cool air comes out
3 - 4	50%	Cool / Warm
5 - 7	100% (Full opened)	Warm air comes out

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1722](#)).

NG

2 Check rear air mix damper control servomotor.

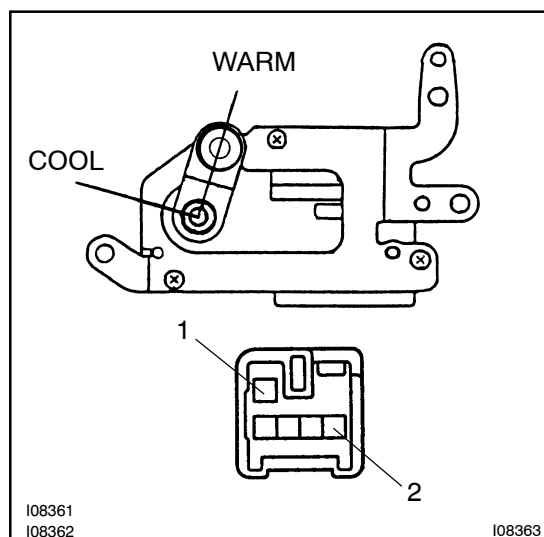

PREPARATION:

Remove the rear air mix servomotor (See page [AC-49](#)).

CHECK:

Connect positive (+) lead to terminal 1 and negative (-) lead to terminal 2.

OK:

The lever turns smoothly to WARM side.

CHECK:

Connect positive (+) lead to terminal 2 and negative (-) lead to terminal 1.

OK:

The lever turns smoothly to COOL side.

NG

Replace rear air mix servomotor.

OK

3	Check harness and connector between rear air mix damper control servomotor and A/C amplifier (See page IN-36).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.