


Alternator signal circuit

WIRING DIAGRAM

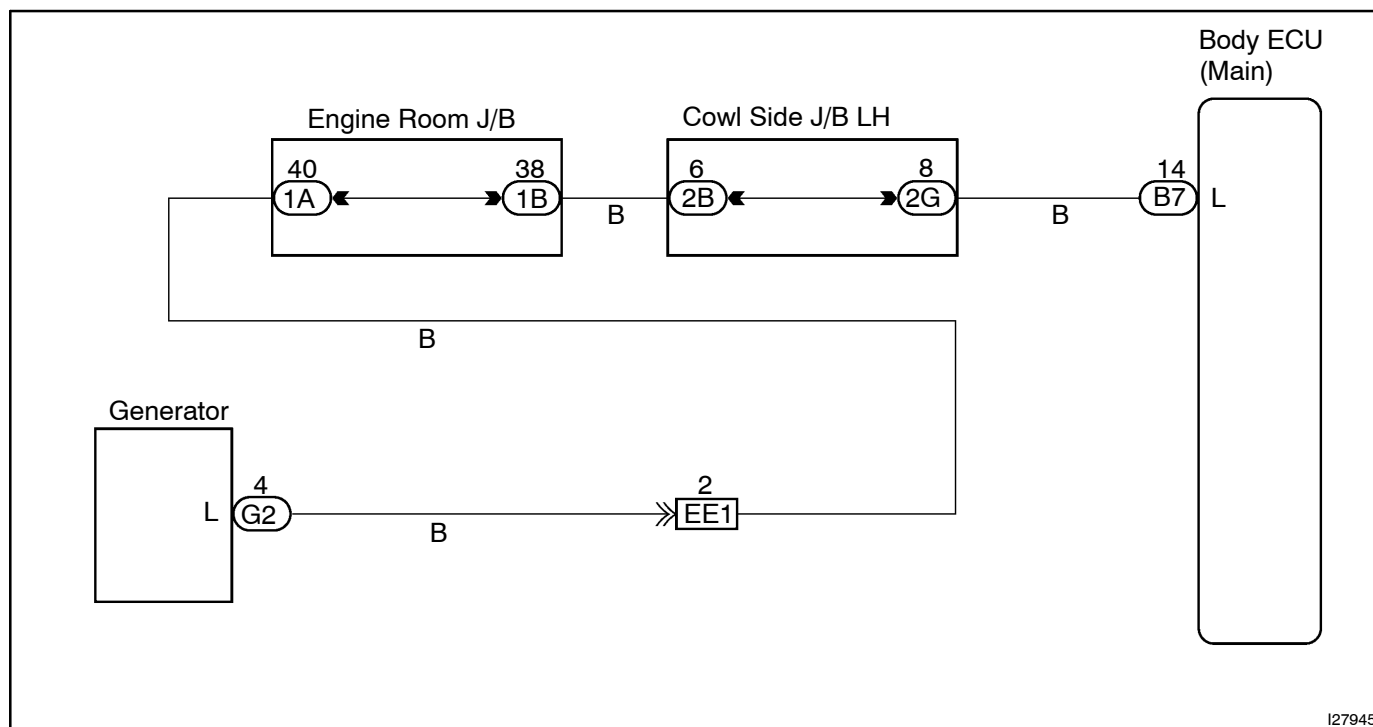

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.


1	Check alternator signal using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

 Check that the alternator signal operate in DATA LIST (See page [DI-1402](#)).



2**Check alternator (See page [CH-14](#)).****NG****Replace the alternator.****OK****3****Check wire harness and connector between alternator and Body ECU (Main)
(See page [IN-36](#)).****OK****Repair or replace wire harness or connector.****OK****Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-1408](#)).**