


Door courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy light comes on when the door is opened and goes off when closed.

WIRING DIAGRAM

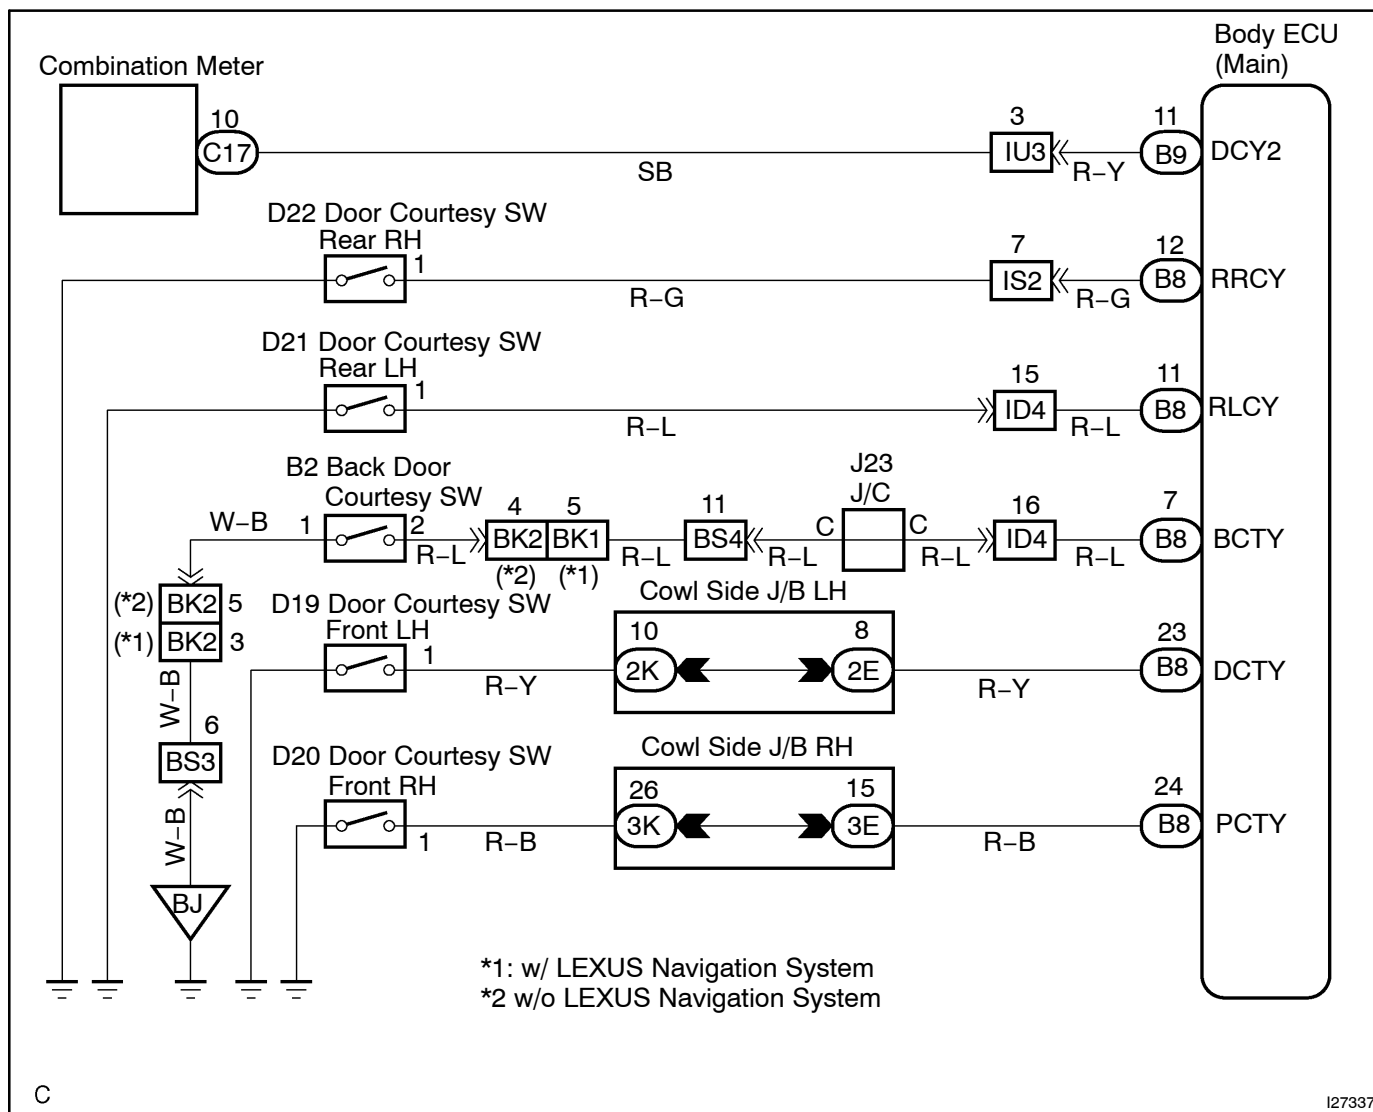

I27337

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check courtesy switch using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the courtesy switch operate in DATA LIST (See page [DI-1402](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).

NG

2	Check the courtesy switch (See page BE-53).
---	--

NG

Replace the courtesy switch.

OK

3	Check wire harness and connector between courtesy switch and Body ECU (Main) (See page IN-36).
---	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).