


Headlight relay circuit

CIRCUIT DESCRIPTION

The headlight dimmer switch sends a signal to the Body ECU (Main).

WIRING DIAGRAM

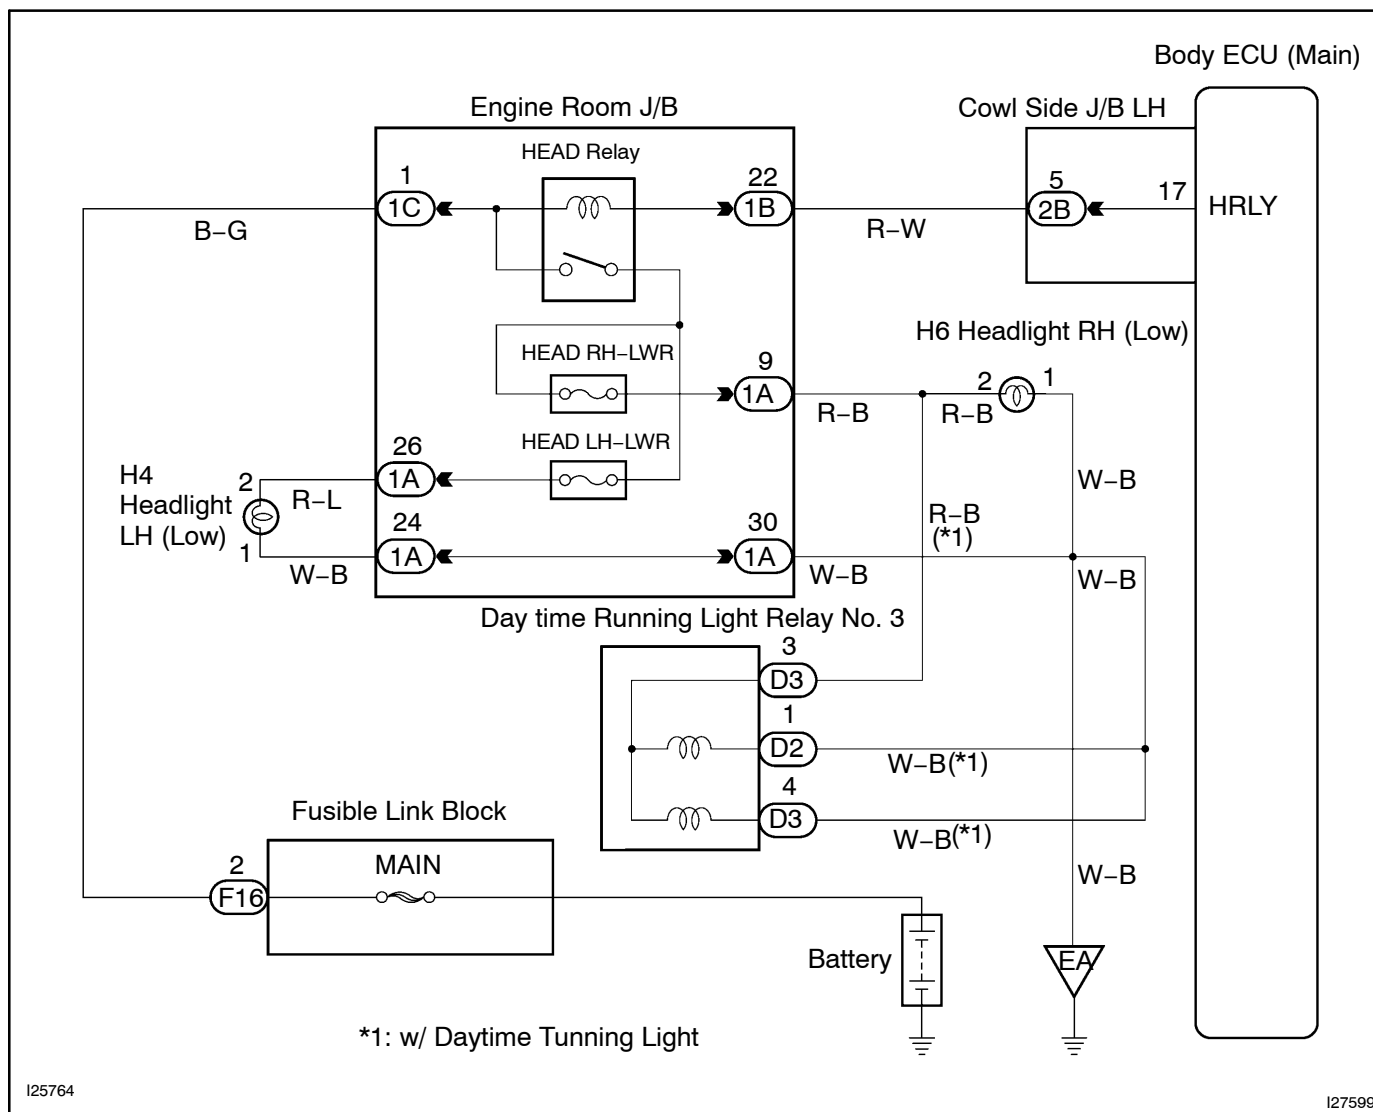

I25764

I27599

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check headlight relay using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the headlight relay operate in ACTIVE TEST (See page [DI-1402](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).

NG

2	Check headlight relay circuit (See page BE-16).
---	--

NG

Replace engine room J/B assy with wire harness.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).