


Illumination circuit (Body ECU (Main) Control)

CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU (Main), the Body ECU (Main) makes the switch illuminations to comes on.

WIRING DIAGRAM

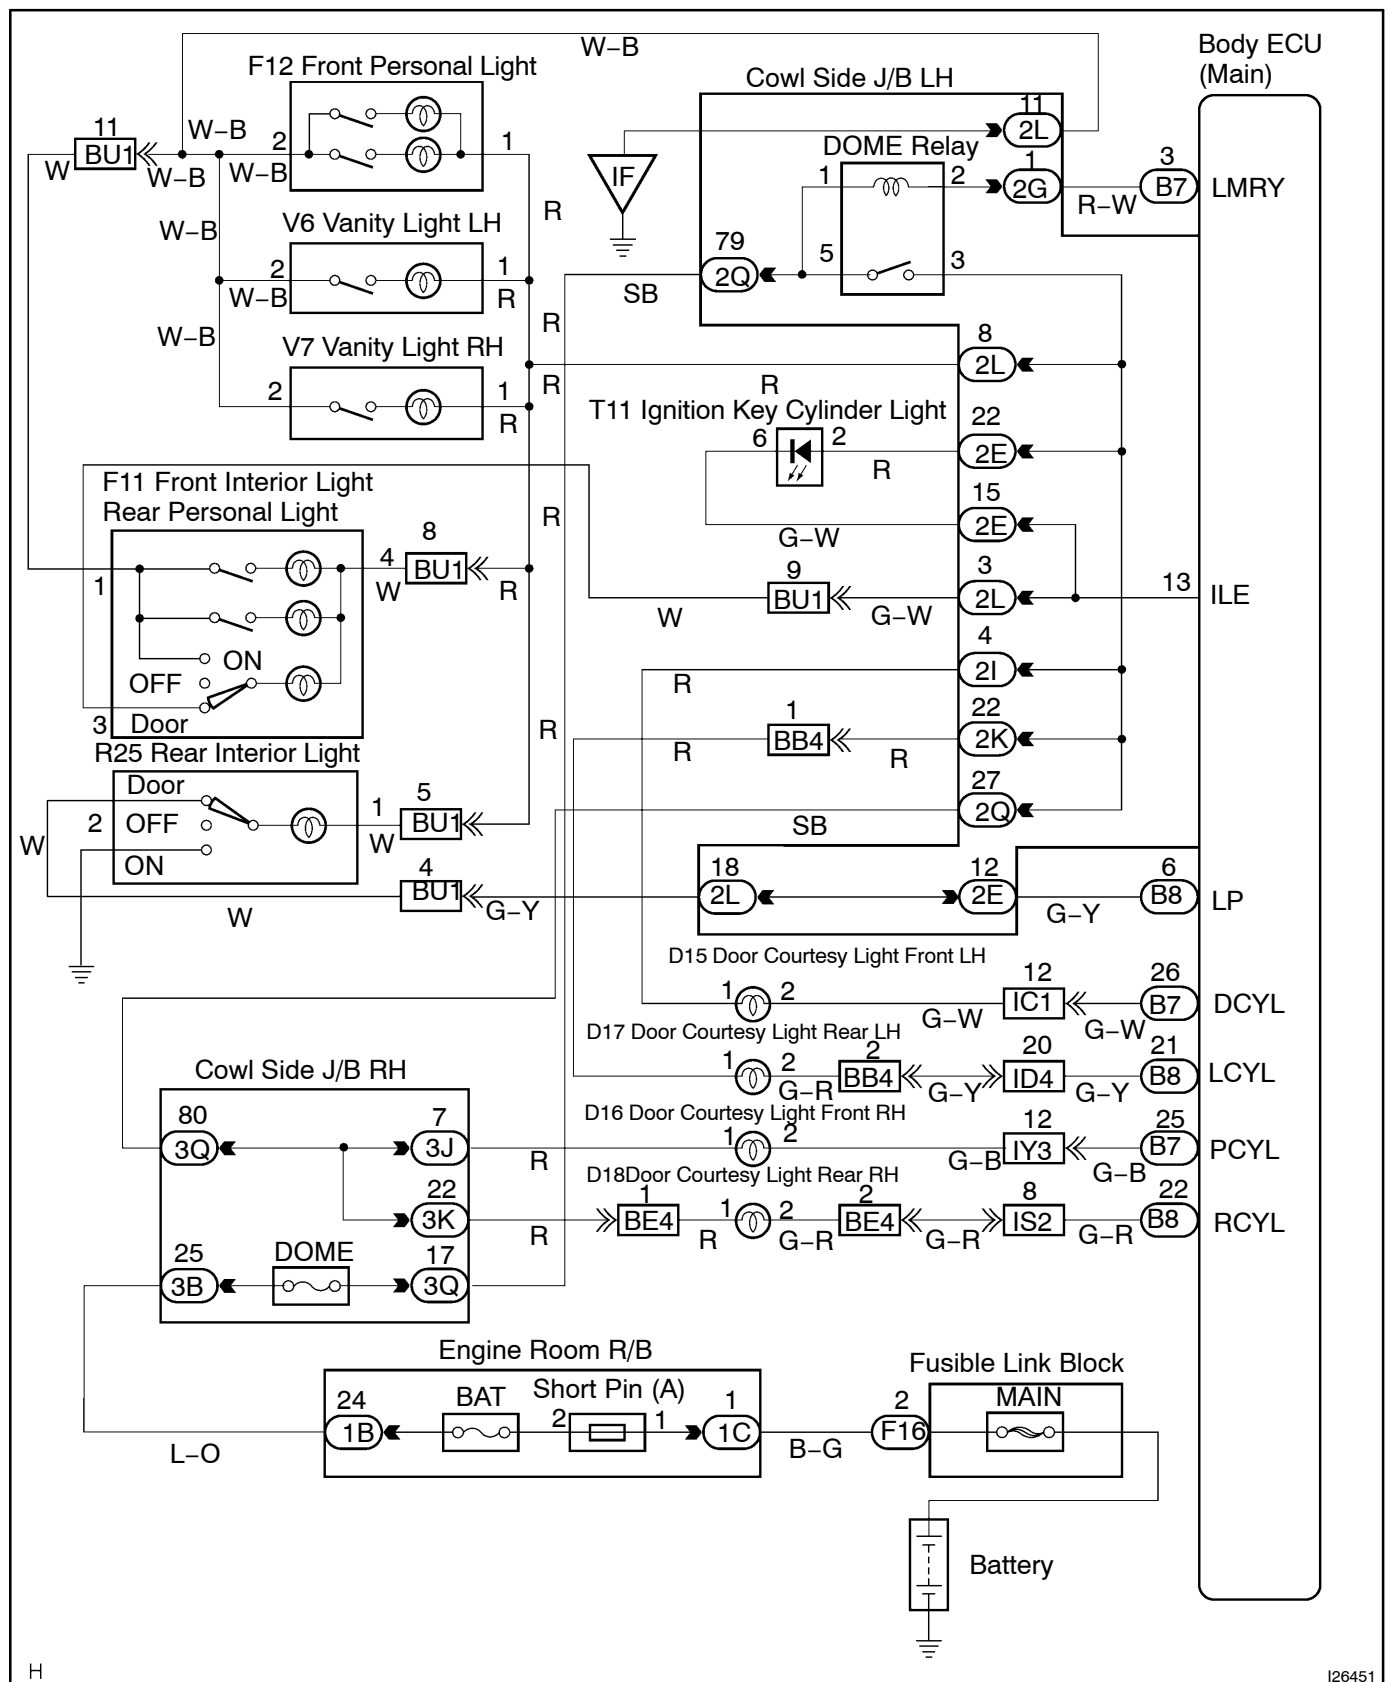

H

I26451

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check illumination using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the illumination operate in ACTIVE TEST (See page [DI-1402](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).

NG

2	Check illumination light (See page BE-53).
---	---

NG

Replace illumination light.

OK

3	Check wire harness and connector between illumination light and Body ECU (Main) (See page IN-36).
---	--

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).