


Memory switch circuit (W/ memory)

CIRCUIT DESCRIPTION

The Body ECU (Main) detects the condition of the driving memory switch, and sends the information to the power seat control ECU, the tilt and telescopic ECU and the mirror control ECU via the multiplex communication circuit.

WIRING DIAGRAM

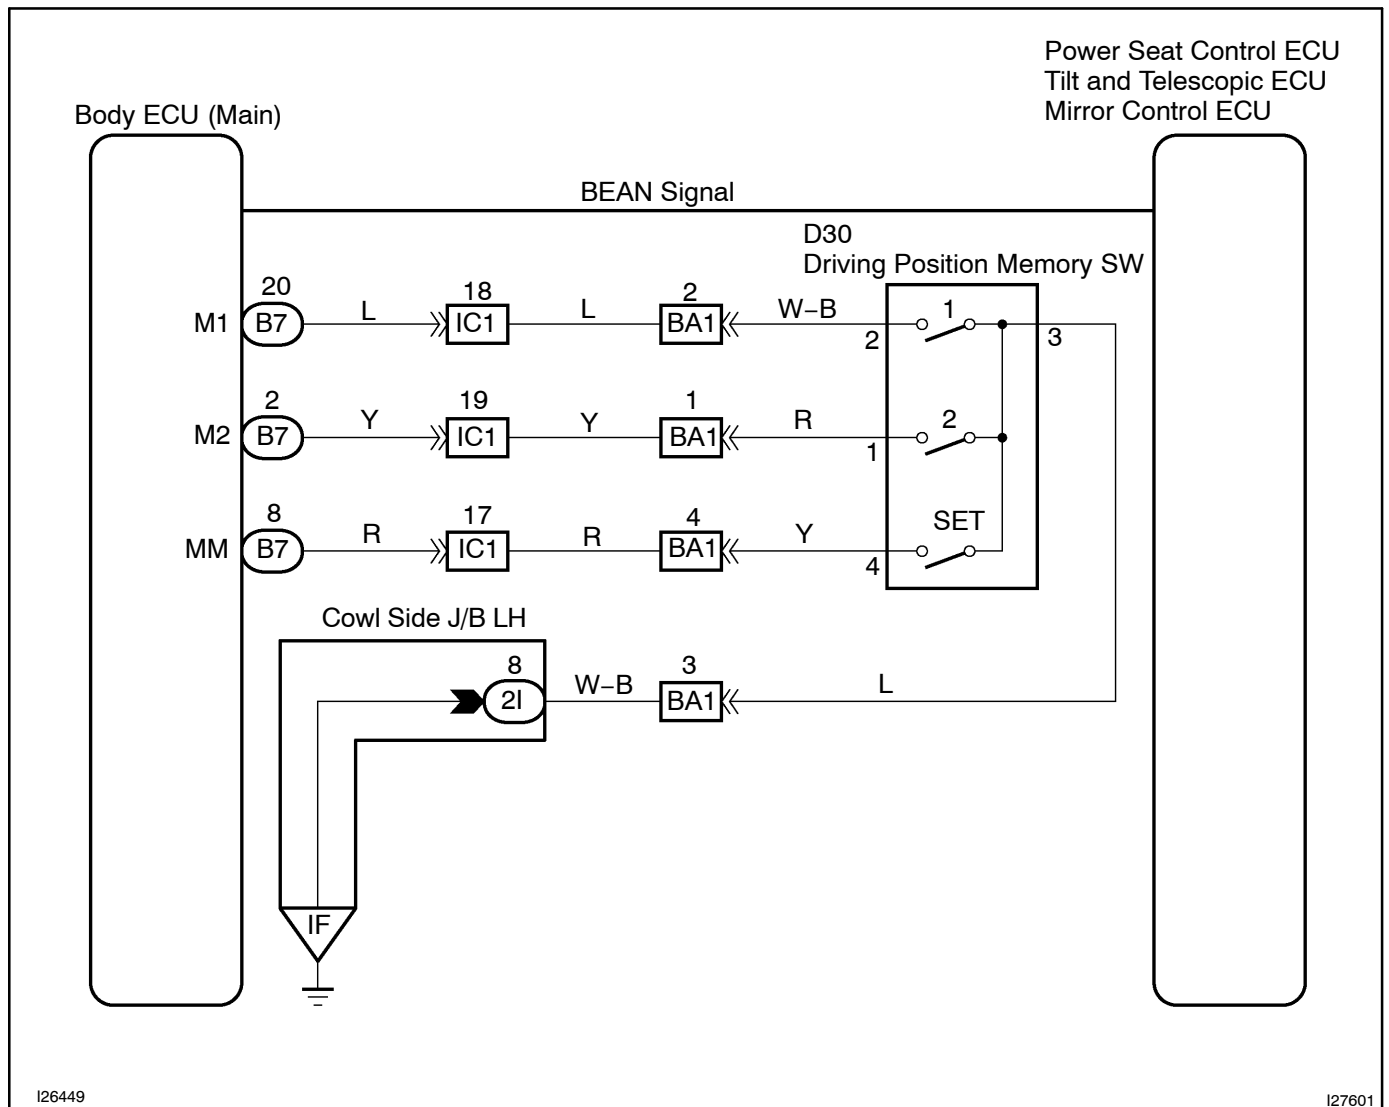

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check power seat memory switch using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the power seat memory switch operate in DATA LIST (See page [DI-1402](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).

NG

2	Check power seat memory switch (See page BE-142).
---	--

NG

Replace the power seat memory switch.

OK

3	Check wire harness and connector between power seat memory switch and Body ECU (Main) (See page IN-36).
---	--

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).