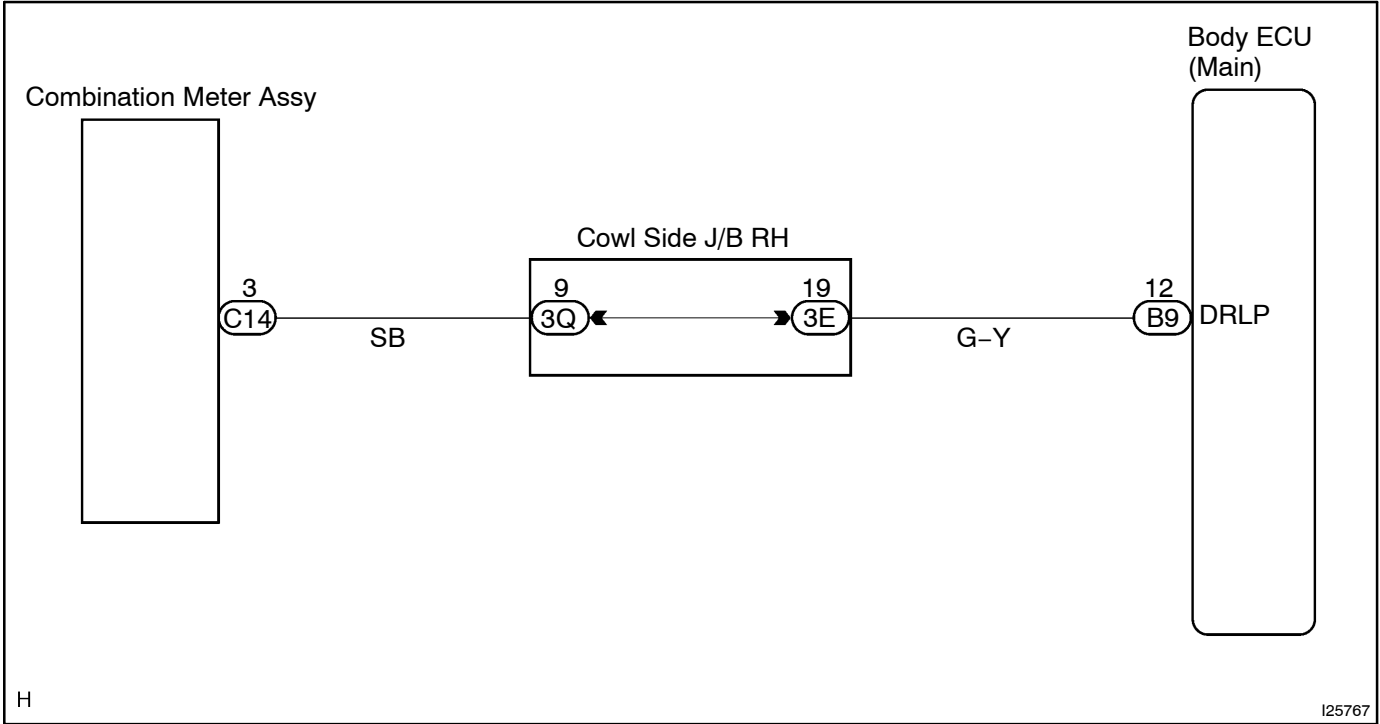


Open door warning light circuit

WIRING DIAGRAM



INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check open door warning light using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the open door warning light operate in ACTIVE TEST (See page [DI-1402](#)).

OK

 
Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).

NG

2	Check the combination meter circuit (See page BE-77).
---	--

NG

 
Replace the combination meter.

OK

3	Check wire harness and connector between combination meter and Body ECU (Main) (See page IN-36).
---	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-1408](#)).